OPERATING INSTRUCTIONS

Cinematic Series Remote Control Model: CMR

The CMR is an infrared remote control used to control the Chief automated mounts.

The control has a range of 20-30ft (6-9m), and is powered by 2 AAA batteries.

Control Identification

The following table identifies the remote control functions available for each model.

• = Used ----- = Not Used


KEY	FUNCTION	CM1	CM2	CM3	PXR
1	MOVE DISPLAY TO HOME	•			•
2	EXTEND DISPLAY	•			•
	RAISE DISPLAY		•		
3	MOVE DISPLAY LEFT	•		•	•
4	MOVE DISPLAY RIGHT	•		•	•
5	RETRACT DISPLAY	•			•
	LOWER DISPLAY		•		
6**	PRESET POSITION 1	•			•
7**	PRESET POSITION 2	•			•
8**	PRESET POSITION 3	•			•
9***	PRESET POSITION 4				•
10**	SAVE PRESET POSITION	•			•
11	STOP	•	•	•	•
12	TILT UP				•
13	TILT DOWN				•

^{**} The Model CM1 mount provides for the programming of up to three (3) preset mount positions.

To use the mount position preset feature:

- 1.) Move the mount to desired position using appropriate buttons on remote. (see table above)
- 2.) Press the "SAVE" button on remote to store mount preset.
- 3.) Press the desired "PRESETS" button on remote (1 through 4)
- 4.) Repeat steps 1 through 3 for each desired setting.

NOTE: Pressing the "HOME" button will return the mount to the the fully retracted (factory preset) position. The mount will retain all presets.

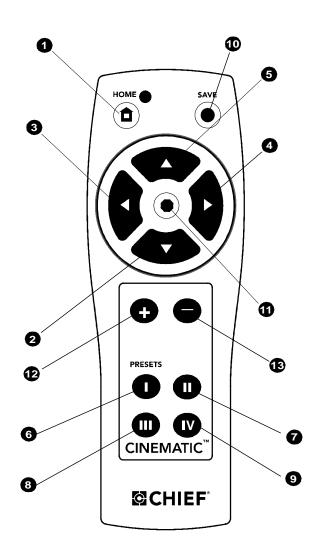

NOTE: If remote does not operate properly see the installation instructions provided with mount, or contact a Chief Customer Service Representative.



^{***} The Model PXR mount provides for the programming of up to four (4) preset mount positions.