



INSTALLATION MANUAL

Model FSI-003 Bracket for Sharp LC-121M2U & LC-150F1U

Read these instructions carefully and follow all steps in sequence.

COMPONENTS


A Interface Bracket



Do not make substitutions for components, fasteners or tools unless the Installation Manual specifically instructs you to do so.

FASTENERS

- a 8-32 x 3/16" button head screws
- b M4 x 20mm flat socket head screws

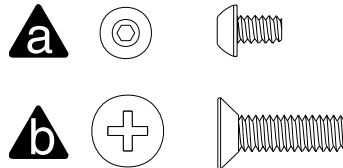

TOOLS FOR INSTALLATION


- 3/32" Hex Wrench
- Phillips Screwdriver - customer supplied

REMOVE STAND

1a. Using a Phillips screwdriver, remove the four Phillips head screws and the existing stand from the monitor.

**STEP
1**


1a

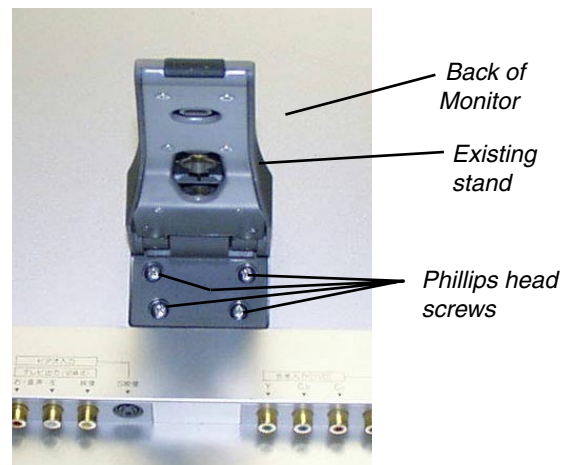

ATTACH INTERFACE BRACKET TO MONITOR

STEP
2

2a. Using the 3/32" hex wrench and the four M4 x 20 mm flat head socket screws, secure the Interface Bracket to the monitor.

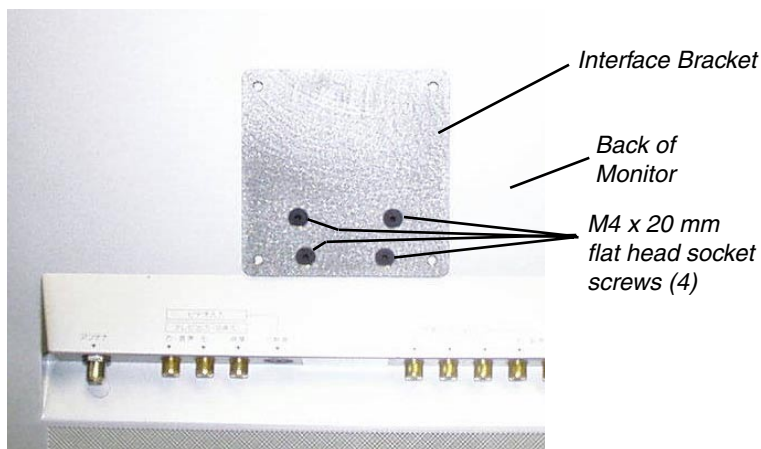


2a

ATTACH INTERFACE BRACKET AND MONITOR TO THE FLAT PANEL ARM

STEP
3

3a. Using a 3/32" hex wrench and the four 8-32 x 3/16" button head screws, secure the Interface Bracket and monitor to the Flat Panel Arm.

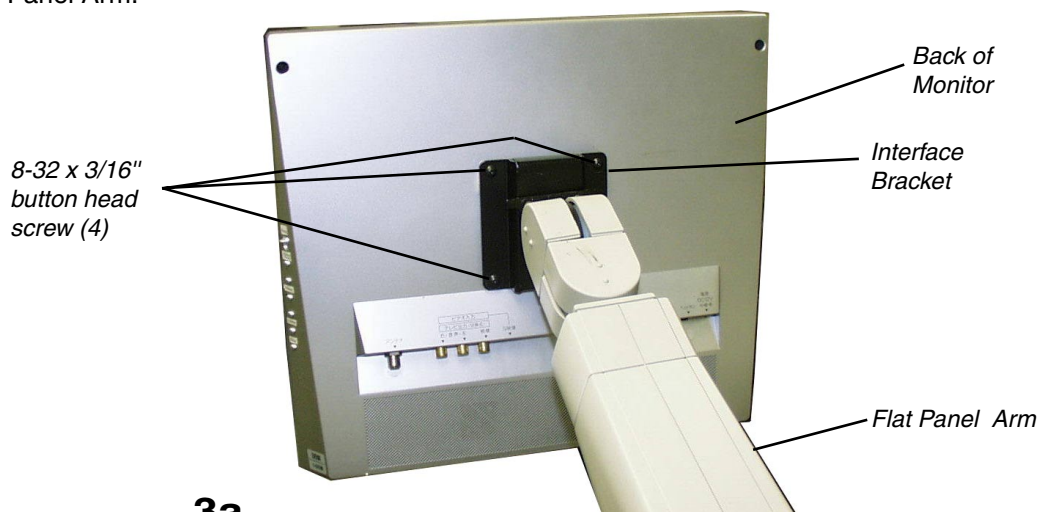

3a



Chief Manufacturing Inc.
12800 Hwy 13 S., Ste. 500
Savage, MN 55378 USA

Phone: 1-800-582-6480
Fax: 1-877-894-6918
www.chiefmfg.com