

# INSTALLATION INSTRUCTIONS

## LENS MOUNT GW-200

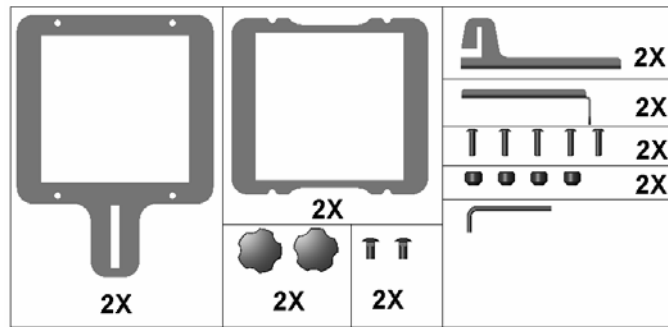


Figure 1

- (2) Front Lens Support
- (2) Rear Lens Support
- (4) Knobs
- (4) 1/4-20 Carriage Bolt

- (2) Outer Sleeve Bracket
- (2) Inner Sleeve Bracket
- (10) 10-24 Button Head Cap Screw
- (8) 10-24 Thumb Nuts
- (1) 1/8" Hex Key

**BEFORE PROCEEDING:** Unpack the carton, verify contents shown in Figure 1 and read installation instructions completely. If you are missing any of the listed components, please contact Customer Service at 1-800/582-6480.

1. Using 1/8" Hex Key, secure 5" x 5" lens (not included) between the Front and Rear Lens Support Brackets. (Fig. 2)
2. Assemble Lens Support Assembly to components as shown in Figure 3.
4. Slide Lens Mount into the opening in the front of the Projector Sacker Tray (not included). (Fig. 4)
5. Locate and align lens with projector lens and tighten Knobs. Using 1/8" Hex Key, secure Lens Mount to Stacker Tray with (1) Button Head Cap Screw. (Fig. 4)

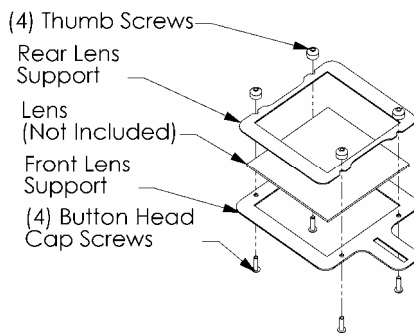


Figure 2

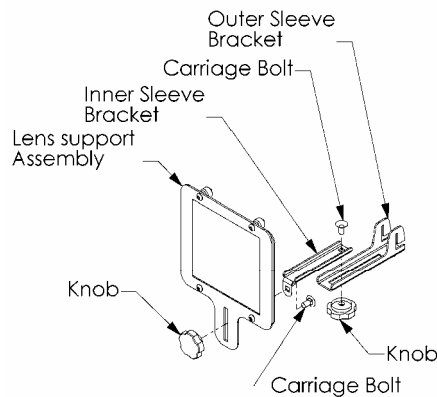


Figure 3

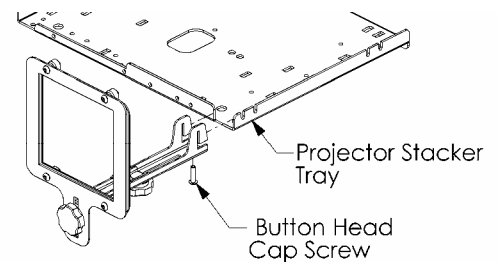


Figure 4



**CHIEF MANUFACTURING INC.**  
1-800-582-6480 952-894-6280 FAX 952-894-6918  
8401 EAGLE CREEK PKWY, STE. 700  
SAVAGE, MINNESOTA 55378 USA

8803-000052 REV. A  
2004 Chief Manufacturing  
[www.chiefmfg.com](http://www.chiefmfg.com)  
08/04