




## HB-20S VIDEO PROJECTOR HANGING BRACKET

The HB-20S Hanging Bracket is designed to attach Sony video projectors to the EVCm-100 Electric Ceiling Mount, VCM-20S Ceiling Mount or VCM-2C/3C Multiple Stacking System.

- Unpack and check contents:
- |   |                            |
|---|----------------------------|
| (1) Sony Mounting Bracket   | (8) #8 External Lockwasher |
| (3) 8mm x 65mm Hex Head Bolt  | (3) 8mm Split Lockwasher   |
| (8) M4-7 x 20mm Screw (Sony 722, 1020, 2020, 1030, 2030, 1040 only) | (3) 8mm Flatwasher         |
| (4) 5/16-18 Flange Nut (VCM-20S & VCM-2C/3C only)                   |                            |

### INSTALLATION INSTRUCTIONS FOR SONY 1270, 1271, 1251

1. Turn your projector upside down
2. With the “L” slots facing the rear of the projector, install the mounting bracket to the projector using the three 8mm x 65mm hex head bolts, 8mm split lockwashers and 8mm flatwashers. Tighten securely.
3. See EVCm-100, VCM-20S or VCM-2C/3C instructions for installing to mount.

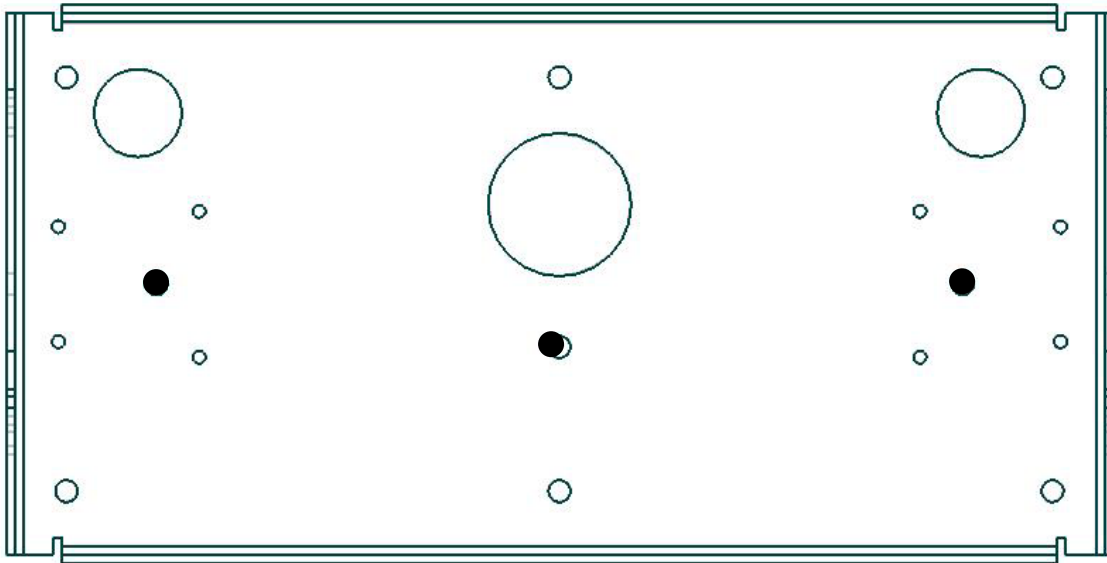

LENS THIS DIRECTION

- -For Sony 1270Q, 1271, 1251
- -For Sony 722, 1020, 2020, 1030, 2030, 1040

### INSTALLATION INSTRUCTIONS FOR SONY 722, 1020, 2020, 1030, 2030, 1040

1. Turn your projector upside down.
2. Remove the four screws and lockwashers that hold each flip-up bracket on the bottom of the projector.
3. With the “L” slots facing the rear of the projector line up the eight holes designated for your projector. Fasten the mounting bracket to the projector housing using the eight M4-7 screws and the eight #8 external lockwashers supplied with kit.
4. See EVCm-100, VCM-20S or VCM-2C/3C instructions for installing to the mount