

## LCD-210CI CEILING MOUNT FOR INFOCUS LITEPRO 210

The Chief LCD-210CI Ceiling Mount is designed for the InFocus LitePro 210 projector. The LCD-210CI can be attached with standard NPT 1½” pipe column or with Chief’s CMA-100, Adjustable Column & Ceiling Plate or CMA-110, Flat Ceiling Plate.

Unpack carton and check contents:

(1)	LCD-210CI Mount	(4)	# 10 Flat Washer
(1)	<sup>5</sup> / <sub>16</sub> -18 Set Screw	(1)	<sup>5</sup> / <sub>32</sub> ” Allen Wrench
(4)	10-32 x ½” PPH Screw	(1)	<sup>3</sup> / <sub>16</sub> ” Allen Wrench

**WARNING: IMPROPER INSTALLATION MAY RESULT IN SERIOUS PERSONAL INJURY!**  
All components must be securely fastened to each other and to the ceiling, **AND** the ceiling **MUST** be capable of supporting 4 times the suspended load of the unit you are using. If it cannot, the ceiling **MUST** be reinforced.

### INSTALLATION INSTRUCTIONS

1. The LCD-210CI Mount may be packed with the threaded collar in a downward position. After removing the mount from the carton, using the <sup>3</sup>/<sub>16</sub>” wrench, loosen the four allen head bolts, (see 2) and position the collar upward.
2. Attach the mount to your projector. Securely tighten all fasteners.
3. Install the LCD-210CI Mount to your method of ceiling support and tighten. Install the <sup>5</sup>/<sub>16</sub>-18 set screw into the threaded collar and tighten.

#### *TO ADJUST YAW:*

Loosen set screw (see 1) and turn collar to desired yaw; tighten set screw.

#### *TO ADJUST PITCH:*

Loosen the four allen head bolts (see 2) and adjust to desired pitch; tighten bolts.