


---

# INSTALLATION INSTRUCTIONS

---

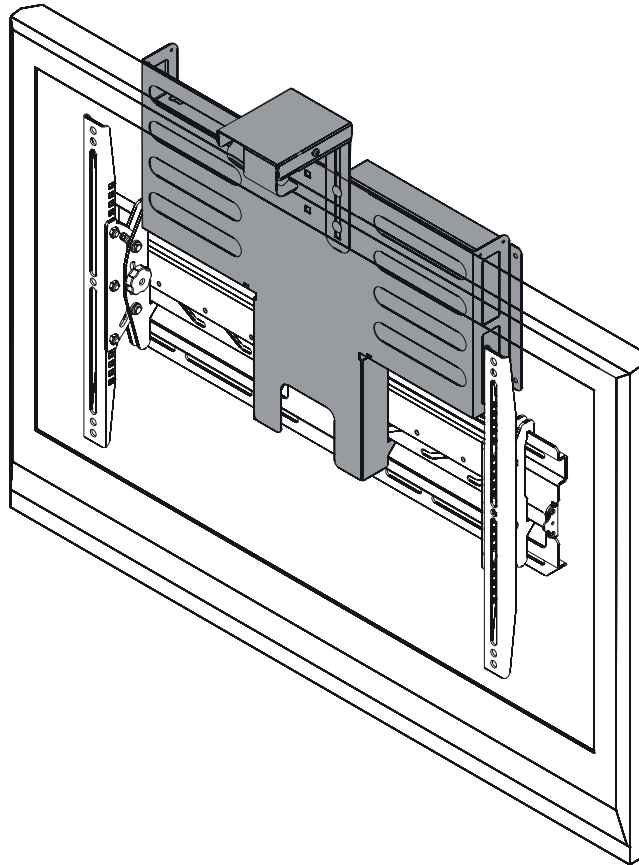

---

## CPU AND CAMERA MOUNT

---

## DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.

## IMPORTANT WARNINGS AND CAUTIONS!

**WARNING:** A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.


**CAUTION:** A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.

**WARNING:** Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.



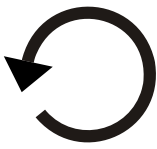






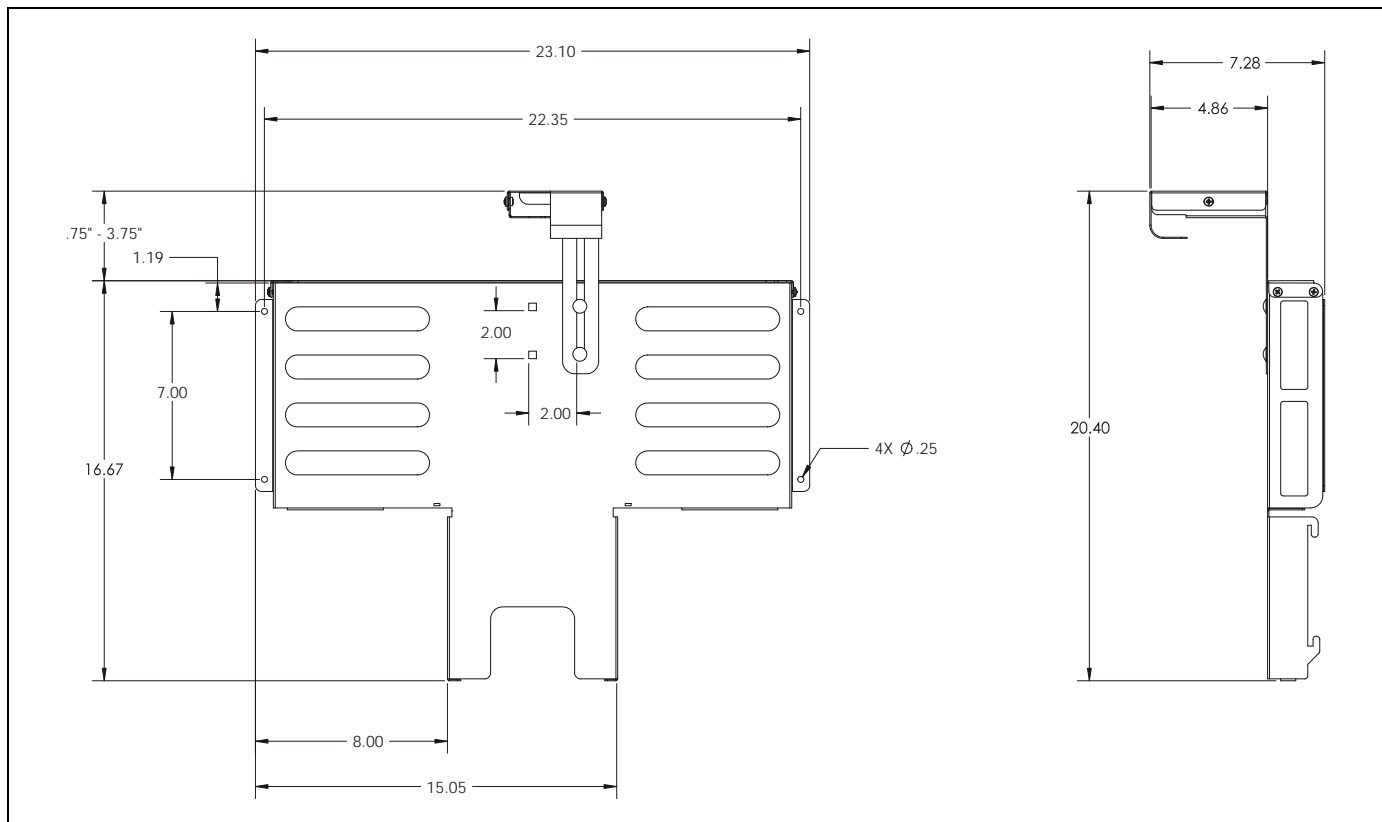


**WARNING:** Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.

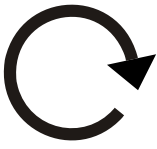**WARNING:** Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components installed within CPU Adapter does not exceed 20 lbs (9.07 kg).


## DIMENSIONS




**LEGEND**

	<p><b>Tighten Fastener</b></p> <p>Apretar elemento de fijación</p> <p>Befestigungsteil festziehen</p> <p>Apertar fixador</p> <p>Serrare il fissaggio</p> <p>Bevestiging vastdraaien</p> <p>Serrez les fixations</p>		<p><b>Pencil Mark</b></p> <p>Marcar con lápiz</p> <p>Stiftmarkierung</p> <p>Marcar com lápis</p> <p>Segno a matita</p> <p>Potloodmerkten</p> <p>Marquage au crayon</p>
	<p><b>Loosen Fastener</b></p> <p>Afajar elemento de fijación</p> <p>Befestigungsteil lösen</p> <p>Desapertar fixador</p> <p>Allentare il fissaggio</p> <p>Bevestiging losdraaien</p> <p>Desserrez les fixations</p>		<p><b>Drill Hole</b></p> <p>Perforar</p> <p>Bohrloch</p> <p>Fazer furo</p> <p>Praticare un foro</p> <p>Gat boren</p> <p>Percez un trou</p>
	<p><b>Phillips Screwdriver</b></p> <p>Destornillador Phillips</p> <p>Kreuzschlitzschraubendreher</p> <p>Chave de fendas Phillips</p> <p>Cacciavite a stella</p> <p>Kruiskopschroevendraaier</p> <p>Tournevis à pointe cruciforme</p>		<p><b>Adjust</b></p> <p>Ajustar</p> <p>Einstellen</p> <p>Ajustar</p> <p>Regolare</p> <p>Afstellen</p> <p>Ajuster</p>
	<p><b>Open-Ended Wrench</b></p> <p>Llave de boca</p> <p>Gabelschlüssel</p> <p>Chave de bocas</p> <p>Chiave a punte aperte</p> <p>Steeksleutel</p> <p>Clé à fourche</p>		<p><b>Remove</b></p> <p>Quitar</p> <p>Entfernen</p> <p>Remover</p> <p>Rimuovere</p> <p>Verwijderen</p> <p>Retirez</p>
	<p><b>By Hand</b></p> <p>A mano</p> <p>Von Hand</p> <p>Com a mão</p> <p>A mano</p> <p>Met de hand</p> <p>À la main</p>		<p><b>Optional</b></p> <p>Opcional</p> <p>Optional</p> <p>Opcional</p> <p>Opzionale</p> <p>Optie</p> <p>En option</p>
	<p><b>Hex-Head Wrench</b></p> <p>Llave de cabeza hexagonal</p> <p>Sechskantschlüssel</p> <p>Chave de cabeça sextavada</p> <p>Chiave esagonale</p> <p>Zeskantsleutel</p> <p>Clé à tête hexagonale</p>		<p><b>Security Wrench</b></p> <p>Llave de seguridad</p> <p>Sicherheitsschlüssel</p> <p>Chave de segurança</p> <p>Chiave di sicurezza</p> <p>Veiligheidsleutel</p> <p>Clé de sécurité</p>

### TOOLS REQUIRED FOR INSTALLATION

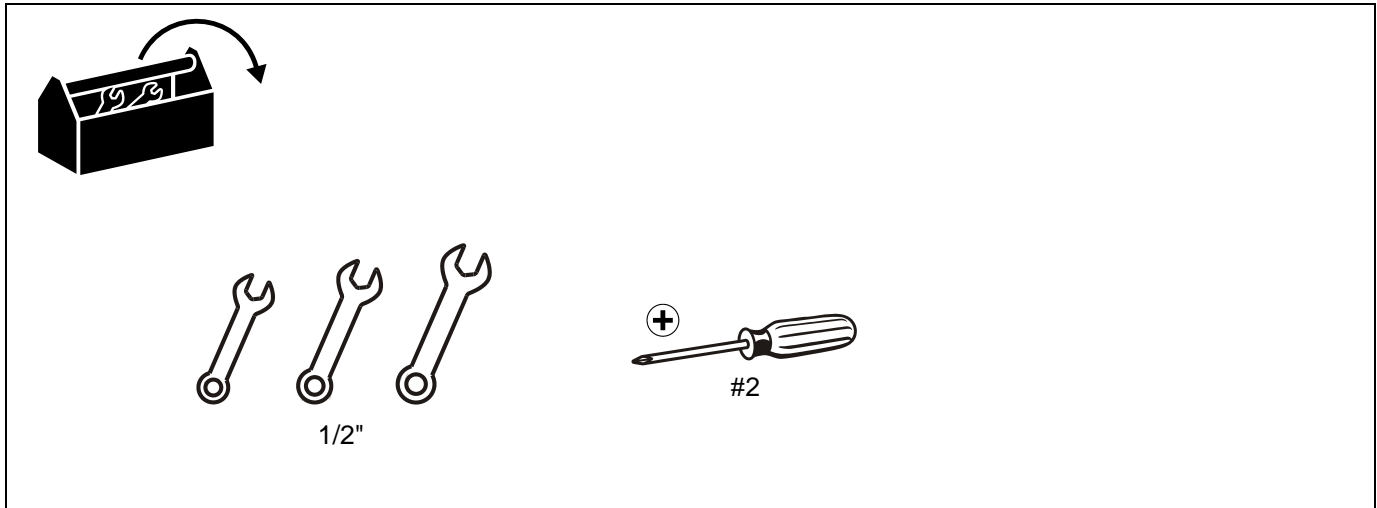

### PARTS

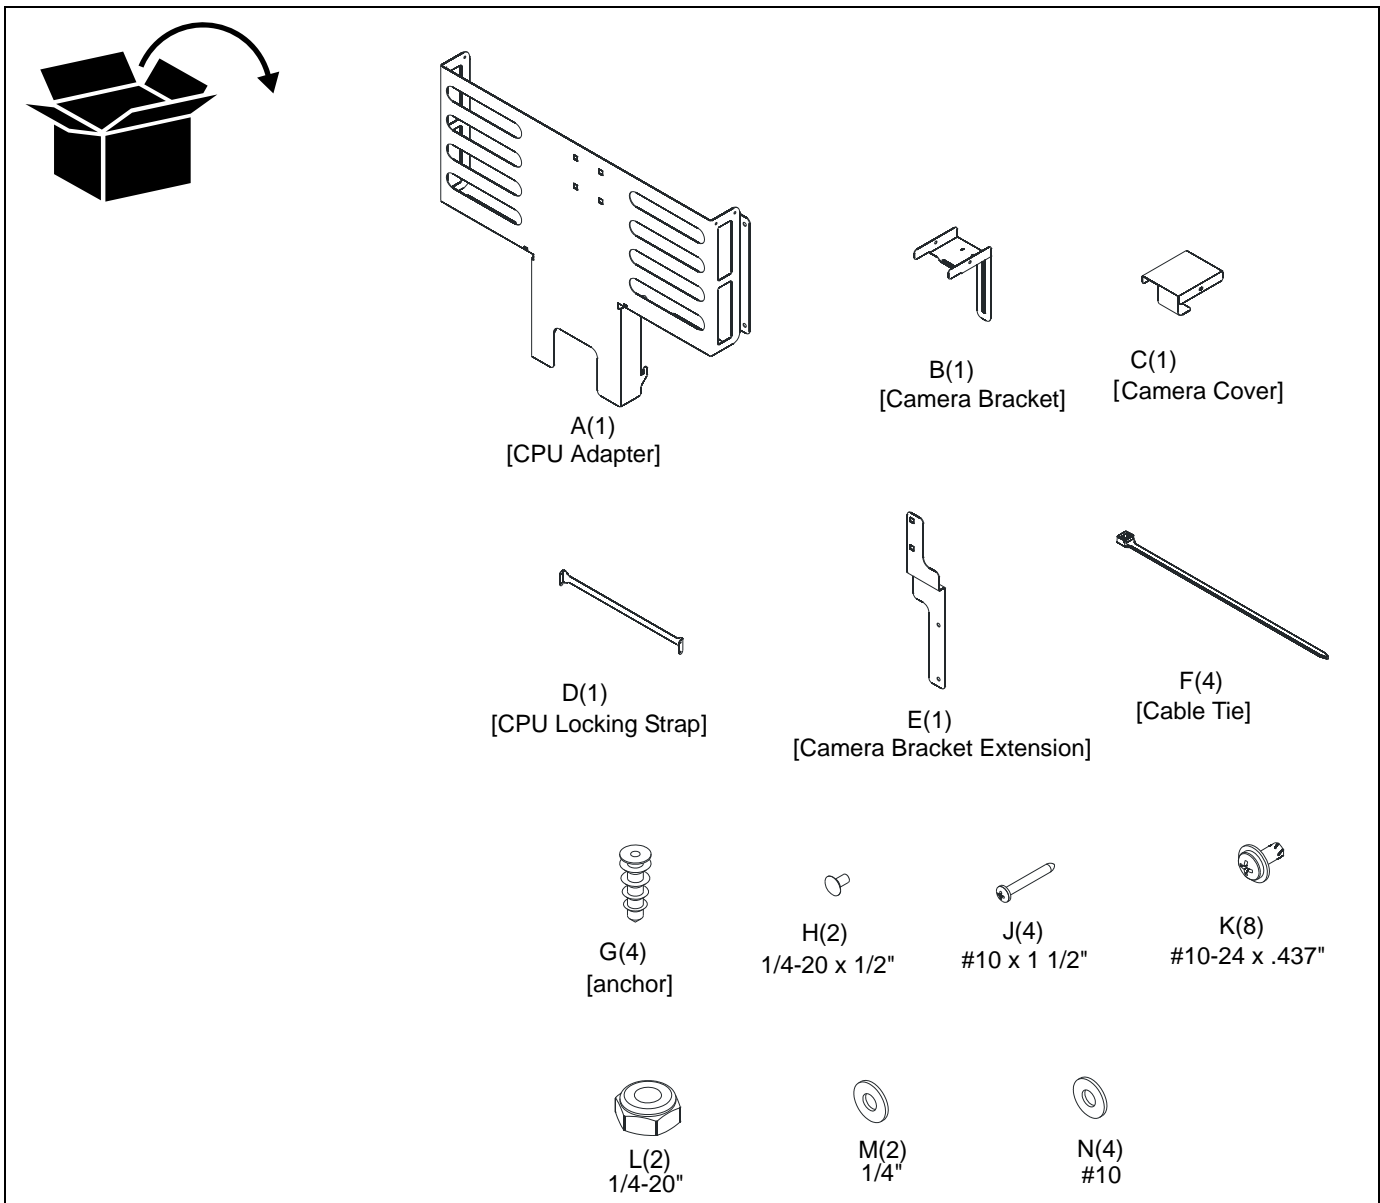

## Assembly And Installation

### Attach to RMT Wall Mount

1. Install RMT mount to wall according to RMT instruction manual.

**NOTE:** DO NOT attach display to RMT until MSP-AUTMAC has been installed.

2. Hang CPU adapter (A) onto upper RMT bracket using the upper hooks on the adapter. (See Figure 1)

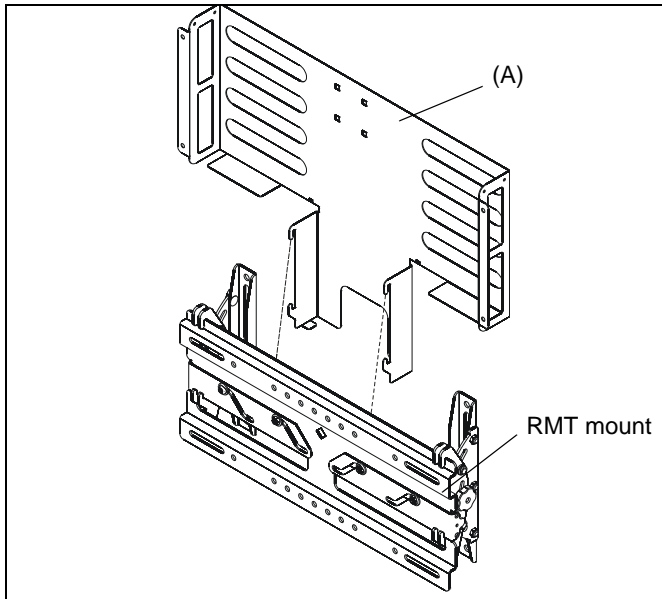


Figure 1

3. Slide lower hooks of CPU adapter underneath latch right bracket on RMT mount. (See Figure 2)

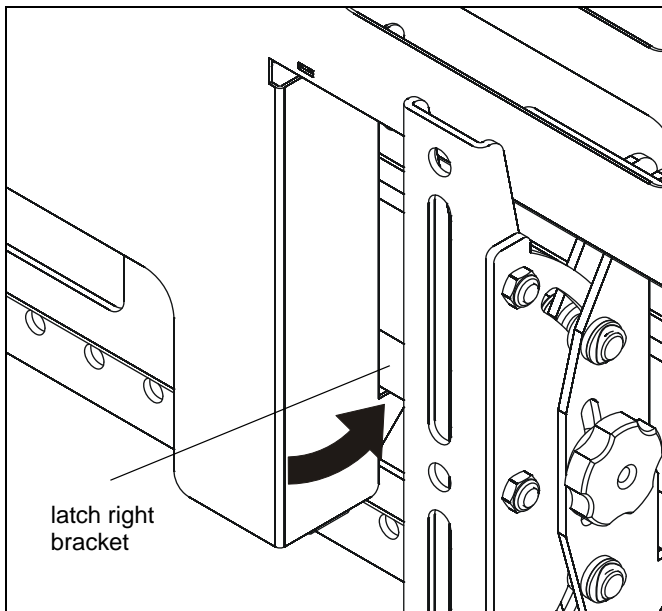


Figure 2

### Attach MSP-AUTMAC to Wall

**NOTE:** The MSP-AUTMAC may only be directly installed to a drywall surface if installing directly to the wall.



**WARNING:** ELECTRICAL SHOCK HAZARD! CUTTING OR DRILLING INTO ELECTRICAL CORDS OR CABLES CAN CAUSE DEATH OR SERIOUS PERSONAL INJURY! ALWAYS make certain area behind mounting surface is free of electrical wires and cables before drilling or installing fasteners.



**WARNING:** EXPLOSION AND FIRE HAZARD! CUTTING OR DRILLING INTO GAS PLUMBING CAN CAUSE DEATH OR SERIOUS PERSONAL INJURY! ALWAYS make certain area behind mounting surface is free of gas, water, waste, or any other plumbing before cutting, drilling, or installing fasteners.

1. Locate and mark the four mounting holes on the drywall using CPU adapter (A) as a template. (See Figure 3)

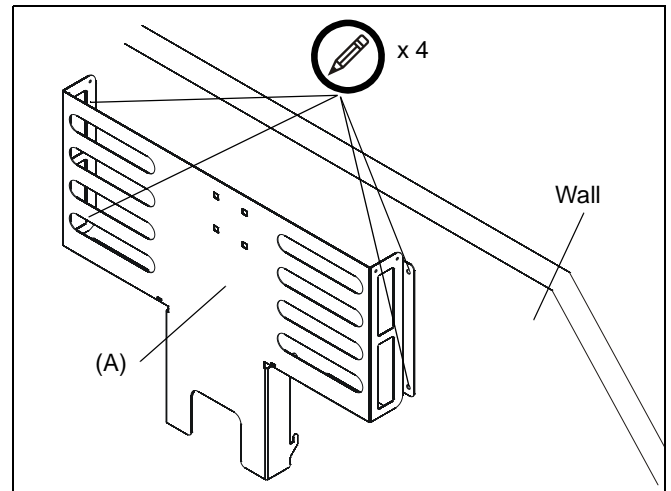


Figure 3



**CAUTION:** DO NOT OVERTIGHTEN! Overtightening lag bolts can damage CPU adapter.

2. Install anchors (G) into wall at marked locations using a Phillips screwdriver. (See Figure 4)

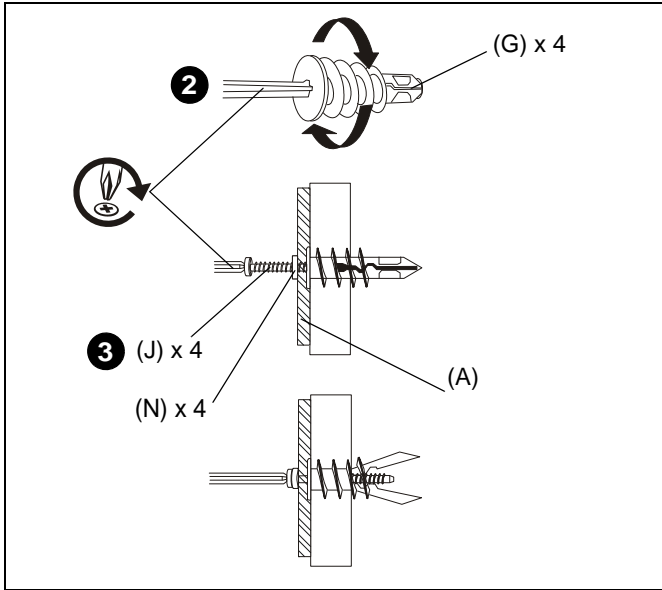


Figure 4

- Secure CPU adapter (A) to anchors in wall using four #10 x 1-1/2" Phillips head screws (J) and four #10 washers (N). (See Figure 4)

**Camera Mounting - Directly to CPU Adapter**

- Determine whether to mount camera bracket (B) through right or left set of holes in CPU adapter (A).
- Insert two 1/4-20 x 1/2" round head carriage bolts (H) through camera bracket (B) and CPU adapter holes, 1/4" washers (M) and into two 1/4-20" lock nuts (L). (See Figure 5)
- Use 1/2" wrench to tighten lock nuts until camera bracket is secured to CPU adapter. (See Figure 5)

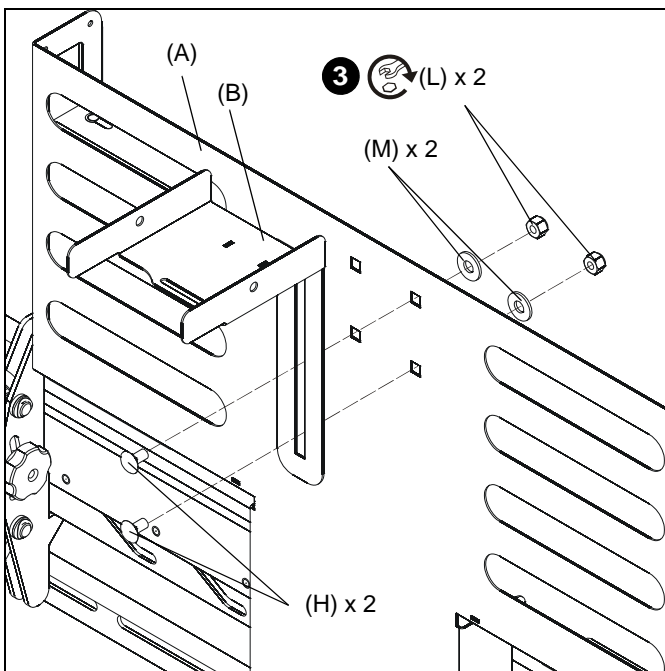


Figure 5

- Set Logitech camera on top of camera bracket (B). (See Figure 6)

**NOTE:** Camera can be secured to camera bracket by using cable ties (F).

- Place camera cover (C) on top of camera and camera bracket. (See Figure 6)

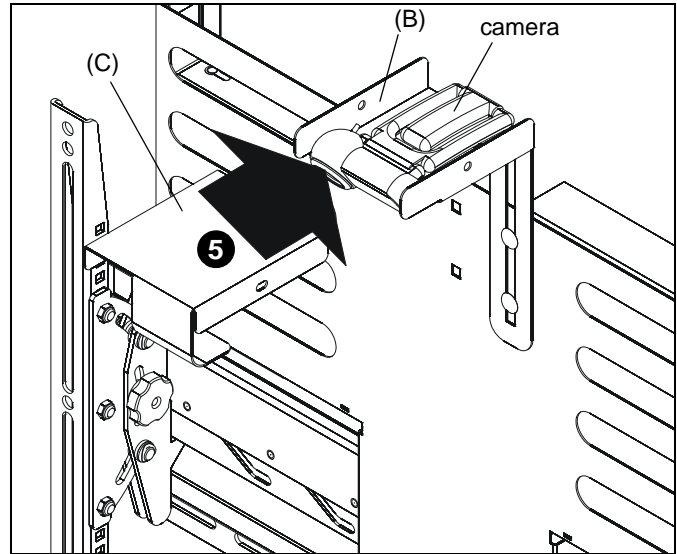


Figure 6

- Insert two #10-24 x .437" Phillips pan head sheet metal screws (K) through camera cover holes. (See Figure 7)


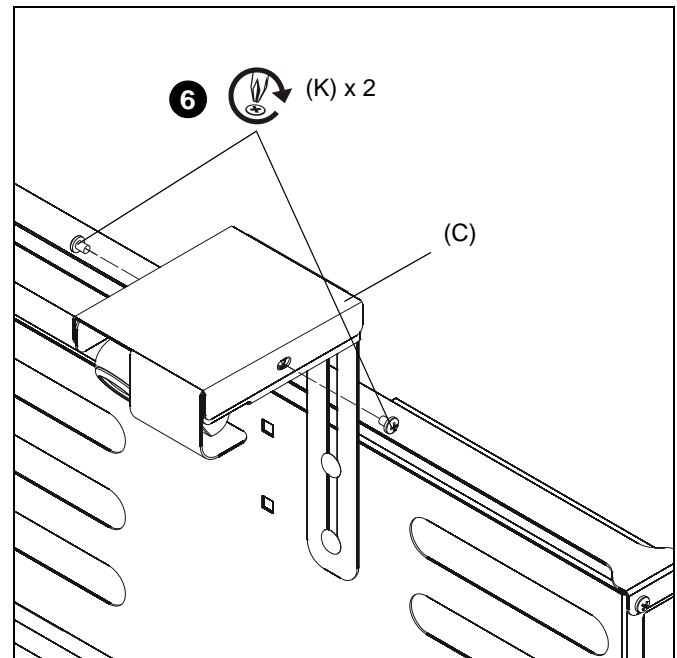


Figure 7

**Camera Mounting - to JWP mount**

- Install two #10-24 x .437" Phillips pan head sheet metal

screws (K) through camera extension bracket (E) and into JWP mount. (See Figure 8)

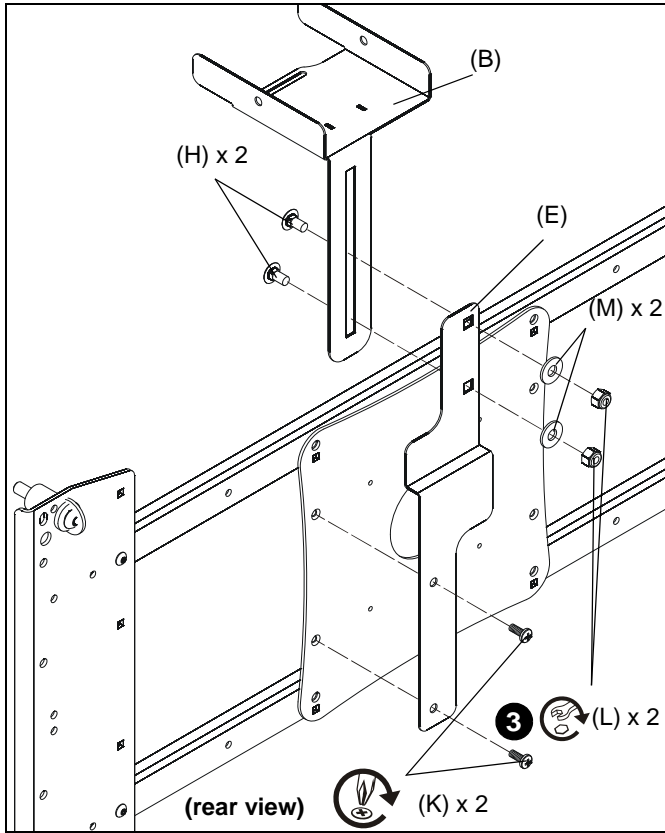


**Figure 8**

2. Insert two 1/4-20 x 1/2" round head carriage bolts (H) through camera bracket (B) and camera extension bracket (E) holes, 1/4" washers (M) and into two 1/4-20" lug nuts (L). (See Figure 9)
3. Use 1/2" wrench to tighten lug nuts until camera bracket is secured to camera extension bracket at the desired height. (See Figure 9)
4. Set Logitech camera on top of camera bracket (B). (See Figure 9)


**NOTE:** Camera can be secured to camera bracket by using cable ties (F).

5. Place camera cover (C) on top of camera and camera bracket. (See Figure 9)

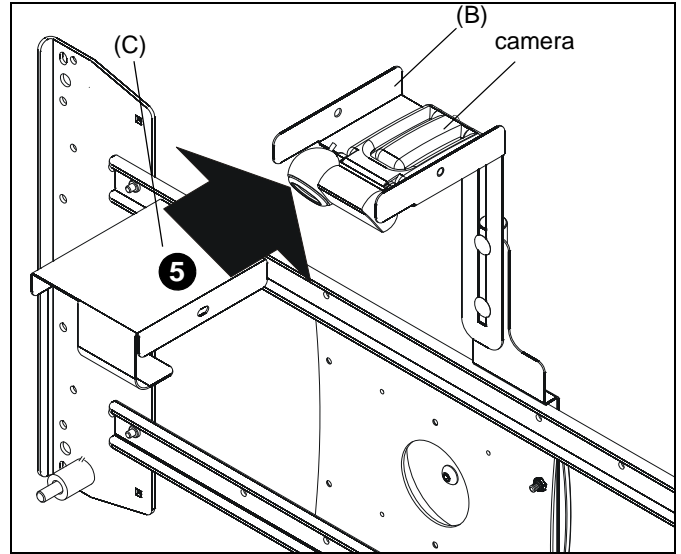

**Figure 9**


6. Insert two #10-24 x .437" Phillips pan head sheet metal screws (K) through camera bracket cover holes. (See Figure 10)

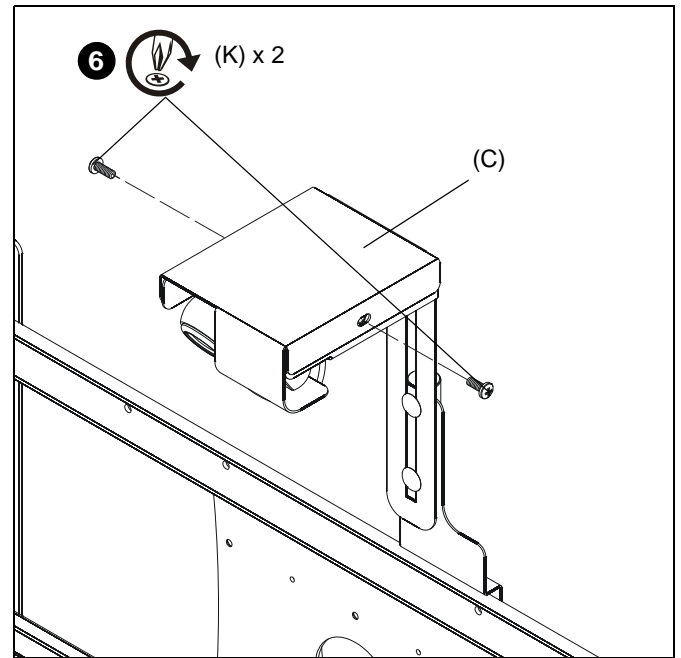

**Figure 10**


**CPU Installation**

1. Carefully insert any CPU components into CPU adapter. (See Figure 11)

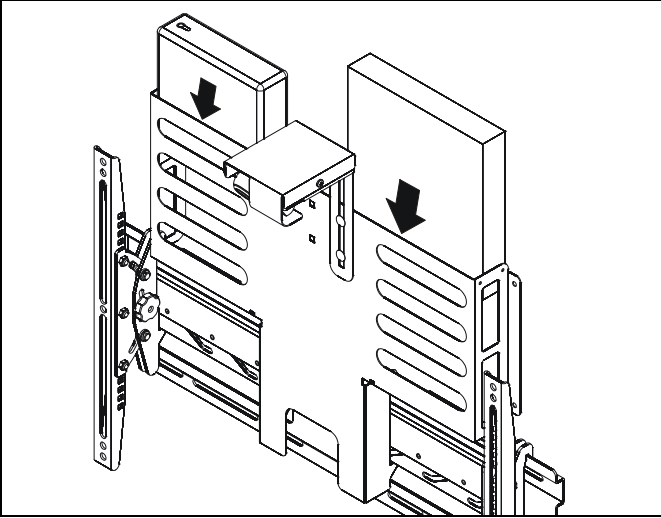

**Figure 11**

2. Position CPU locking strap (D) across top of CPU adapter (A). (See Figure 12)
3. Install four #10-24 x .437" Phillips pan head sheet metal screws (K) to secure CPU locking strap (D) to CPU adapter (A). (See Figure 12)

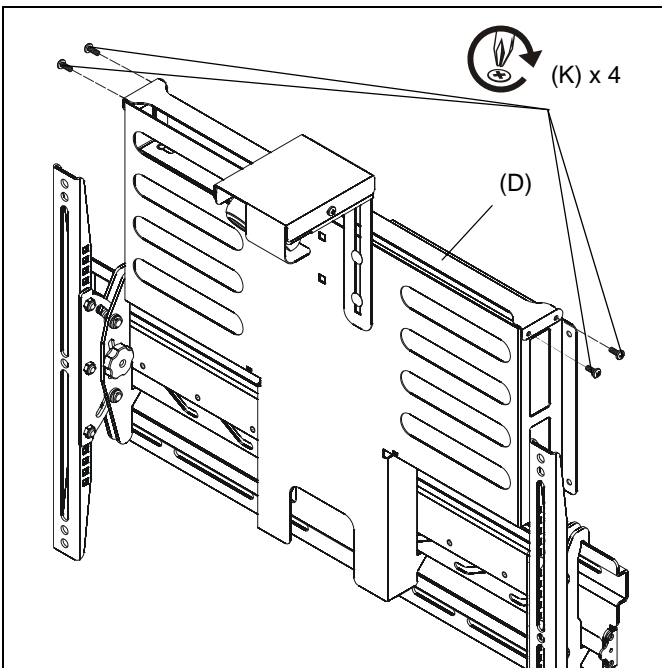

**Figure 12**

**NOTE:** CPU locking strap can be lifted to allow for CPU access by removing back two screws from CPU locking strap and lifting strap.

Refer to corresponding manual for display installation instructions.











Our Mounts. **Your Vision.**

Chief Manufacturing, a products division  
of Milestone AV Technologies

8832-002000

©2009 Milestone AV Technologies, a  
Duchossois Group Company

[www.chiefmfg.com](http://www.chiefmfg.com)

01/09

**USA/International**

**A** 8401 Eagle Creek Parkway, Savage, MN 55378

**P** 800.582.6480 / 952.894.6280

**F** 877.894.6918 / 952.894.6918

**Europe**

**A** Fellenoord 130 5611 ZB EINDHOVEN, The Netherlands

**P** +31 (0)40 2668620

**F** +31 (0)40 2668615

**Asia Pacific**

**A** Room 24F, Block D, Lily YinDu International Building

LuoGang, BuJi Town, Shenzhen, CHINA.

深圳市布吉罗岗村百合银都国际大厦D栋24F

**P** +86-755-8996 9226

**F** +86-755-8996 9217

