

INSTALLATION INSTRUCTIONS

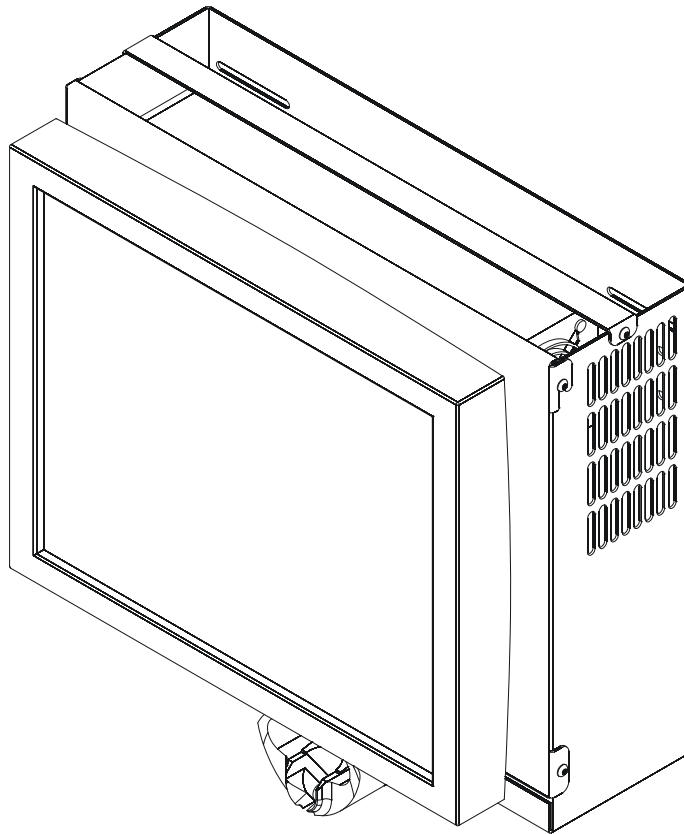

CPU WALL MOUNT BOX

DISCLAIMER

Milestone AV Technologies and its affiliated corporations and subsidiaries (collectively "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.

! IMPORTANT WARNINGS AND CAUTIONS!

! WARNING: A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

! CAUTION: A CAUTION alerts you to the possibility of damage or destruction of equipment if you do not follow the corresponding instructions.


! WARNING: Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

! WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.



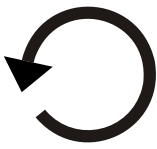






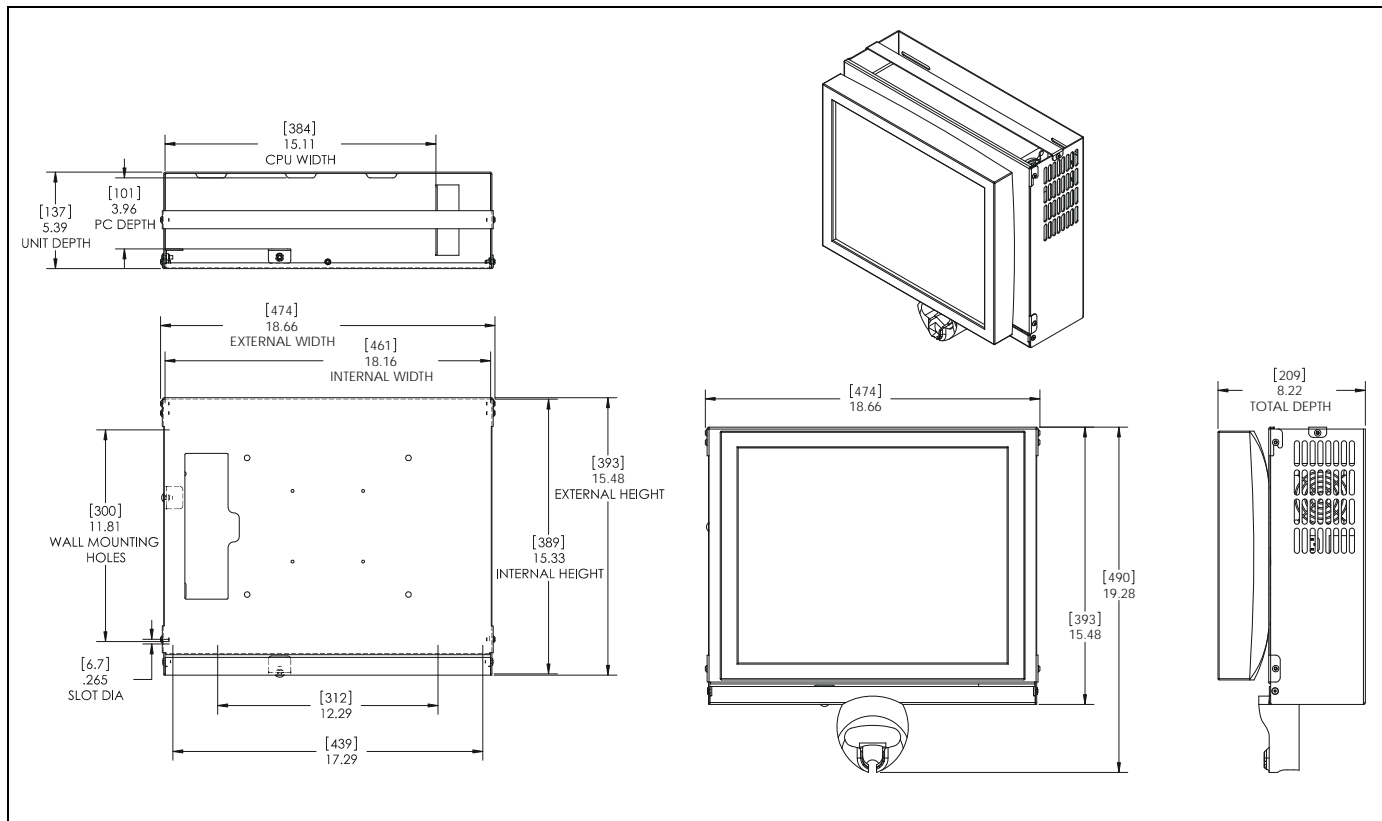


! WARNING: RISK OF ELECTRIC SHOCK ! Using the wrong screws could result in severe personal injury or damage to your display. Only use the screws provided to connect display to MSP-CSH1.

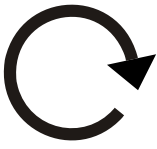! WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components installed within and attached to the MSP-CSH1 does not exceed 25 lbs (11.34 kg). The weight of the display attached to the MSP-CSH1 also cannot exceed 25 lbs (11.34 kg).


DIMENSIONS




LEGEND

	<p>Tighten Fastener Apretar elemento de fijación Befestigungsteil festziehen Apertar fixador Serrare il fissaggio Bevestiging vastdraaien Serrez les fixations</p>		<p>Pencil Mark Marcar con lápiz Stiftmarkierung Marcar com lápis Segno a matita Potloodmerkten Marquage au crayon</p>
	<p>Loosen Fastener Aflojar elemento de fijación Befestigungsteil lösen Desapertar fixador Allentare il fissaggio Bevestiging losdraaien Desserrez les fixations</p>		<p>Drill Hole Perforar Bohrloch Fazer furo Praticare un foro Gat boren Percez un trou</p>
	<p>Phillips Screwdriver Destornillador Phillips Kreuzschlitzschraubendreher Chave de fendas Phillips Cacciavite a stella Kruiskopschroevendraaier Tournevis à pointe cruciforme</p>		<p>Socket Wrench Llave de cubo Llave de cubo Chave de caixa Chiave a brugola Dopsleutel Clé à douilles</p>
	<p>Open-Ended Wrench Llave de boca Gabelschlüssel Chave de bocas Chiave a punte aperte Steeksleutel Clé à fourche</p>		<p>Remove Quitar Entfernen Remover Rimuovere Verwijderen Retirez</p>
	<p>By Hand A mano Von Hand Com a mão A mano Met de hand À la main</p>		<p>Optional Opcional Optional Opcional Opzionale Optie En option</p>
	<p>Hex-Head Wrench Llave de cabeza hexagonal Sechskantschlüssel Chave de cabeça sextavada Chiave esagonale Zeskantsleutel Clé à tête hexagonale</p>		<p>Security Wrench Llave de seguridad Sicherheitsschlüssel Chave de segurança Chiave di sicurezza Veiligheidsleutel Clé de sécurité</p>

TOOLS REQUIRED FOR INSTALLATION

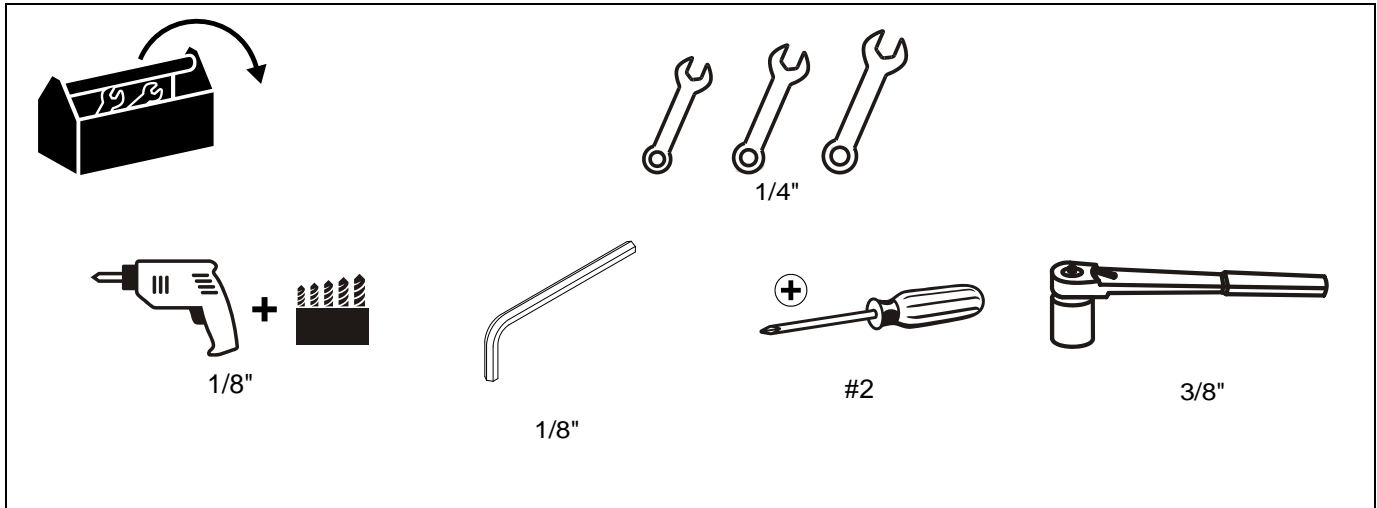

PARTS

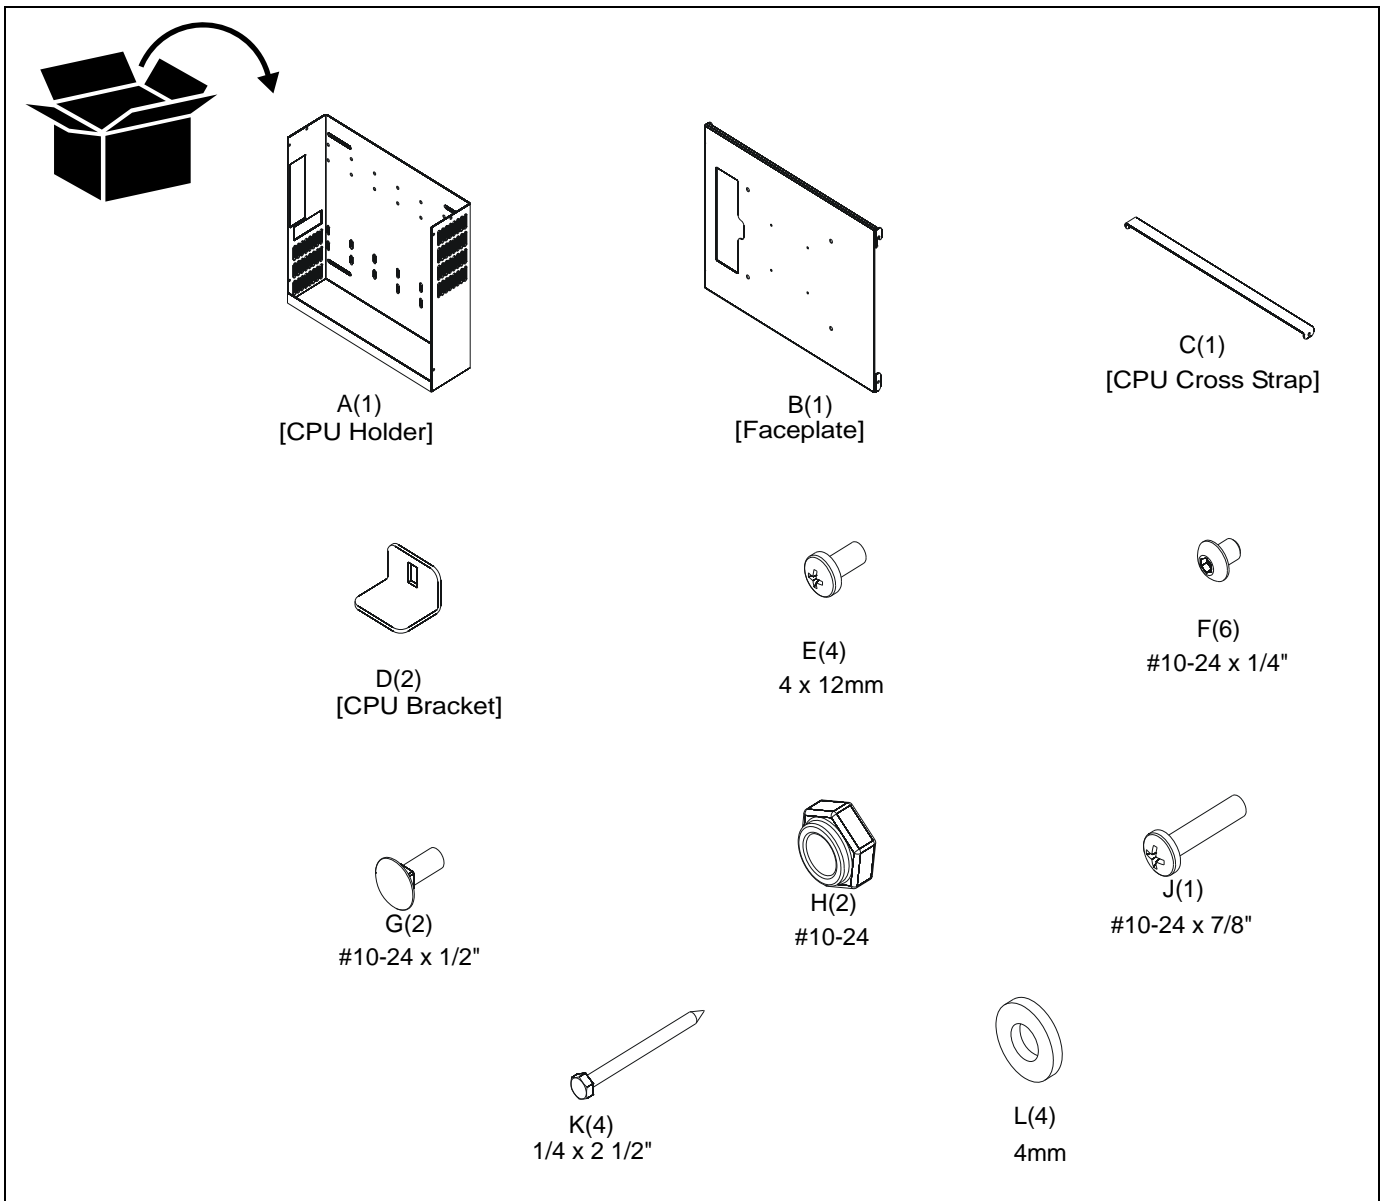

Assembly And Installation

Attach to Wall

NOTE: The MSP-CSH1 must be mounted to wood studs that are 16" apart.

1. Use stud finder to locate studs.
2. Using CPU holder (A) as a template, mark and drill four 1/8" holes in center of wood studs. (See Figure 1)
3. Install four 1/4 x 2 1/2" hex head lag screws (K) through CPU holder (A) and into drilled holes. (See Figure 1)

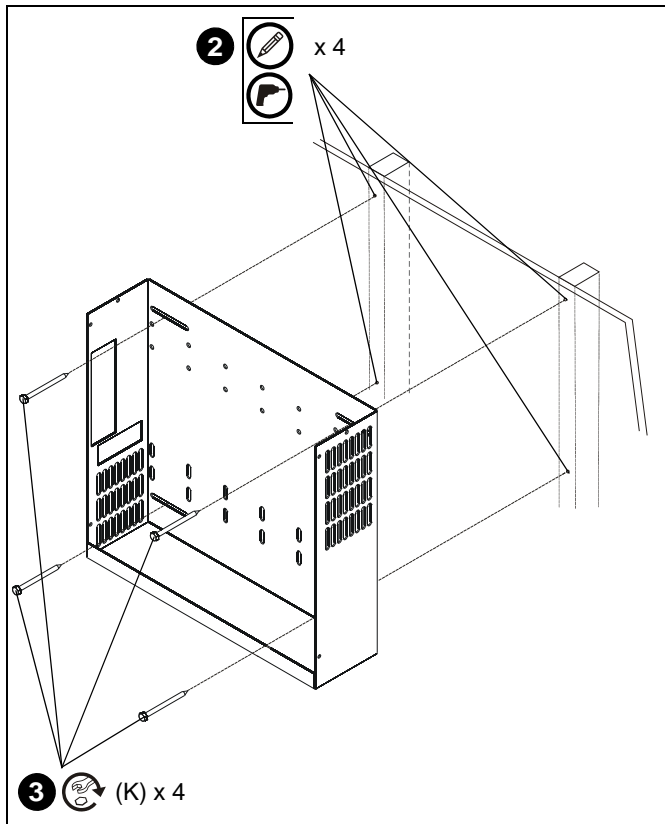


Figure 1

Install CPU

1. Gently set CPU within CPU holder (A) with cables on same side as cable management hole in CPU holder. (See Figure 2)
2. Use 3/8" socket wrench to install two #10-24 x 1/2" carriage screws (G) through CPU holder, CPU brackets (D) and into #10-24 Nylock nuts (H). (See Figure 2)

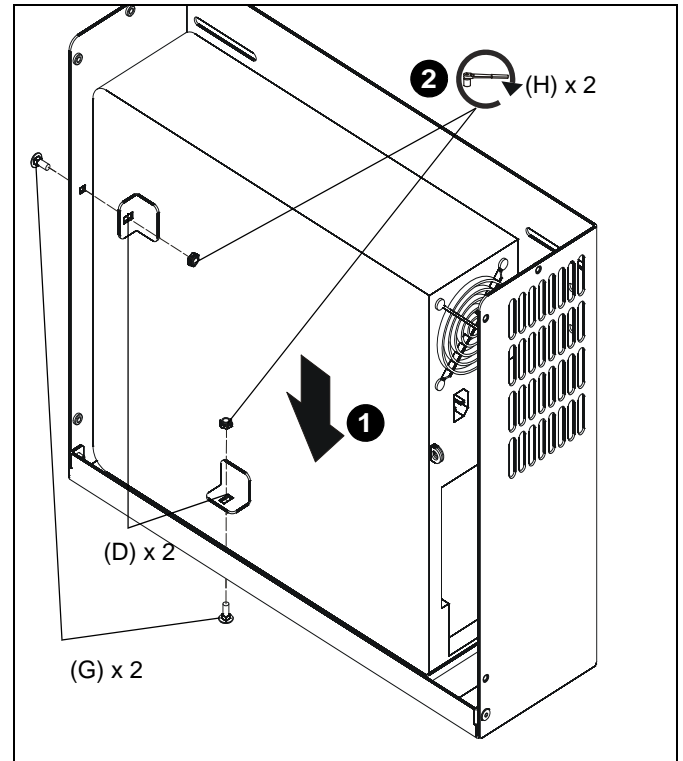


Figure 2

3. Place CPU cross strap (C) over CPU holder (A) lining up holes with top center holes on CPU holder. (See Figure 3)
4. Install two #10-24 x 1/4" button head cap screws (F) through CPU cross strap (C) and CPU holder (A). (See Figure 3)

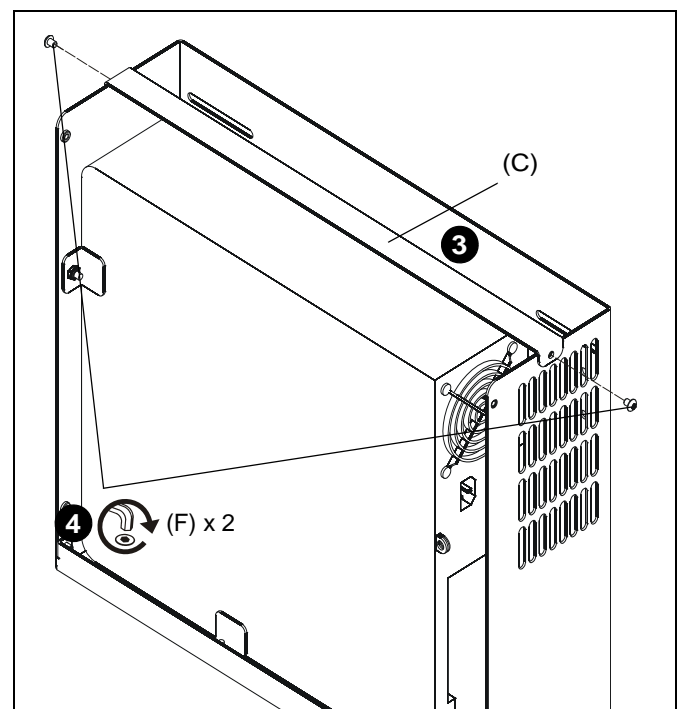


Figure 3

Attach Display to CPU Holder



WARNING: Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components installed within the MSP-CSH1 mount including the display does not exceed 50 lbs (22.68 kg).



WARNING: RISK OF ELECTRIC SHOCK ! Using the wrong screws could result in severe personal injury or damage to your display. Only use the screws provided to connect display to MSP-CSH1.

1. Lay display face side down on a level, non-abrasive surface. Lay down a cloth if necessary to avoid scratching the screen.
2. Lay faceplate (B) on top of display making sure the connector hooks are facing up and are the top of the display. Four elevated buttons on back of display should match up with four outer holes on faceplate. (See Figure 4)
3. Install four 4 x 12mm Phillips pan machine screws (E) through four 4mm flat washers (L), faceplate (B) and into back of the display. (See Figure 4)

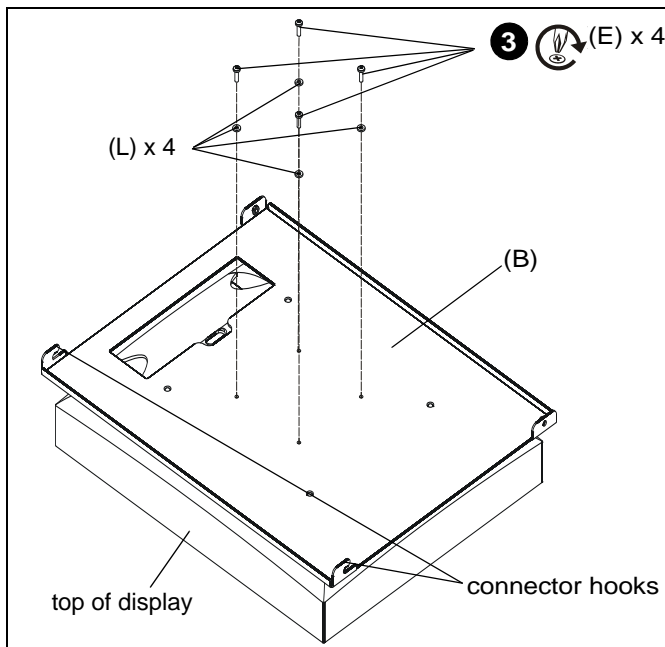


Figure 4

4. Partially install two #10-24 x 1/4" button head cap screws (F) through CPU holder (A) holes. **DO NOT FULLY TIGHTEN!** (See Figure 5)
5. Use connector hooks to hang display and faceplate (B) to CPU holder (A) on partially installed button head cap screws. (See Figure 5)

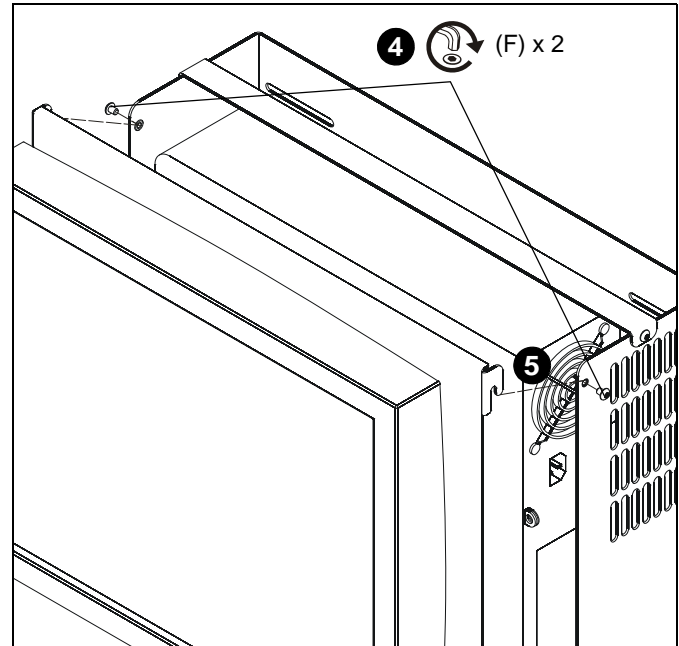


Figure 5

6. Install two #10-24 x 1/4" button head cap screws (F) through holes in faceplate (B) and CPU holder (A). (See Figure 6)
7. Tighten two button head cap screws that were partially installed in step #4 to fully secure faceplate to CPU holder.

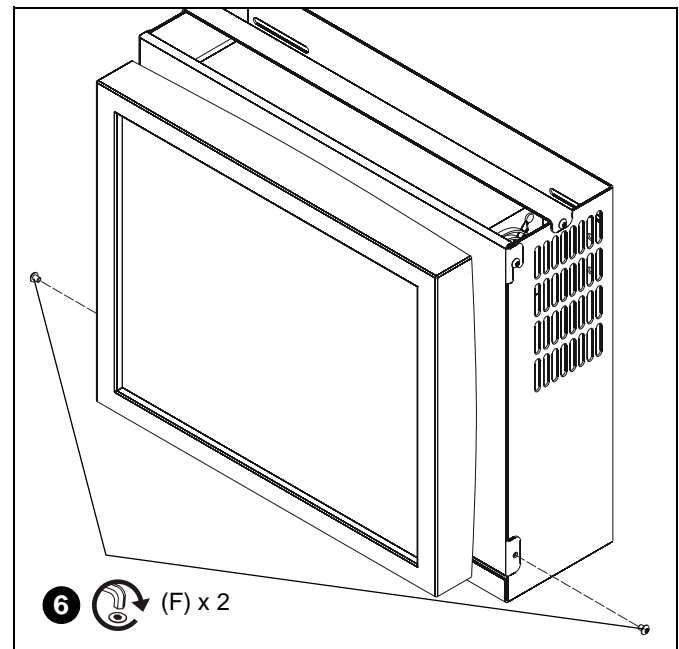


Figure 6

Holder Installation

1. Install #10-24 x 7/8" Phillips pan machine screws (J) through scanning device holder (not included) and into the hole in the bottom of CPU holder. (See Figure 7)

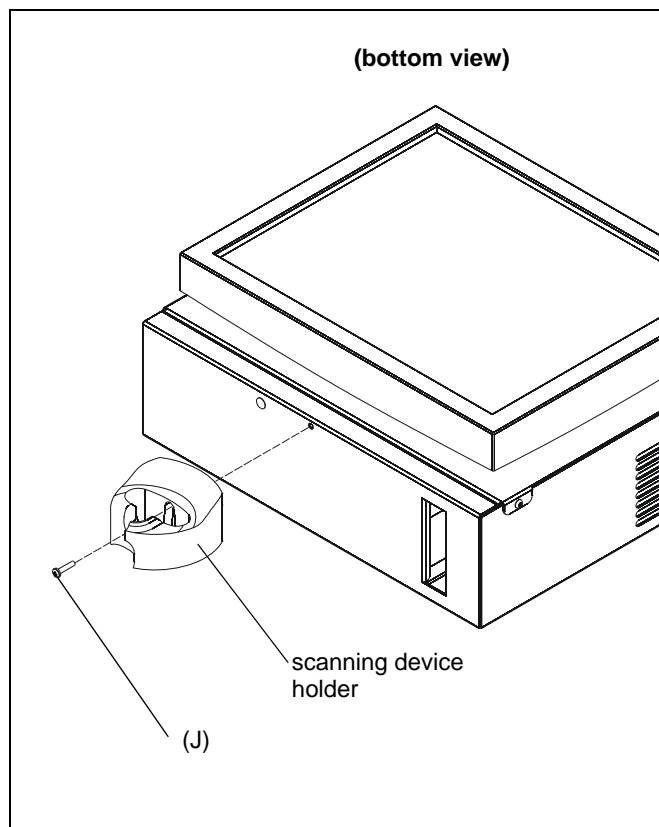


Figure 7



Our Mounts. **Your Vision.**

Chief Manufacturing, a products division
of Milestone AV Technologies

8832-002001 Rev01
©2009 Milestone AV Technologies, a
Duchossois Group Company
www.chiefmfg.com
02/09

USA/International A 8401 Eagle Creek Parkway, Savage, MN 55378
P 800.582.6480 / 952.894.6280
F 877.894.6918 / 952.894.6918

Europe A Fellenoord 130 5611 ZB EINDHOVEN, The Netherlands
P +31 (0)40 2668620
F +31 (0)40 2668615

Asia Pacific A Room 24F, Block D, Lily YinDu International Building
LuoGang, BuJi Town, Shenzhen, CHINA.
深圳市布吉罗岗村百合银都国际大厦D栋24F
P +86-755-8996 9226
F +86-755-8996 9217

