


---

# INSTALLATION INSTRUCTIONS

---

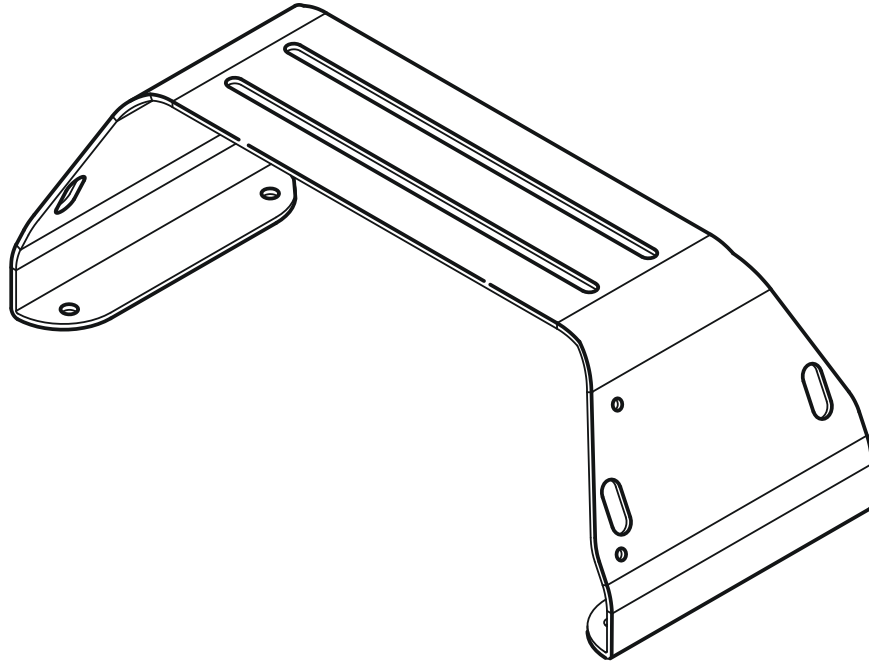

---

**Center Table Support Bracket**

---

**DISCLAIMER**

CSAV, Inc., and its affiliated corporations and subsidiaries (collectively, "CSAV"), intend to make this manual accurate and complete. However, CSAV makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. CSAV makes no representation of warranty, expressed or implied, regarding the information contained herein. CSAV assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

**! IMPORTANT WARNINGS AND CAUTIONS!**

**! WARNING:** A WARNING alerts you to the possibility of serious injury or death if you do not follow the instructions.

**! CAUTION:** A CAUTION alerts you to the possibility of


damage or destruction of equipment if you do not follow the corresponding instructions.

**! WARNING:** Failure to read, thoroughly understand, and follow all instructions can result in serious personal injury, damage to equipment, or voiding of factory warranty! It is the installer's responsibility to make sure all components are properly assembled and installed using the instructions provided.

**! WARNING:** Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.

**! WARNING:** Exceeding the weight capacity can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the combined weight of all components does not exceed 50 lbs (22.7 kg).

**DIMENSIONS**

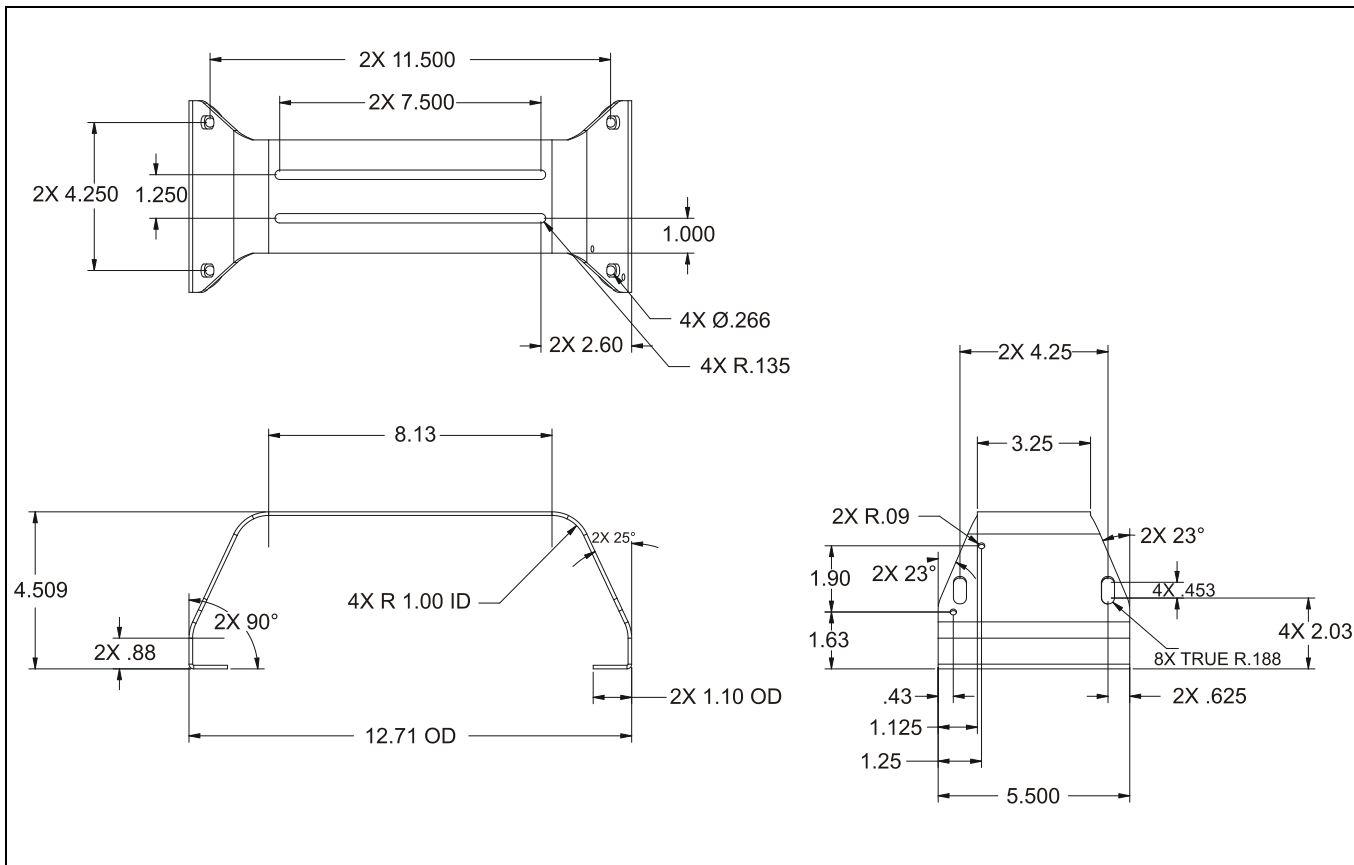

**LEGEND**

	<b>Tighten Fastener</b>
	Apretar elemento de fijación
	Befestigungsteil festziehen
	Apertar fixador
	Serrare il fissaggio
	Bevestiging vastdraaien
	Serrez les fixations

	<b>Pencil Mark</b>
	Marcar con lápiz
	Stiftmarkierung
	Marcar com lápis
	Segno a matita
	Potloodmerkten
	Marquage au crayon

	<b>Loosen Fastener</b>
	Aflojar elemento de fijación
	Befestigungsteil lösen
	Desapertar fixador
	Allentare il fissaggio
	Bevestiging losdraaien
	Desserrez les fixations

	<b>Drill Hole</b>
	Perforar
	Bohrloch
	Fazer furo
	Praticare un foro
	Gat boren
	Percez un trou

	<b>Phillips Screwdriver</b>
	Destornillador Phillips
	Kreuzschlitzschraubendreher
	Chave de fendas Phillips
	Cacciavite a stella
	Kruiskopschroevendraaier
	Tournevis à pointe cruciforme

	<b>Adjust</b>
	Ajustar
	Einstellen
	Ajustar
	Regolare
	Afstellen
	Ajuster

	<b>Open-Ended Wrench</b>
	Llave de boca
	Gabelschlüssel
	Chave de bocas
	Chiave a punta aperte
	Steeksleutel
	Clé à fourche

	<b>Remove</b>
	Quitar
	Entfernen
	Remover
	Rimuovere
	Verwijderen
	Retirez


	<b>By Hand</b>
	A mano
	Von Hand
	Com a mão
	A mano
	Met de hand
	À la main

	<b>Optional</b>
	Opcional
	Optional
	Opcional
	Opzionale
	Optie
	En option




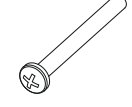
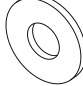


	<b>Hex-Head Wrench</b>
	Llave de cabeza hexagonal
	Sechskantschlüssel
	Chave de cabeça sextavada
	Chiave esagonale
	Zeskantsleutel
	Clé à tête hexagonale

	<b>Security Wrench</b>
	Llave de seguridad
	Sicherheitsschlüssel
	Chave de segurança
	Chiave di sicurezza
	Veiligheidsleutel
	Clé de sécurité

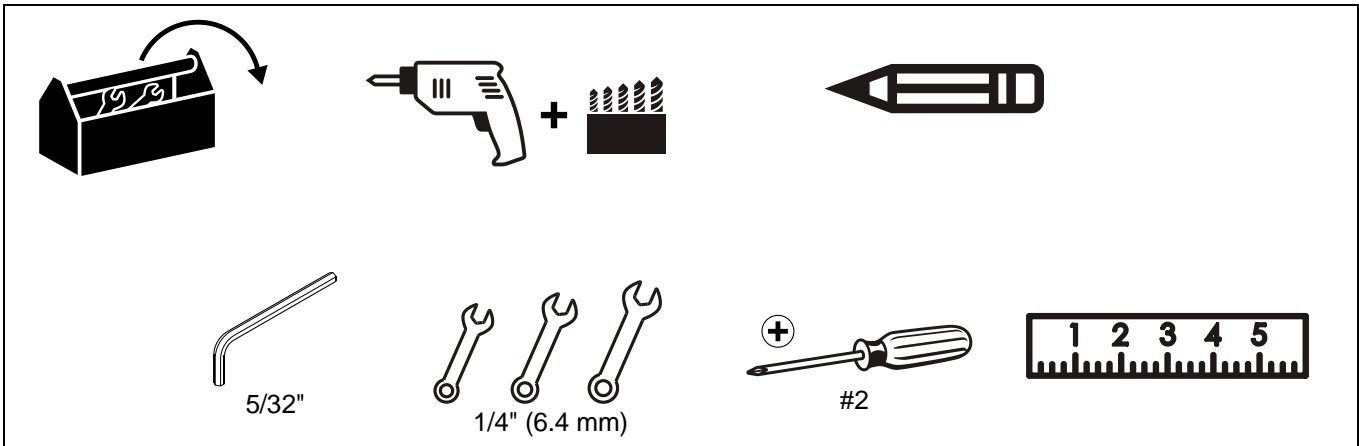**TOOLS REQUIRED FOR INSTALLATION**

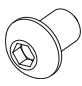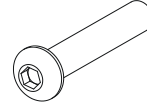

**PARTS**

							
	C (4) 1/4-20 X 3/8"	D (4) 1/4-20 X 1-1/2"	E (4) 1/4-20 X 1/2"	F (4) 1/4-20 X 2-1/2"	G (8)	H (4)	I (8)
RPA	----	----	4	4	4	----	8
RPM	4	4	----	----	4	4	----

## Assembly And Installation

### For RPA Models Only

1. Turn the table support bracket (A) on its side.
2. Attach RPA to table support bracket using four 1/4"-20 X1/2" (E) Phillips screws and four Nylock nuts (I). (See Figure 1)

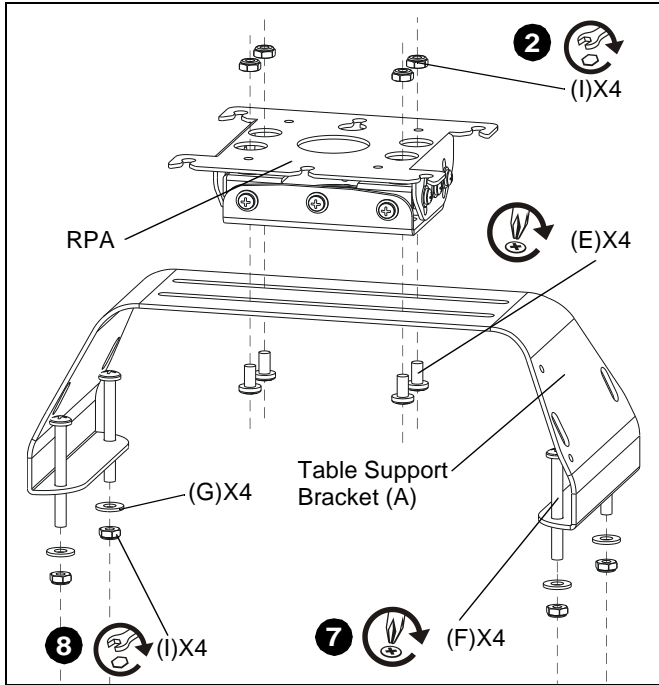


Figure 1

3. Turn the table support bracket upright on table and place in proper location.

**NOTE:** Attach projector to RPA. Turn on projector and line it up properly with the screen to ensure that the table support bracket is placed properly.

4. Mark the four mounting hole locations.
5. Drill four 1/4" holes.
6. Line up the table support bracket with the drilled holes.
7. Insert four 1/4"-20X2-1/2" (F) screws through the bracket and into the table holes.
8. Place one 1/4" flat washer (G) and one Nylock nut (I) onto each of the screws and tighten.

### For RPM Models Only

1. Place RPM on its top so that four screw holes are visible through the square in the RPM base. (See Figure 2)
2. Insert four 1/4"-20X1-1/2" (D) button head cap screws into the bottom of the RPM. (See Figure 2)

**NOTE:** The RPM base is not shown in Figure 2 for clarity only. It should NOT be removed for this installation process.

3. Place four nylon spacers (H) onto the screws as shown in Figure 2.

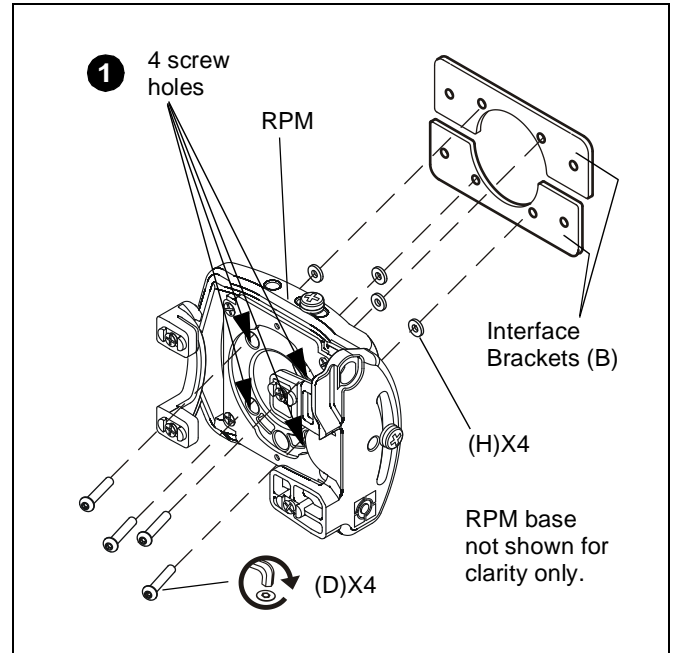


Figure 2

4. Tighten the screws through the nylon spacers and into the two interface brackets (B). (See Figure 2)
5. Turn the table support bracket (A) on its side.
6. Insert four 1/4"-20X3/8" (C) button head cap screws from the underside of the table support bracket. (See Figure 3)
7. Place a 1/4" flat washer (G) onto each screw.
8. Hold the RPM (with interface brackets attached) to the top of the table support bracket and tighten the screws through the washers and into the interface brackets.

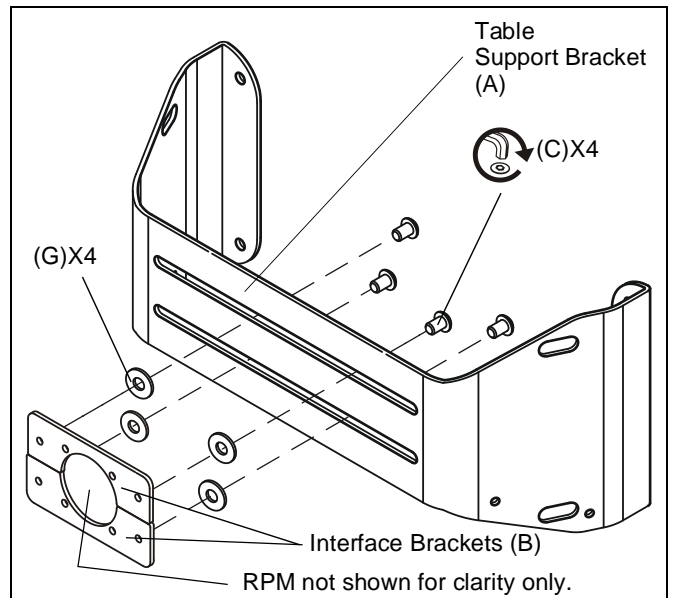


Figure 3

9. Proceed with Steps 3 through 8 under RPA Models section to complete the installation.



8802-000201 Rev.B  
©2006 Chief Manufacturing  
[www.chiefmfg.com](http://www.chiefmfg.com)  
11/06

<b>USA/International</b>	<b>A</b> 8401 Eagle Creek Parkway, Savage, MN 55378 <b>P</b> 800.582.6480 / 952.894.6280 <b>F</b> 877.894.6918 / 952.894.6918
<b>Europe</b>	<b>A</b> Fellenoord 130 5611 ZB EINDHOVEN, The Netherlands <b>P</b> +31 (0)40 2668620 <b>F</b> +31 (0)40 2668615
<b>Asia Pacific</b>	<b>A</b> Room 30I, Block D, Lily YinDu International Building LuoGang, BuJi Town, Shenzhen, CHINA. Post Code: 518112 深圳市布吉罗岗百合银都国际大厦D栋30I <b>P</b> +86-755-8996 9226 ; 8996 9236 ; 8996 9220 <b>F</b> +86-755-8996 9217