




INSTRUCTIONS FOR RTB

USING A SCREW DRIVER YOU CAN CHANGE THE SWIVEL DIRECTION ON YOUR ROTATING BASE. IF YOU WOULD LIKE TO CHANGE THE SWIVEL DIRECTION YOU MUST FIRST EXTEND THE PULL OUT SHELF. AFTER IT IS EXTENDED YOU THEN TURN THE UNIT OVER. YOU WILL SEE A SMALL SCREW MOUNTED INTO THE SWIVEL TOP. IF YOU JUST WANT TO CHANGE DIRECTION YOU REMOVE THE SCREW AND MOUNT IT INTO THE OTHER HOLE IN THE TOP. YOU CAN ALSO REMOVE THE SCREW AND ALLOW THE TOP TO ROTATE FREELY IN BOTH DIRECTIONS.

HOLES FOR SWIVEL STOP

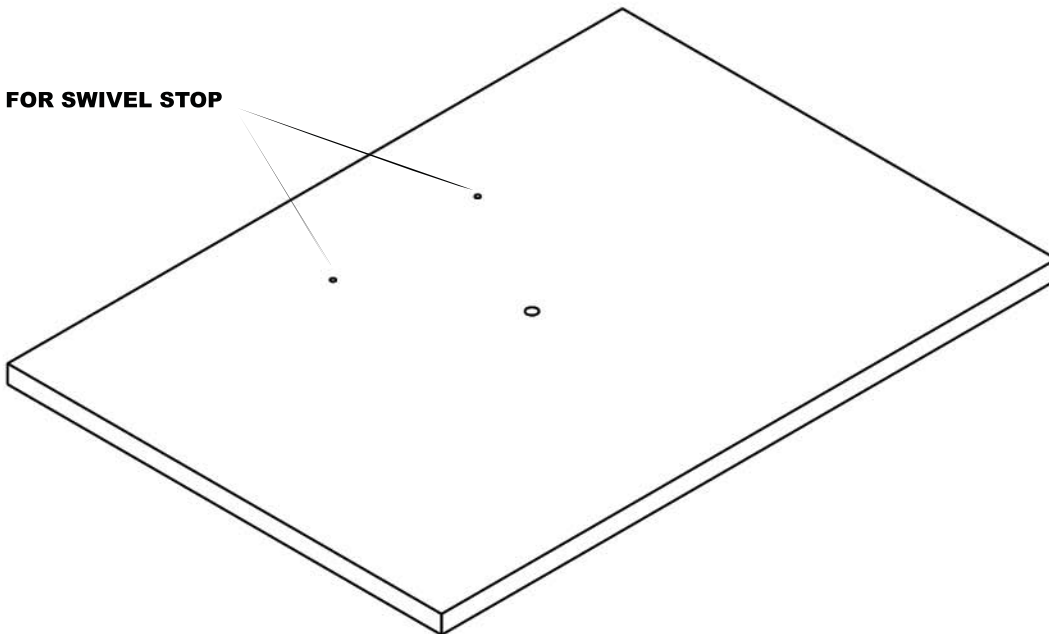

AFTER YOU HAVE ADJUSTED THE SWIVEL BASE, YOU ARE READY TO MOUNT THE UNIT. WITH THE UNIT EXTENDED TURN IT OVER AND MOUNT THE UNIT WITH THE SCREWS PROVIDED. MAKE SURE THE BASE IS MOUNTED WELL BEFORE USED.