



INSTALLATION INSTRUCTIONS SLB-011 HANGER BRACKET


for EIKI LC-SM1, LC-SM2, LC-XM1, LC-VM2, InFocus LP-260, Canon LV-5100, LV-5110, LV-7105, SANYO PLC-SW10, PLC-SW15, PLC-XW10, PLC-XW15, PLV-30, Boxlight SP-5t, SP-6t, XP-5t,

Prior to assembly, unpack carton and verify contents.

For security installation, use security hardware package inside the ALL-POINTS™ Security Kit. Follow the instructions below for attaching the bracket to the projector using either standard hardware or security hardware.

If you are missing any of the following components, please contact Customer Service at 1-800-582-6480

- | | | | |
|-----|--------------------|-----|-----------------|
| (1) | SLB-011 Bracket | (3) | M3 -12mm Screws |
| (4) | 10 - 24 Thumb Nuts | (3) | M3 Flatwashers |

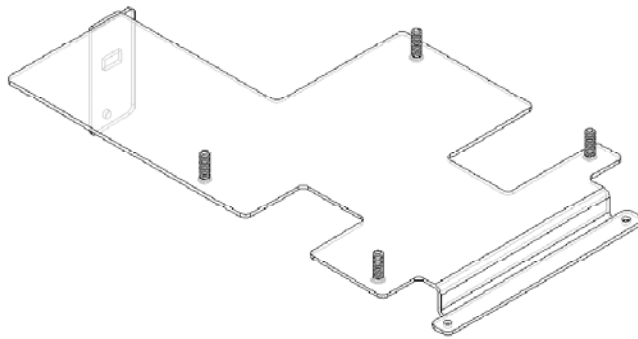

INSTALLATION INSTRUCTIONS

1. Turn projector upside down.
2. Remove the two screws on the bottom of the projector that are holding the front cover secure, now remove the screw located in the center of the back of the projector.
3. Place the SLB-011 bracket onto the bottom of the projector, Lining up the three mounting holes in the bracket with the three threaded inserts in the projector were you just removed the three screws.
4. Using the three M3 x 12mm screws and M3 flatwashers start them into the threaded inserts and secure the bracket to the projector. **CAUTION: When attaching the mount be careful not to overtighten screws.**
5. See RPA and/or Smart-Lift™ Instructions.