



INSTALLATION INSTRUCTIONS SLB-4800 HANGER BRACKET


for FUJITSU LPF-4800,

Prior to assembly, unpack carton and verify contents.

For security installation, use security hardware package inside the ALL-POINTS™ Security Kit. Follow the instructions below for attaching the bracket to the projector using either standard hardware or security hardware.

If you are missing any of the following components, please contact Customer Service at 1-800-582-6480

- | | | | |
|-----|------------------------------|-----|------------------|
| (1) | SLB-4800 Bracket | (2) | M4 - 20mm Screws |
| (4) | 10 - 24 Thumb Nuts | (2) | M4 - 12mm Screws |
| (2) | ½" x .194 x ½" Nylon Spacers | (4) | M4 Flatwashers |

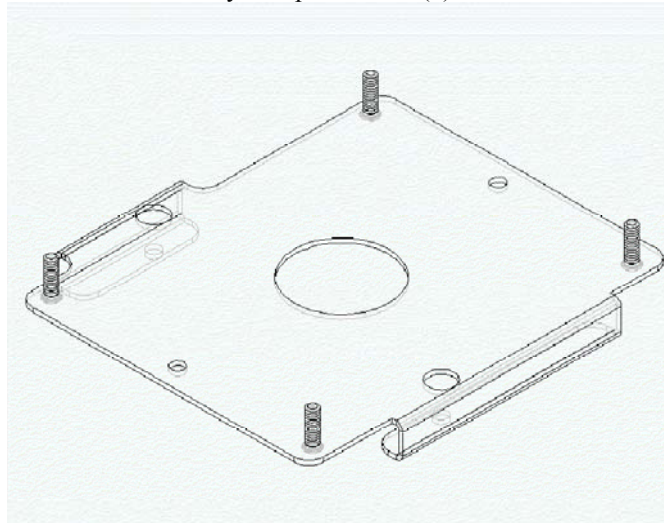

INSTALLATION INSTRUCTIONS

1. Turn projector upside down.
2. Place the SLB-4800 bracket on the bottom of the projector so all four holes in the bracket line-up with all four threaded inserts in the bottom of the projector.
3. Using the two M4 X 12mm screws and flatwashers start them into the front and rear threaded inserts of the projector and then slide the two ½ nylon spacers between the two side threaded inserts in the projector and the holes in the bracket.
4. Using the two M4 X 20mm screw and flatwashers place them through the holes in the bracket and start screwing them into the projector using your fingers, tighten all fasteners at this time, securing the bracket to the projector. **CAUTION: When attaching the mount be careful not to overtighten screws.**
5. See RPA and/or Smart-Lift™ Instructions.