



INSTALLATION INSTRUCTIONS SLB-557 HANGER BRACKET

for Panasonic PT-L557, 757, 758U, 759U, 759XU, 759VU,
Polaroid Polaview-240, ViewSonic PJ860

Prior to assembly, unpack carton and verify contents.

For security installation, use security hardware package inside the ALL-POINTS™ Security Kit. Follow the instructions below for attaching the bracket to the projector using either standard hardware or security hardware.

If you are missing any of the following components, please contact Customer Service at 1-800-582-6480

- | | | | |
|-----|-------------------------|-----|---------------------|
| (1) | SLB-557 Plate Fig. # 1 | (4) | Thumb Nuts |
| (1) | U-Form Bracket Fig. # 2 | (2) | #10 Flatwashers |
| (4) | Felt Squares (1" x 1") | (2) | 10 - 24 Nylock Nuts |
| (2) | M4 x 10mm | (2) | M4 Flatwashers |

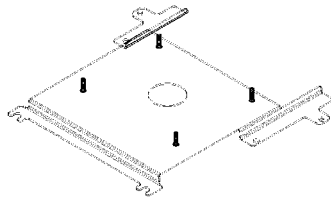


Fig. # 1



Fig. # 2

INSTALLATION INSTRUCTIONS

1. Turn projector upside down.
2. Raise the front adjustable feet and Place SLB-557 bracket on the projector so the front slots are around the adjustable feet and the two rear holes in the bracket are lined up with the inserts in the rear of the projector. Install the two M4 screws in the rear holes and tighten. Lower and snug the two front adjustable feet against the plate.
3. Attach the U-Form bracket around the projector and up through the holes in the SLB-557 plate, secure firmly using the two #10 flatwashers and 10-24 nylock nuts. **CAUTION: When attaching the mount be careful not to overtighten. NOTE: Felt squares are provided to protect projector shell, if desired. They can be attached to the projector or wrapped around the U-Form rod.**
3. See RPA/Smart-Lift™ Instructions.