



UPC-15 PROJECTOR BRACKET FOR Fujitsu LPF-8200

Unpack carton and check contents

- | | |
|----------------------|-----------------------|
| (1) RPA-000 | (6) 10-24 Thumb Nuts |
| (1) Hanging Bracket | (4) 10-24 Nylock Nuts |
| (1) Cradle Bracket | (4) # 10 Flat Washers |
| (2) M3 X 16mm Screws | (2) M3 Flatwashers |

Installation Instructions

RPA Plate and Cradle Assembly

1. Install bracket cradle by carefully sliding it from the rear of the projector and along its' edges forward until vertical edges of side cutouts in bracket line up with projector venting. Note! Cut out of cradle has to be matching clearance around sides, venting holes should match with projector.
2. Place hanging bracket on cradle studs, so it looks like the picture below.
3. Align four (4) outer, .25 diameter holes of hanging bracket with four (4) 10-24 by .5 inch long studs in the cradle. Install four (4) 10-24 nylock nuts with washers onto studs and tighten moderately.
4. Carefully turn the projector over making sure you place the unit on something so the treaded inserts in the bracket can not scratch any surfaces. Remove the two front philips screws in the front of the projector, line up the two holes in the bracket with the threaded inserts in the projector and install the two new M3 x 16mm screws and M3 washers provided with the bracket.
5. Review RPA instructions for final mounting. Caution! The Nylock nuts must be secured so the rubber bumpers are lightly squeezing against the projector so the projector can not fall out of the cradle bracket.

