



INSTALLATION INSTRUCTIONS

PSB-2220

PLASMA DISPLAY MOUNTING BRACKET

Prior to assembly, unpack carton completely and verify contents.

If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

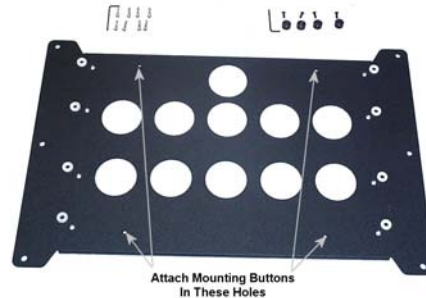


Figure 1

- | | |
|--------------------------------------|--|
| (1) Plasma Static Mount Bracket | (8) .75 OD x .266 ID x .3125 Nylon Spacers |
| (4) Mounting Buttons | (4) 10-24 Button head Cap Screws |
| (8) M5 x 25mm Button Head Cap Screws | (1) 1/8" Allen Key |
| (1) 3mm Allen Key | |

BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

CAUTION! PLASMA DISPLAYS ARE EXTREMELY FRAGILE.

1. Using a 10-24 button head cap screw inserted from back side of bracket, secure mounting button, with chamfered hole of mounting button (larger surface) facing bracket to bracket (four places). (see Figure 1, Figure 2 and Figure 3).
2. Place Nylon spacers on mounting holes and align hole pattern on brackets with pattern on back of display (see Figure 4) with the bent lip of the bracket towards the display. Attach bracket using the M5 button head cap screws, ensuring not to over-tighten. (*Note: Some displays may only use the four corner holes*)
3. With the aid of another person, lift your display up to the Chief Mount, aligning buttons of mounting brackets with slots in the Chief Mount.
4. Lower safety catch on the Chief Mount to secure your display, making sure catch is completely engaged.

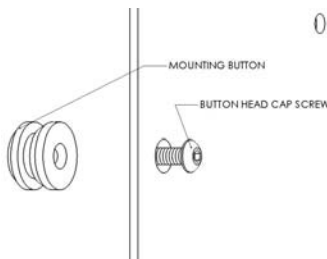


Figure 2



Figure 3

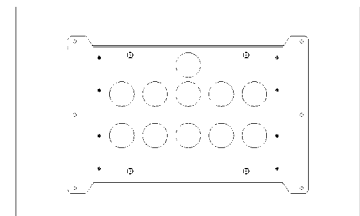


Figure 4

Some screens may only use the four corner mounting holes