



SCALE: 1:1
8833-00011 RevA

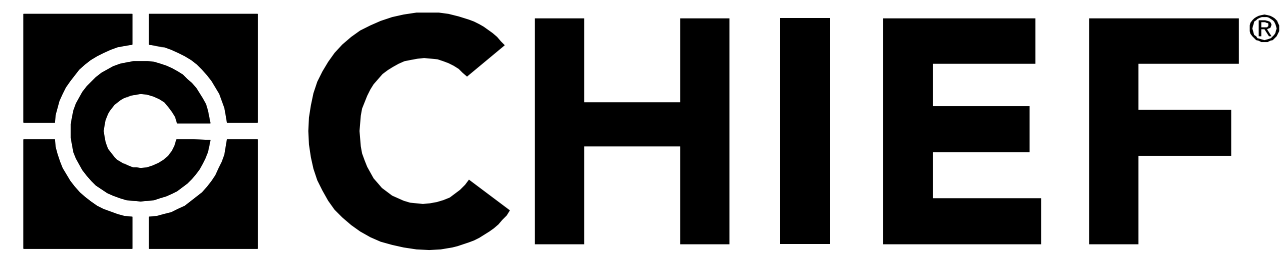

MODEL CM1 INSTALLATION TEMPLATE

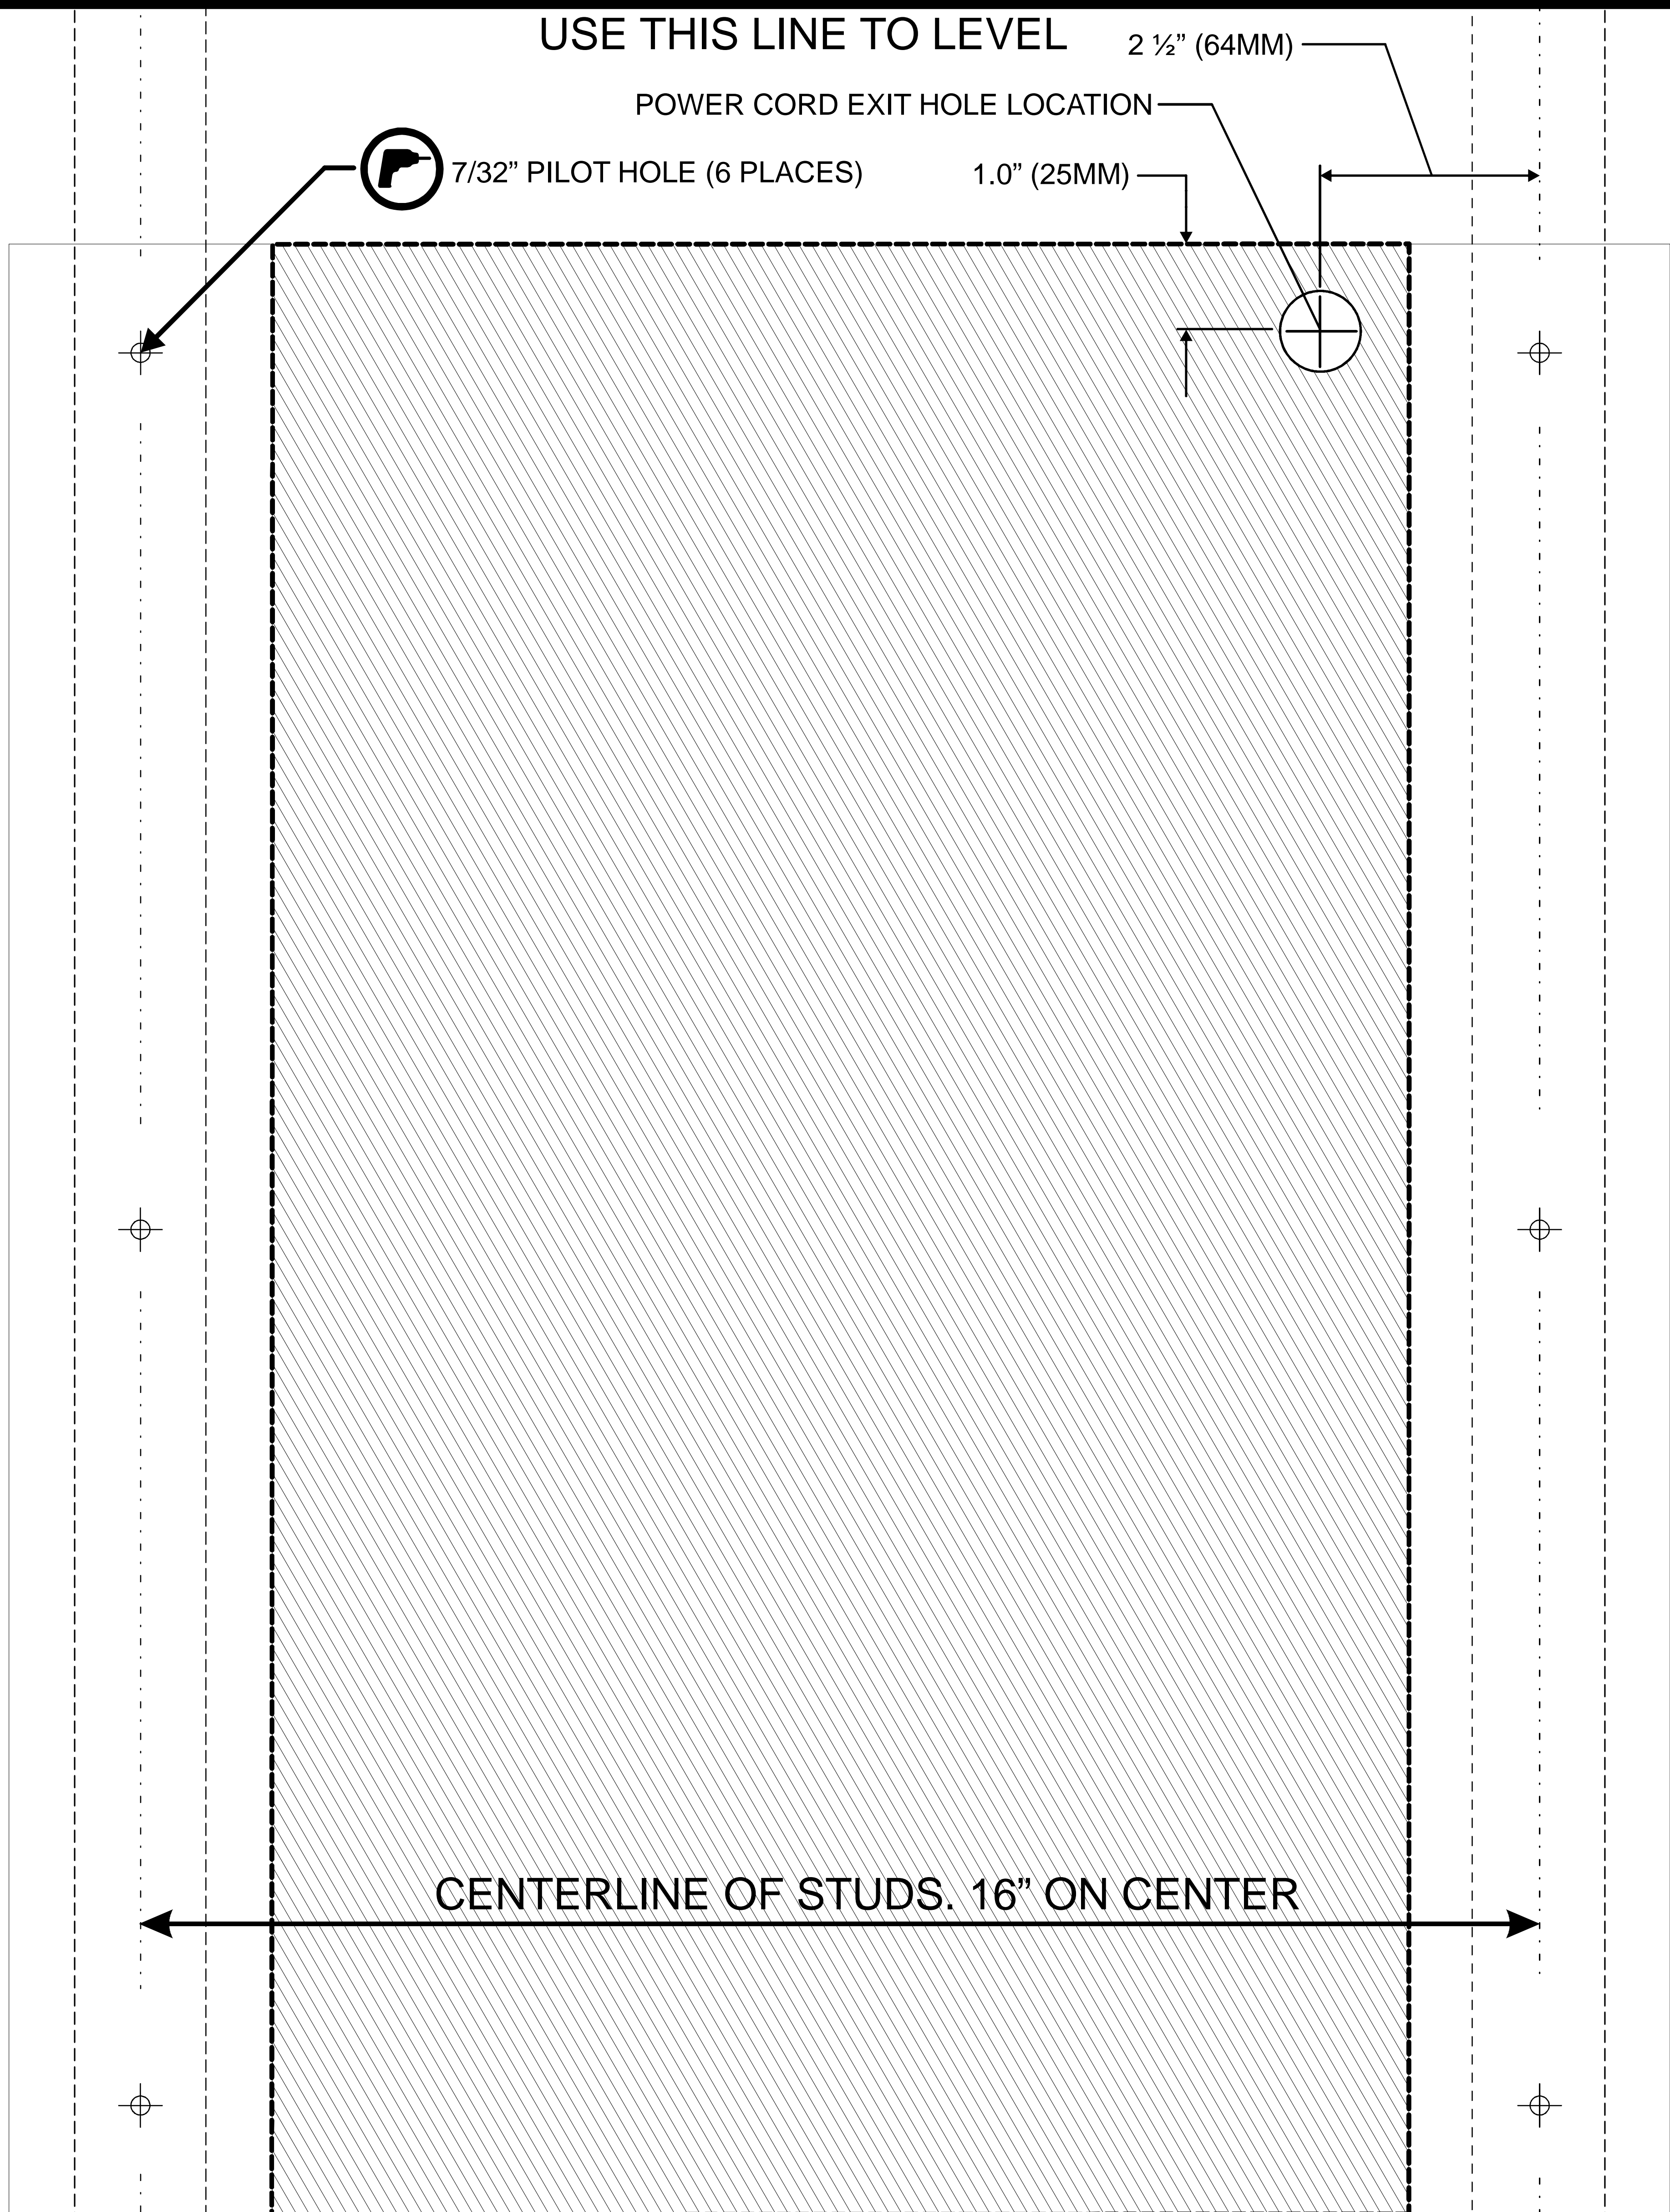

⚠ WARNING! ELECTRICAL SHOCK HAZARD! Cutting or drilling into electrical wires and cables can cause DEATH or SERIOUS PERSONAL INJURY! ALWAYS make certain area behind mounting surfaces is free of electrical wires and cables before cutting or drilling.

⚠ WARNING! EXPLOSION AND FIRE HAZARD! Cutting or drilling into gas plumbing can cause DEATH or SERIOUS PERSONAL INJURY! ALWAYS make certain area behind mounting surfaces is free of gas, water, waste, or any other plumbing before cutting or drilling.

1. Locate studs using a stud finder or similar method.
2. Align studs on template with studs in wall.
3. Level template using "Level Line" on template.
4. Secure template to wall using tape or similar method.
5. Drill six 7/32" Pilot holes into studs at locations identified on template.
6. Using a utility knife or similar tool carefully cut and remove drywall, using shaded area of template as a guide, to create a hole in the wall between studs.