



## INSTALLATION INSTRUCTIONS

# IDM-1000 WHITE BOARD MOUNTING BRACKET

Prior to assembly, unpack carton completely and verify contents.  
If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

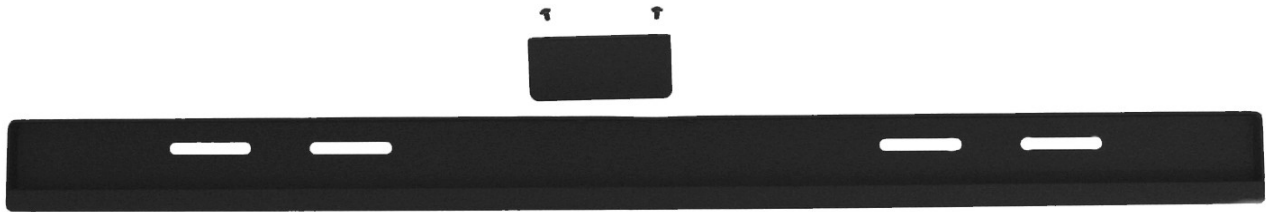


Figure 1

(1) Bracket  
(1) Retainer

(2) 10-24 X 3/8" Phillips Head Cap Screw

### BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

1. Measure 2 3/8" down from the desired mounting height of the top of your 3M White Board and, using the bracket as a template, mark a level mounting pattern on your mounting surface (see Figure 2).

**WARNING:**            **The mount, when anchored in place, must be capable of supporting 4 times the weight of the white board and mount.**

2. Install the bracket on the mounting surface.
3. With the aid of another person, lift your 3M White Board up to the Mount, aligning mounting rail inside mount.
4. Using two 10-24 X 3/8" screws, install retainer as shown in Figure 3.

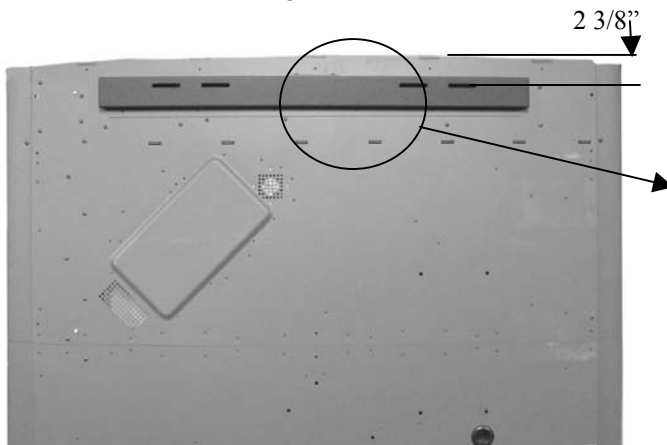


Figure 2



Figure 3