



INSTALLATION INSTRUCTIONS

IDM-2000

WHITEBOARD MOUNTING BRACKET

Prior to assembly, unpack carton completely and verify contents.
If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

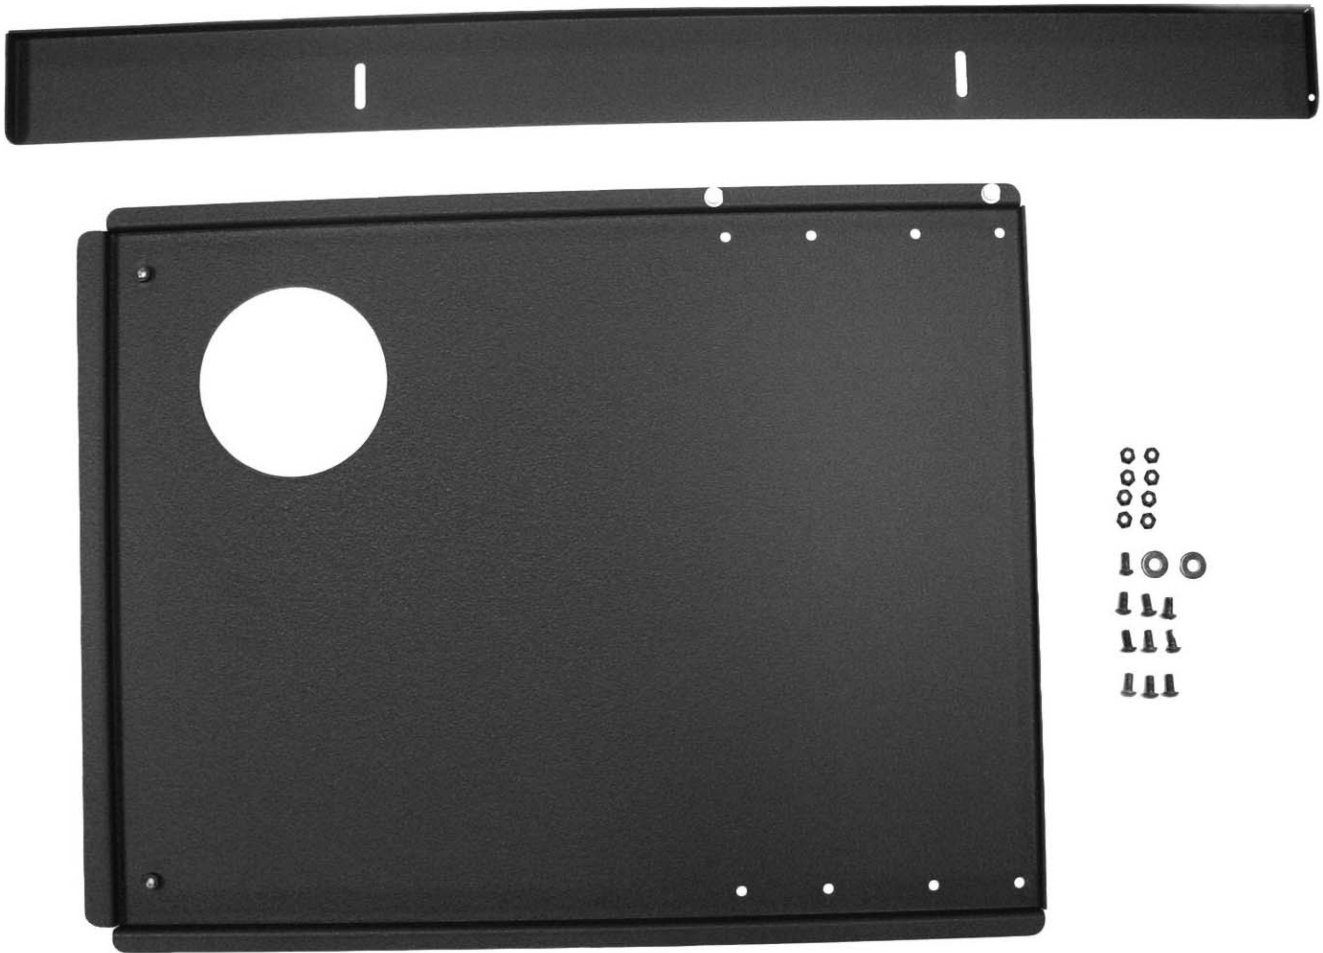


Figure 1

- (1) Whiteboard Retainer Bracket
- (1) Whiteboard Mount Bracket
- (8) 1/4-20 Nylock nuts

- (10) 1/4-20 x 1/2" Button HCS
- (2) 1/4" Washers
- (1) 5/32" Allen Key (not shown)

BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

1. Using eight $\frac{1}{4}$ -20 x $\frac{1}{2}$ " button head cap screw, inserted from the indented side of the whiteboard mounting bracket, and eight $\frac{1}{4}$ -20 Nylock nuts, secure white board mounting bracket to the cart as shown in figure 2.

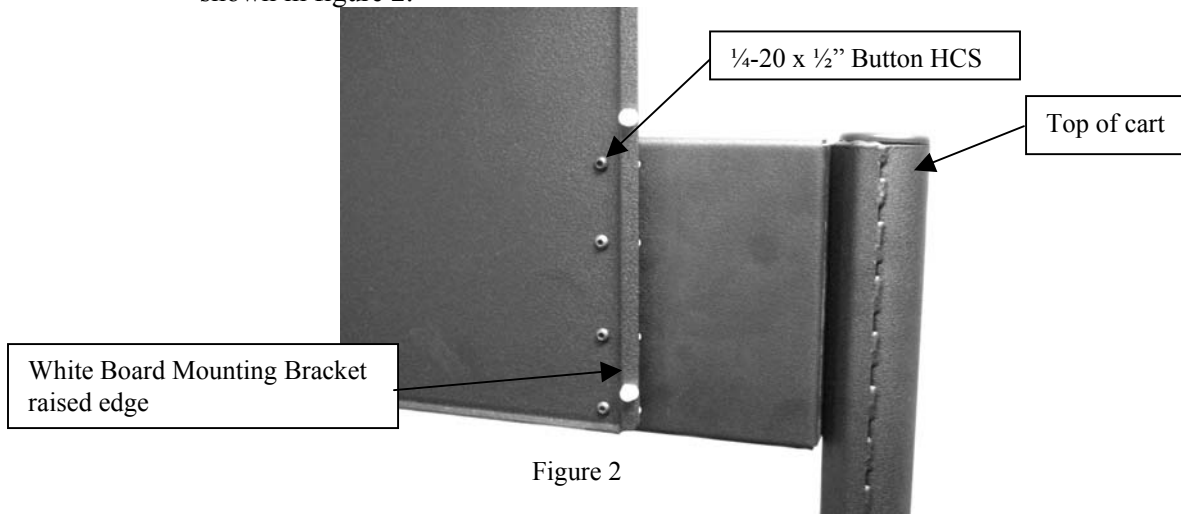


Figure 2

2. Hang whiteboard, centered, on bracket.
3. Secure the whiteboard retaining bracket to the whiteboard mounting bracket using two $\frac{1}{4}$ -20 x $\frac{1}{2}$ " button head cap screws, with $\frac{1}{4}$ " washers, threaded into the inserts in the whiteboard mounting bracket as shown in Figure 3

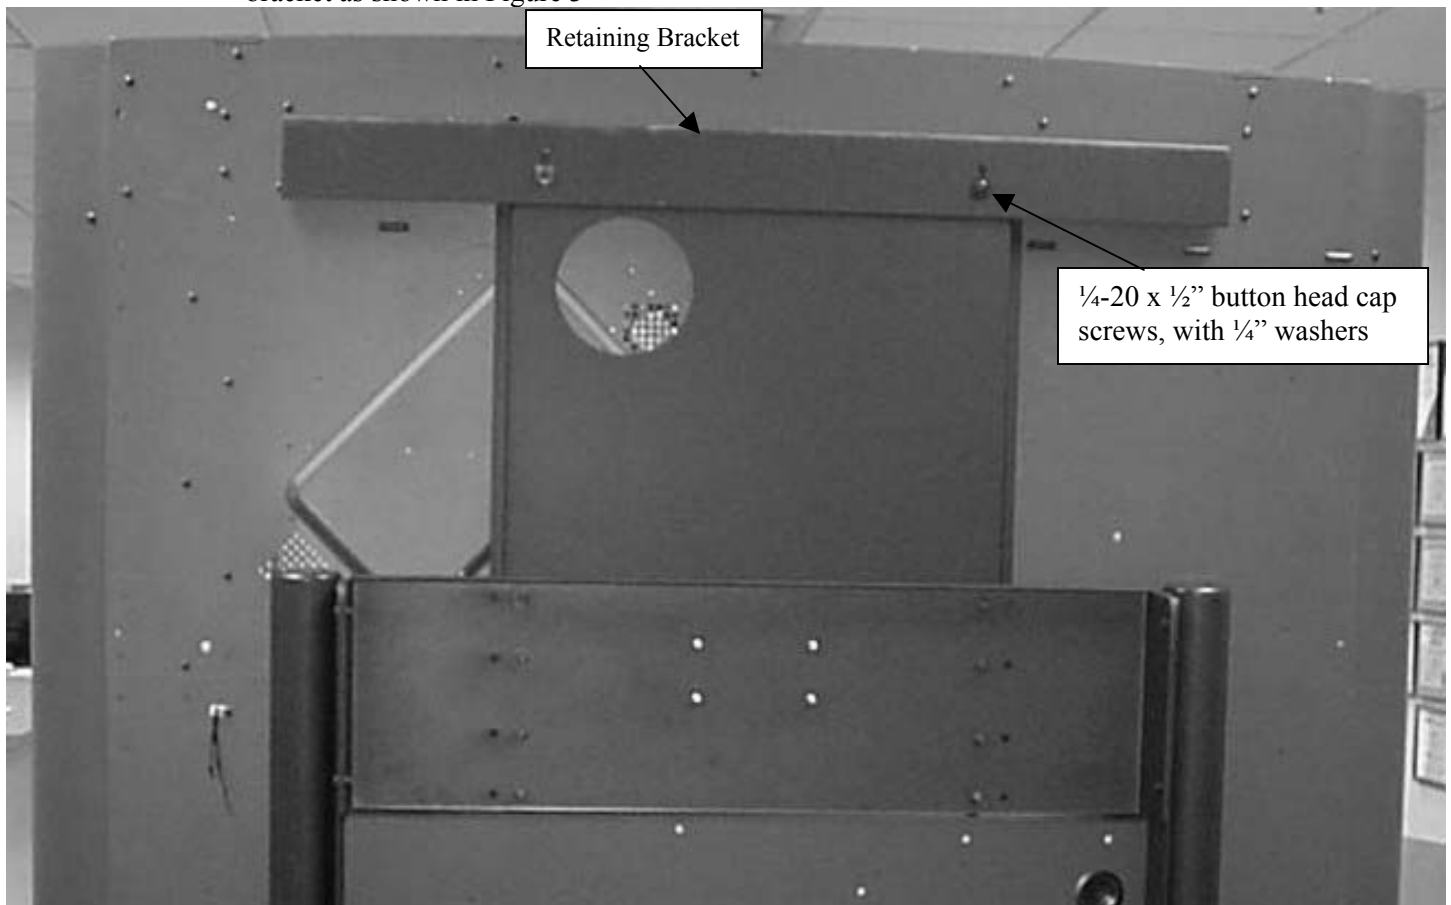


Figure 3