



# INSTALLATION INSTRUCTIONS

## MSP-WMKIT1

### DISPLAY INTERFACE BRACKET

Prior to assembly, unpack carton completely and verify contents.  
If you are missing any of the following components, please contact Customer Service at 1-800-582-6480

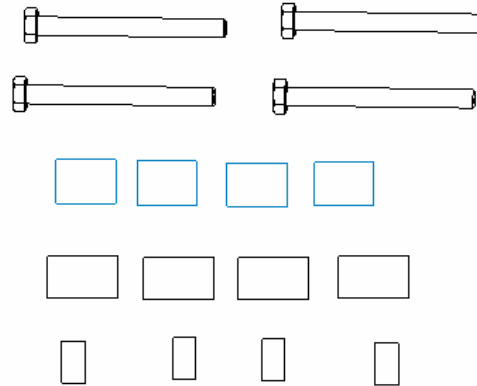


Figure 1

(4) M8 x 80mm Hex Head Cap Screw  
(4) .74 x .39 x 1.0 Nylon Spacer (White)

(4) 18mm x 8.3mm x 30mm Nylon Spacer (Black)  
(4) 18mm x 8.3mm x 10mm Nylon Spacer (Black)

BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

## CAUTION!

**DISPLAYS ARE EXTREMELY FRAGILE.**

1. Assemble bracket as discussed in MSP-WMPSB1 instruction manual.
2. Using the hardware supplied in this kit; stack 10mm (black), 30mm (black) and 1" (white) spacers over each mounting hole on back of screen (total of 4). Attach mounting brackets to display using the M8 screws (see Figure 2 & Figure 3).
3. With the aid of another person, lift your display up to the Chief Mount, aligning buttons of mounting brackets with slots in the Chief Mount.
4. Lower safety latch on the Chief Mount to secure your display, making sure latch is completely engaged.

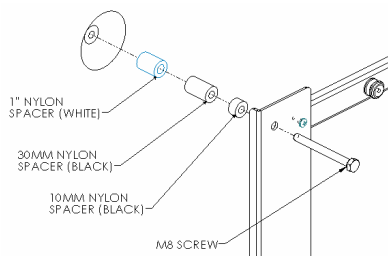


Figure 2

ATTACH BRACKET TO BACK OF DISPLAY  
USING THESE HOLES

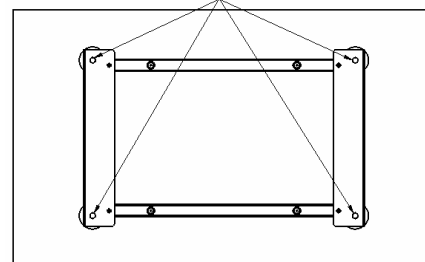


Figure 3