



INSTALLATION INSTRUCTIONS

OFB-100, OFB-110, OFB-112 and OFB-114 FLAT PANEL & WALL TRACK ADAPTER BRACKET

Prior to assembly, unpack carton completely and verify contents.

If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

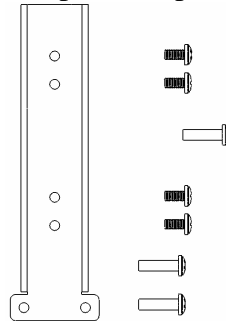


Figure 1

- (1) Adapter Bracket
- (1) Screw, Pan Head, Nylon

- (4) Screw, Pan Head, 10-24
- (2) Screw, Black Pan Head

BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

NOTE: Suggested tools include a magnetic screwdriver and a small hammer.

NOTE: Inserting adapter bracket into slots may require tapping it into place with a small hammer.

1. Secure the adapter bracket; with the tabs facing down, to the mounting bracket (supplied with your mounting assembly) by loosely installing four 10-24 pan head screws (see Figure 2).
2. Loosely install the two black pan head screws in the bottom corners of the adapter bracket.

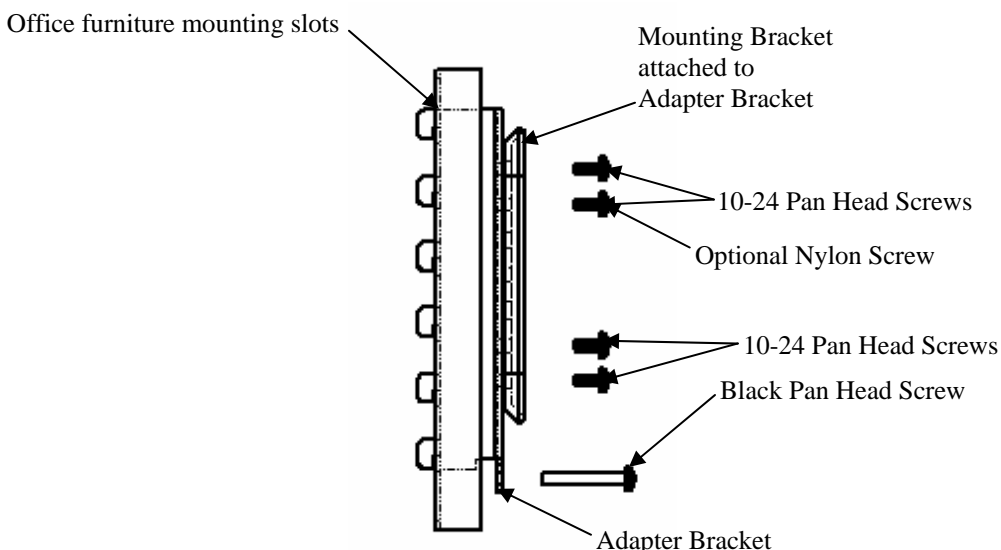


Figure 2

NOTE: Inserting adapter bracket into slots may require tapping it into place with a small hammer.

3. Install adapter bracket in slot of office furniture and push down until seated.
4. Secure adapter bracket in place by tightening two black pan head screws installed in Step 2, making sure not to over tighten screws. Screws must fit into office furniture slot. If screws do not fit into slot, the adapter bracket is not properly seated.
5. Tighten four 10-24 pan head screws installed in Step 1.
6. If necessary, replace one 10-24 pan head screw with Nylon screw (provided) for additional rigidity, being careful not to over tighten Nylon screw.
7. Install your mount as described in the directions accompanying your mount.