



## INSTALLATION INSTRUCTIONS

# OFB-142 WALL TRACK ADAPTER BRACKET

Prior to assembly, unpack carton completely and verify contents.

If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

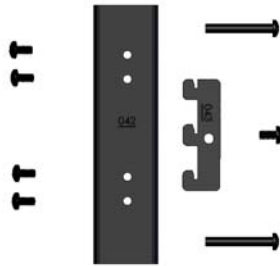


Figure 1

- (1) Adapter Bracket
- (1) Locking Bracket

- (5) Screw, Pan Head, 10-24
- (2) Screw, Pan Head, 10-24, Long

### **BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY**

NOTE: Suggested tools include a magnetic screwdriver and a small hammer.

NOTE: Inserting adapter bracket into slots may require tapping it into place with a small hammer.

1. Install the adapter bracket in slots of the office furniture, tabs facing down, at desired location and push down until seated.
2. Install locking bracket in slot of office furniture, tabs facing up, and push up until hole in locking bracket aligns with hole in adapter bracket (see Figure 2).

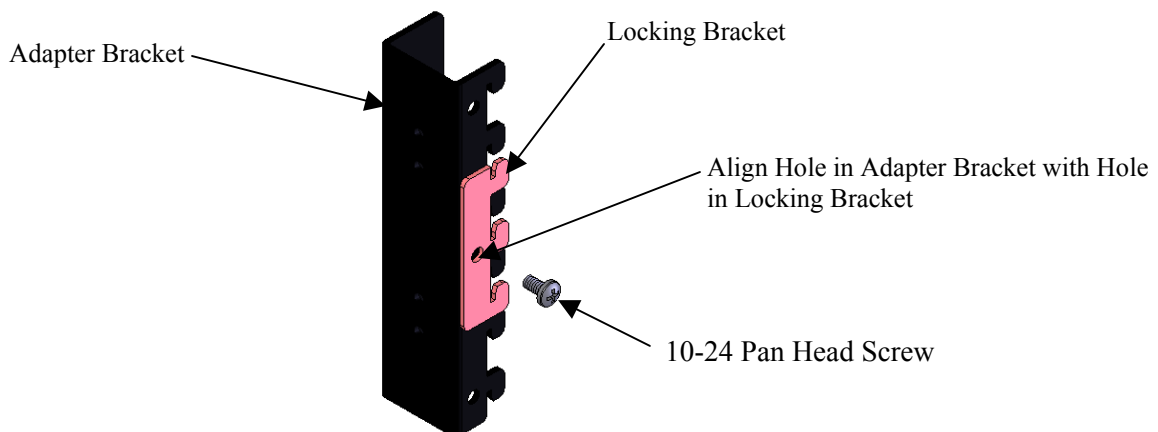


Figure 2

3. Secure locking bracket to adapter bracket using a 10-24 pan head screw (see Figure 2).
4. Install two 10-24 long pan head screws in adapter bracket (see Figure 3).
5. Secure the mounting bracket (supplied with your mounting assembly) using four 10-24 pan head screws (see Figure 4).
6. Install your mount as described in the directions accompanying your mount.

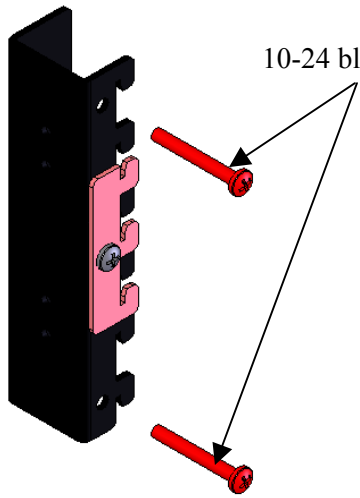


Figure 3

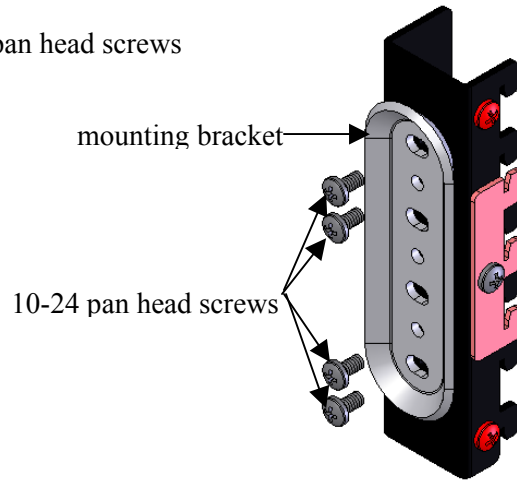


Figure 4