

# INSTALLATION INSTRUCTIONS

## OFB-176

### Universal Allsteel Panel-to-Panel and Corner Panel Adapter

Prior to assembly, unpack carton completely and verify contents. If you are missing any of the following components, please contact Customer Service.

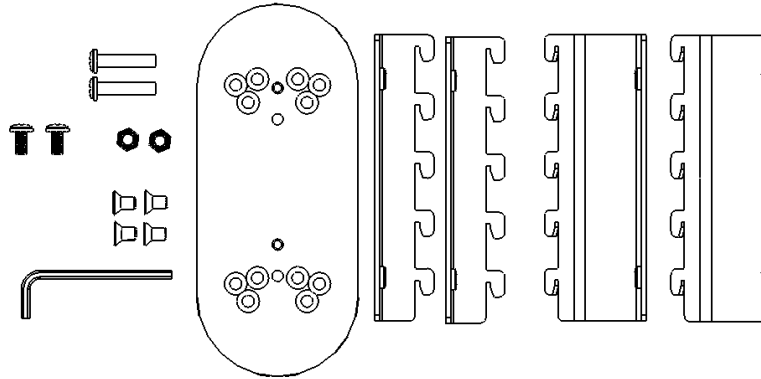


Figure 1

- |                             |                              |
|-----------------------------|------------------------------|
| (1) Adapter Plate           | (4) Screw, Allen Head, 10-24 |
| (2) Adapter Bracket, Wall   | (2) Screw, Nylon             |
| (2) Adapter Bracket, Corner | (2) Screw, Pan Head, 10-24   |
|                             | (2) Nut, Nylock, 10-24       |

### BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

NOTE: Suggested tools include a magnetic screwdriver and a small hammer.

NOTE: Inserting adapter bracket into slots may require tapping it into place with a small hammer.

### Terrace and Align Office Furniture System

1. Install one of the appropriate [wall (see Figure 2) or corner (see Figure 3)] adapter brackets, with the tabs facing down, in the slots of the wall or corner and push down until seated.
2. Secure the remaining adapter bracket loosely, with the tabs facing up, in the holes of the adapter plate using two 10-24 Allen head screws.

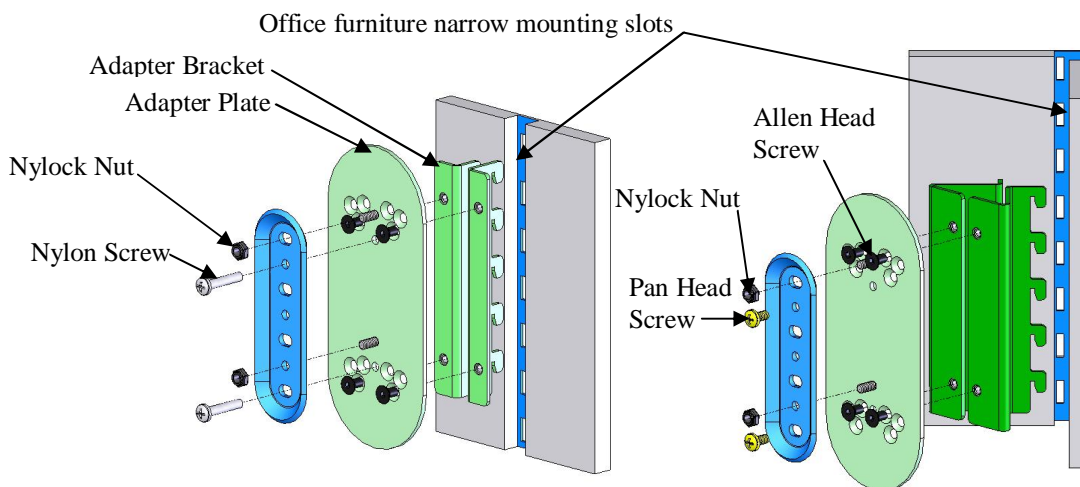


Figure 2. Terrace and Align Panel-to-Panel

Figure 3. Terrace and Align Corner



3. Install adapter bracket, with adapter plate attached, in the slots of the wall or corner and push down until seated.
4. Secure the adapter plate to the adapter bracket installed in Step 1 using two 10-24 Allen head screws.

### Concensys Office Furniture System

1. Install one of the appropriate [corner (see Figure 4) or wall (see Figure 5)] adapter brackets, with the tabs facing down, in the slots of the wall or corner and push down until seated.
2. Secure the remaining adapter bracket loosely, with the tabs facing up, in the holes of the adapter plate using two 10-24 Allen head screws.

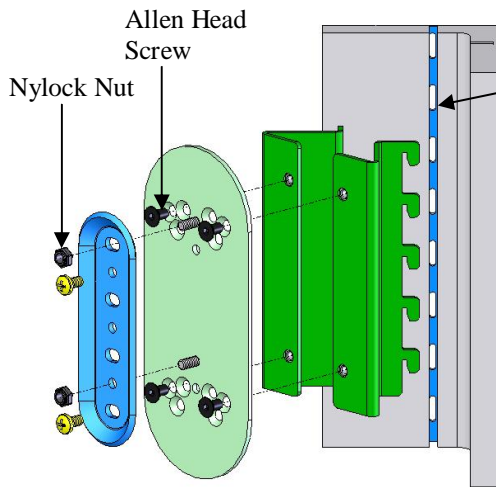


Figure 4. Concensys Corner Application

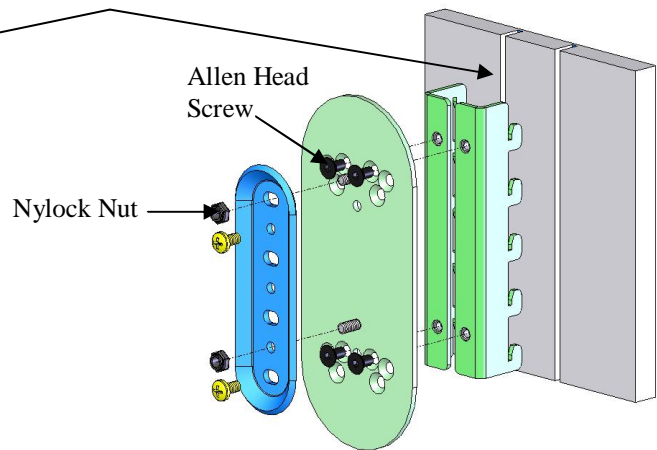


Figure 5. Concensys Wall Application

3. Install adapter bracket, with adapter plate attached, in the slots of the wall or corner and push down until seated.
4. Secure the adapter plate to the adapter bracket installed in Step 1 using two 10-24 Allen head screws.

