



## INSTALLATION INSTRUCTIONS

# OFB-183 CORNER MOUNT ADAPTER BRACKET

Prior to assembly, unpack carton completely and verify contents.

If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

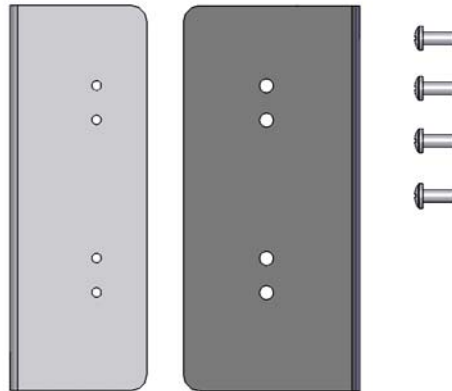


Figure 1

- (1) Adapter Bracket, Right (Through Holes)
- (1) Adapter Bracket, Left (Tapped Holes)

- (4) Screw, pan head, 10-24

### **BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY**

NOTE: Suggested tools include a magnetic screwdriver and a small hammer.

NOTE: Inserting adapter bracket into slots may require tapping it into place with a small hammer.

1. Insert the left adapter bracket with tapped holes, tabs facing down, into left corner of office furniture equipment mounting slots at desired height (see Figure 2 and Figure 3).
2. Insert the right adapter bracket, tabs facing up, into matching right corner of office furniture equipment mounting slots and slide down until mounting holes align (see Figure 2 and Figure 3).

NOTE: Holes in the mounting bracket supplied with your mounting assembly should align with the threaded holes in the installed adapter brackets. If holes do not align, adapter brackets are not seated and must be tapped further into place.

3. Secure the mounting bracket (supplied with your mounting assembly) by loosely installing four 10-24 pan head screws (see Figure 4).

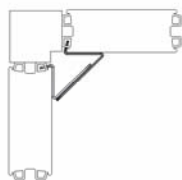


Figure 2

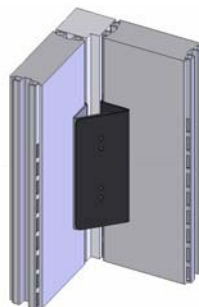


Figure 3

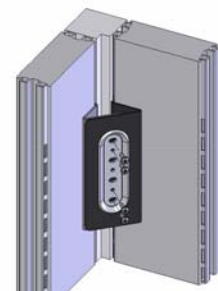


Figure 4

4. Install your mount as described in the directions accompanying your mount.