




INSTALLATION INSTRUCTIONS

PSB-2391

PLASMA DISPLAY MOUNTING BRACKET

Prior to assembly, unpack carton completely and verify contents.

If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

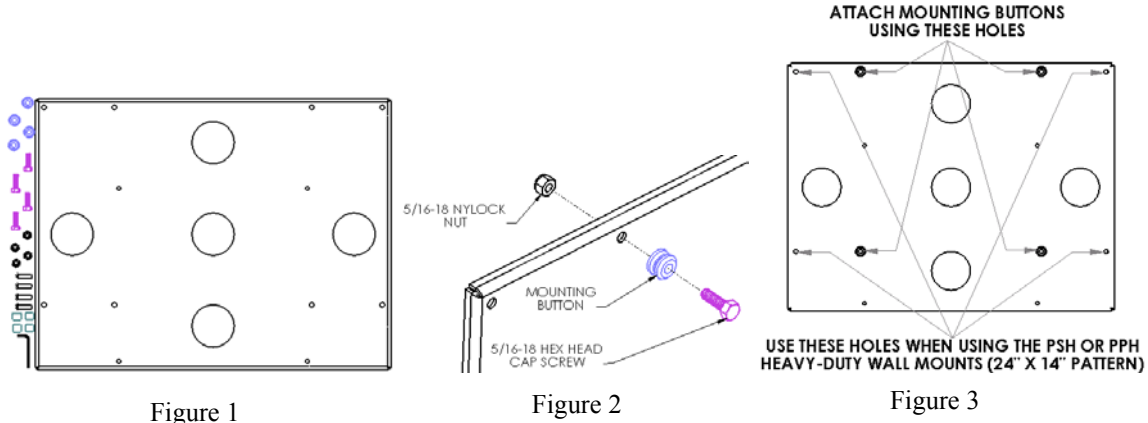

- (1) Plasma Interface Bracket
- (4) 5/16-18 x 1" Hex Head Cap Screw
- (4) M5 x 25 mm Button Head Cap Screw
- (1) M3 Allen Key

- (4) Mounting Buttons-.316" Through Hole
- (4) 5/16-18 Nylock Nut
- (4) .500 x .194 x .500 Nylon Spacer

BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

CAUTION! PLASMA DISPLAYS ARE EXTREMELY FRAGILE.

1. Using a 5/16-18 hex head cap screw and Nylock nut, secure mounting button, with chamfered hole of mounting button (larger surface) facing bracket, to bracket (four places) (see Figure 2 & Figure 3). If using the PSH or PPH heavy-duty mounts, use the 24" x 14" spud pattern.
2. Place Nylon spacers over mounting holes on back of display. Attach mounting brackets to the display using the M5 button head cap screws (see Figure 4 & Figure 5).
3. With the aid of another person, lift your display up to the Chief Mount, aligning buttons of mounting brackets with slots in the Chief Mount.
4. Lower safety latch on the Chief Mount to secure your display, making sure latch is completely engaged.

