



INSTALLATION INSTRUCTIONS

PDB-82


PLASMA DISPLAY MOUNTING BRACKET

Used with the Pioneer 50" and PDA-5001 Video Box

Prior to assembly, unpack carton completely and verify contents.

If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

(1) PDB-82 Plasma Mounting Bracket

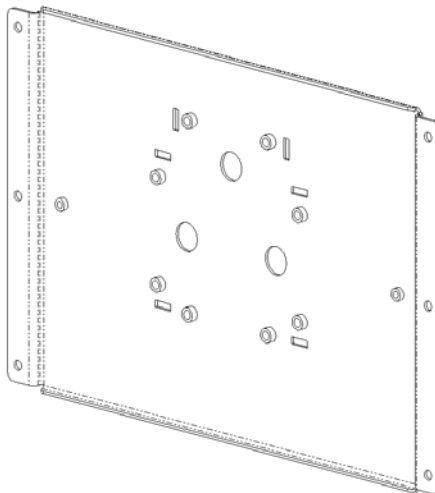

(6) M8 – 1.25 x 50mm Hex Head Cap Screws
(4) 5/16 - 18 x 5/8" Hex Head Bolts

(6) 1.1875" Spacers
(4) Ø 3/8" ID x Ø 29/32" OD Flat Washers

BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

CAUTION!

**PLASMA DISPLAYS ARE EXTREMELY FRAGILE.
CAREFULLY LAY DISPLAY SCREEN-SIDE-DOWN
ON A CLEAN, PREFERABLY CUSHIONED, SURFACE.**

1. Align hole pattern on PDB-82 with pattern on back of Plasma Display, with rectangular slots oriented towards the top of the Plasma Display.
2. Insert six 1.1875" spacers, aligning with mounting holes, between bracket and rear of Plasma Display.
3. Attach bracket to Plasma Display using (6) M8 – 1.25 x 50mm HHCS. Insert fasteners through tapped stand-offs & screw into rear of Plasma Display.
4. With the aid of another person, lift Plasma Display up to Chief Mount. This Plasma Display can be mounted in one of three positions: two vertical & one horizontal. Each position has its own mounting pattern. There are two rectangular slots oriented at the top of each mounting pattern. Align the two rectangular slots of applicable mounting pattern in Plasma Mounting Bracket, with exposed J-hooks on Chief Mount, and hang Plasma Display onto J-hooks. Attach Plasma Display to Chief Mount using (4) 5/16 - 18 x 5/8" bolts & (4) Ø 3/8" ID x Ø 29/32" flat washers.