




INSTALLATION INSTRUCTIONS

# PDB-91

## PLASMA DISPLAY MOUNTING BRACKET

for Sony PFM-42B1 42"

Prior to assembly, unpack carton completely and verify contents.  
If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

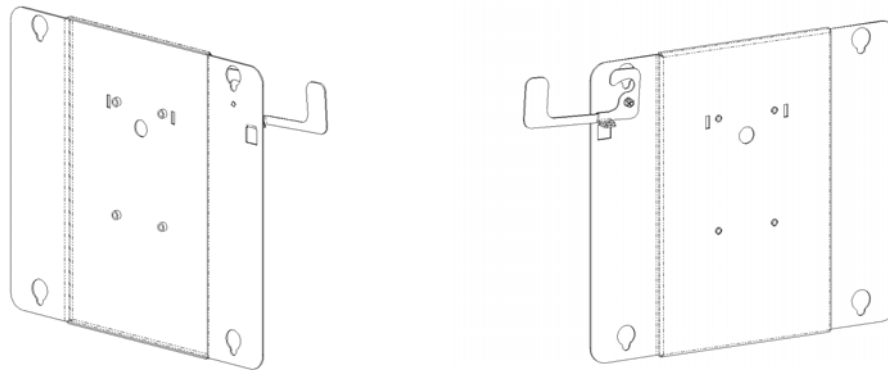

Front View

Back View

Figure 1.

### PARTS

- |   |  |
|---|--|
| (1) PDB-91 Plasma Mounting Bracket (Figure 1) | (1) Locking Flag   |
| (2) Nylon Washers                             | (4) $\text{\O} 3/8''$ ID x $\text{\O} 29/32''$ OD Flat Washers |
| (1) $1/4$ -20 Lock Nut                        | (4) $5/16 - 18 \times 5/8''$ Hex Head Bolts                    |

**BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY**

**CAUTION!** PLASMA DISPLAYS ARE EXTREMELY FRAGILE.  
CAREFULLY LAY DISPLAY SCREEN-SIDE-DOWN  
ON A CLEAN, PREFERABLY CUSHIONED, SURFACE.

1. Place 1 Nylon washers on the stud provided on the PDB Mount.
2. Place the Locking Flag and the second Nylon washer on the stud and secure using the  $1/4$ -20 locking nut (see Figure 1).
3. Using (4)  $5/16 - 18 \times 5/8''$  bolts & (4)  $\text{\O} 3/8''$  ID x  $\text{\O} 29/32''$  flat washers, attach the PDB Mount to the Chief Mount.
4. With the aid of another person, lift Plasma Display up to PDB Mount and slide into keyhole slots.
5. Engage Flag to lock Plasma in place. Padlock may be installed.