



INSTALLATION INSTRUCTIONS

PSB-2055

PLASMA DISPLAY MOUNTING BRACKET

Prior to assembly, unpack carton completely and verify contents.

If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

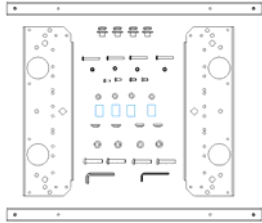


Figure 1

- (2) Plasma Side Bracket
- (4) Mounting Button – Back Nylon
- (4) 10-24 x .5 Button Head Cap Screw
- (4) .5 x .260 x .188 Nylon Spacer
- (4) .74 x .39 x 1.0 Nylon Spacer
- (4) M8 Flat Steel Washer
- (1) M5 Allen Key

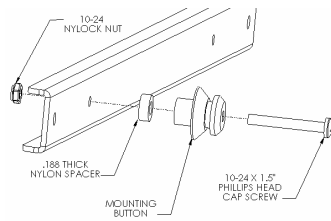


Figure 2

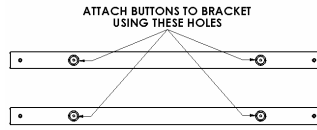


Figure 3

- (2) Plasma Top/Bottom Bracket
- (4) 10-24 x 1.5 Phillips Head Cap Screw
- (4) 10-24 Nylock Nut
- (4) M8 x 60mm Button Head Cap Screw
- (4) .805 OD x .324 ID Nylon Shoulder Washer
- (1) 1/8 Allen Key

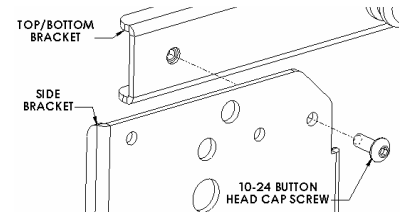


Figure 4

BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

CAUTION!

PLASMA DISPLAYS ARE EXTREMELY FRAGILE.

1. Using a 10-24 phillips head cap screw, thin nylon spacer and nylock nut, secure mounting button to top and bottom brackets (four places) (see Figure 2 & Figure 3).
2. Using four 10-24 button head cap screws, attach top and bottom to side brackets (see Figure 4 & Figure 5).
3. Place Nylon spacers over mounting holes on back of screen. Attach mounting brackets to display using the M8 screws, shoulder and steel washers (see Figure 6 & Figure 7).
4. With the aid of another person, lift your display up to the Chief Mount, aligning buttons of mounting brackets with slots in the Chief Mount.
5. Lower safety latch on the Chief Mount to secure your display, making sure latch is completely engaged.

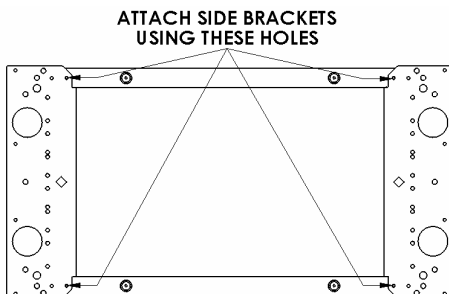


Figure 5

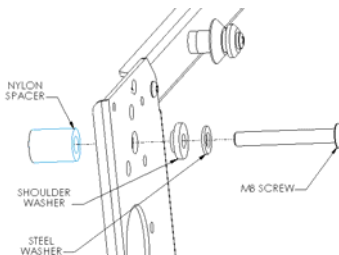


Figure 6

ATTACH BRACKET TO BACK OF DISPLAY USING THESE HOLES

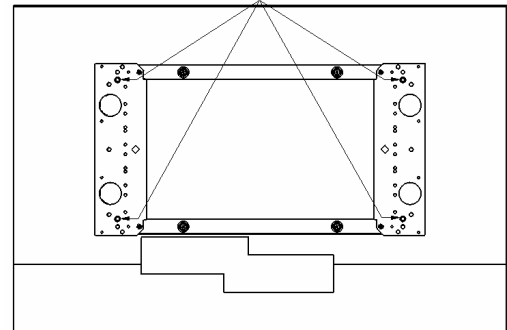


Figure 7