



INSTALLATION INSTRUCTIONS

PSB-2281

PLASMA DISPLAY MOUNTING BRACKET

Prior to assembly, unpack carton completely and verify contents.

If you are missing any of the following components, please contact Customer Service at 1-800/582-6480

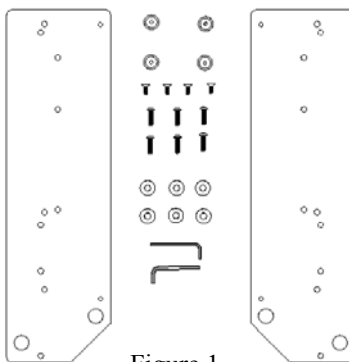


Figure 1

- (1) Plasma Static Mount Left Bracket
- (4) Mounting Buttons
- (6) M6-1 x 20mm BHCS
- (1) 1/8" Allen Key

- (1) Plasma Static Mount Right Bracket
- (4) 10-24 Flat head Cap Screws
- (6) .75 OD x .323 ID x .125 Nylon Spacer
- (1) 4mm Allen Key

BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

CAUTION!

PLASMA DISPLAYS ARE EXTREMELY FRAGILE.

1. Using a 10-24 flat head cap screw inserted from chamfered hole side of bracket, secure mounting button, with chamfered hole of mounting button (larger surface) facing bracket, to bracket (four places) (see Figure 2).
2. Place Nylon spacers over mounting holes on back of screen. Attach mounting brackets to the display using the M6 button head cap screws (see Figure 3 & Figure 4).
3. With the aid of another person, lift your display up to the Chief Mount, aligning buttons of mounting brackets with slots in the Chief Mount.
4. Lower safety catch on the Chief Mount to secure your display, making sure catch is completely engaged.

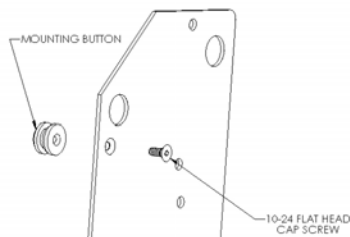


Figure 2

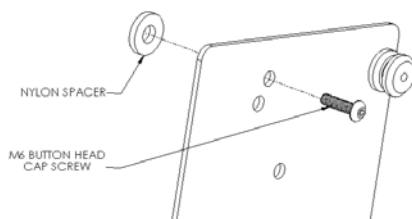


Figure 3

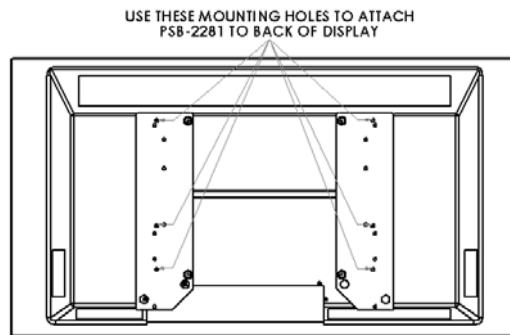


Figure 4