

# INSTALLATION INSTRUCTIONS

## PLASMA DISPLAY STATIC MOUNT PSM-2151

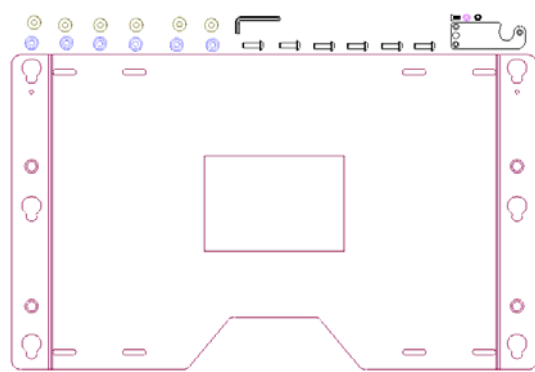


Figure 1

- |                                                  |                                          |
|--------------------------------------------------|------------------------------------------|
| (1) Plasma Static Mount                          | (1) Latching Flag                        |
| (1) 10-24 x .5 Phillips Flat Head Undercut Screw | (1) 10-24 Nylock Nut                     |
| (1) .5 OD x .313 ID x .031 Nylon Washer          | (6) Mounting Buttons – Black Unthreaded  |
| (6) M8 x 25mm BHCS                               | (6) .75 OD x .323 ID x .125 Nylon Spacer |
| (6) .75 x .34 x .50 Nylon Spacer                 | (6) M8 x 35mm BHCS                       |
|                                                  | (1) M5 Allen Key                         |

**BEFORE PROCEEDING:** Unpack the carton, verify contents shown in Figure 1 and read installation instructions completely. If you are missing any of the listed components, please contact Customer Service at 1-800/582-6480.

### CAUTION! Plasma Displays are Extremely Fragile.

1. Secure latching flag to mount using the 10-24 undercut screw, Nylon washer, and Nylock nut (see Figure 2). Tighten until friction will hold the flag in place.
2. Place one .125" Nylon spacer under each mounting button and attach to back of display using the M8 x 25mm screws provided (see Figure 3 & Figure 4). If mounting holes of screen are recessed, place .5" Nylon spacer under each mounting button and attach to back of display using the M8 x 35mm screws provided.

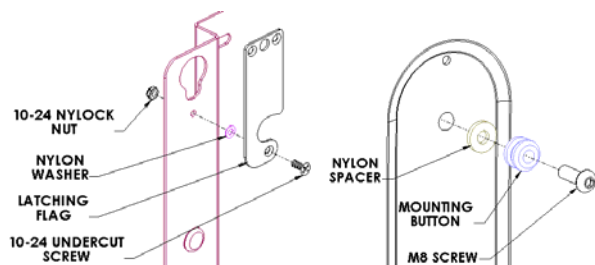


Figure 2

Figure 3

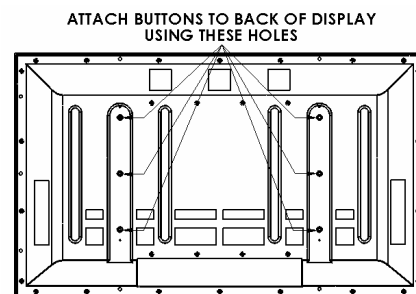


Figure 4

# WARNING

**ALL COMPONENTS MUST BE SECURELY FASTENED TO A STRUCTURAL MEMBER CAPABLE OF SUPPORTING 4 TIMES THE COMBINED WEIGHT OF ALL COMPONENTS PLUS THE EQUIPMENT BEING MOUNTED. IF IT CANNOT SUPPORT THIS WEIGHT, THE STRUCTURE MUST BE REINFORCED. THE MAXIMUM WEIGHT TO BE INSTALLED ON THE MOUNT IS 175 POUNDS (79.38 KG).**

3. Securely anchor the static mount to wall studs or supporting framework (see WARNING).
4. Make sure the flag is lowered before attempting to place the display on the mount.
5. With the aid of another person, lift the display up to the mount, align the mounting buttons on the display with the teardrop slots in the mount, and set the display into place (see Figure 5).
6. Position (raise) the flag to secure display.

**NOTE:** If using PAC-130 or PAC-135, attach latching flag using hole on other flange of mount.

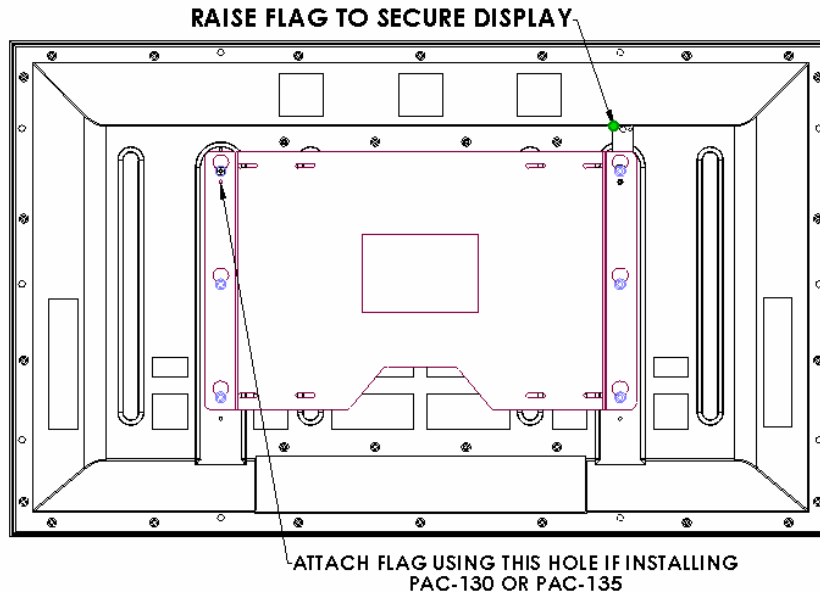


Figure 5