

# INSTALLATION INSTRUCTIONS

## PSM 2190 PLASMA DISPLAY STATIC MOUNT

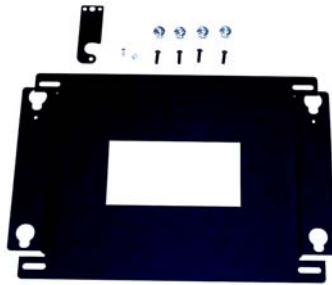


Figure 1

- |                                      |                                  |
|--------------------------------------|----------------------------------|
| (1) Plasma Static Mount              | (1) 10-24 x .5 FH Undercut Screw |
| (1) Latching Flag                    | (1) Nylon Washer                 |
| (1) 10-24 Nylock Nut                 | (4) Mounting Buttons-Silver      |
| (4) M6 x 20mm Button Head Cap Screws | (1) 4mm Allen Key                |

**BEFORE PROCEEDING:** Unpack the carton, verify contents shown in Figure 1 and read installation instructions completely. If you are missing any of the listed components, please contact Customer Service at 1-800/582-6480.

**CAUTION!** PLASMA DISPLAYS ARE EXTREMELY FRAGILE

**WARNING!** THE MOUNT, WHEN ANCHORED IN PLACE, MUST BE CAPABLE OF SUPPORTING 4 TIMES THE COMBINED WEIGHT OF THE PLASMA AND MOUNT.

1. Attach latching flag to PSM using the flat head screw, Nylon washer and Nylock nut (see Figure 2). Tighten the nut and screw until friction will hold the flag in place.
2. Attach mounting buttons to display using four M6 x 20 button head cap screws and the M4 Allen key provided (see Figure 3 & Figure 4).
3. Securely anchor the plasma static mount to the wall using wall studs or supporting framework.
4. Make sure the flag is lowered to the side before attempting to place the display on the mount.
5. With the aid of another person, lift the display up to the mount, align the mounting buttons on the display with the teardrop slots in the mount, and set the display into place (see Figure 5).
6. Position (raise) the flag to secure the display (see Figure 5).

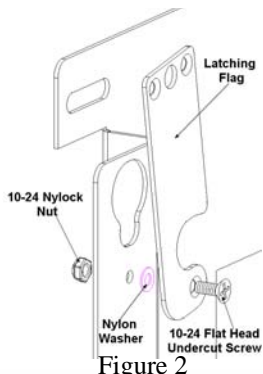


Figure 2

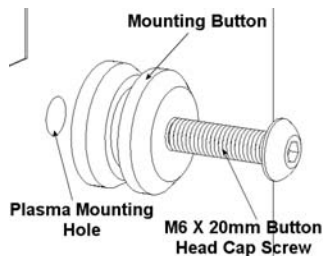


Figure 3

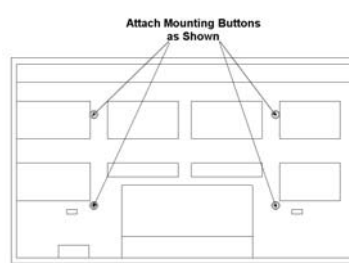


Figure 4

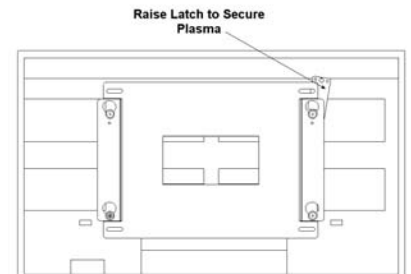


Figure 5

