


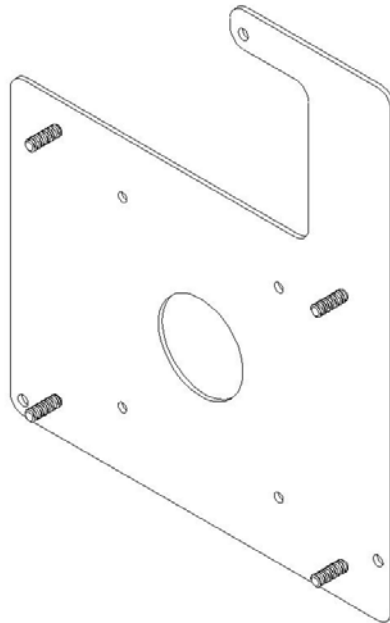

INSTALLATION INSTRUCTIONS
SLB-046 HANGER BRACKET
for Boxlight SP-46d, XP-56d, Enthronic E951, E951X,

Prior to assembly, unpack carton and verify contents.
For security installation, use security hardware package inside the ALL-POINTS™ Security Kit. Follow the instructions below for attaching the bracket to the projector using either standard hardware or security hardware.
If you are missing any of the following components, please contact Customer Service at 1-800-582-6480

- | | | | |
|-----|---------------------------------|-----|-----------------------------|
| (1) | SLB-046 Bracket | (3) | M3 -12mm Philips Pan Screws |
| (4) | 10 - 24 Thumb Nuts | (3) | M3 Flatwasher |
| (3) | 1/2" x .219 x 1/4" Nylon Spacer | | |



INSTALLATION INSTRUCTIONS

1. Turn projector upside down.
2. Place the three 1/4" nylon spacers over the three threaded inserts in the bottom of the projector.
3. Place the SLB-046 bracket onto the three 1/4" nylon spacers on the bottom of the projector lining up the three mounting holes in the bracket with the three nylon spacers.
4. Using the three M3 x 12mm screws start them into the three threaded inserts and tighten all fasteners at this time, securing the bracket to the projector. **CAUTION: When attaching the mount be careful not to overtighten screws.**
5. See RPA and/or Smart-Lift™ Instructions.