



INSTALLATION INSTRUCTIONS SLB-062 HANGER BRACKET


for Boxlight DLP HD2, Premiere 50HD,
Studio Experience DLP HD2, Premiere 50HD,

Prior to assembly, unpack carton and verify contents.

For security installation, use security hardware package inside the ALL-POINTS™ Security Kit. Follow the instructions below for attaching the bracket to the projector using either standard hardware or security hardware.

If you are missing any of the following components, please contact Customer Service at 1-800-582-6480

- | | | | |
|-----|---------------------------|-----|--------------------------|
| (1) | SLB-062 Bracket | (3) | M4 Flatwashers |
| (4) | 10 - 24 Thumb Nuts | (2) | M4 x 8mm Pan Head Screws |
| (1) | M4 x 16mm Pan Head Screws | | |

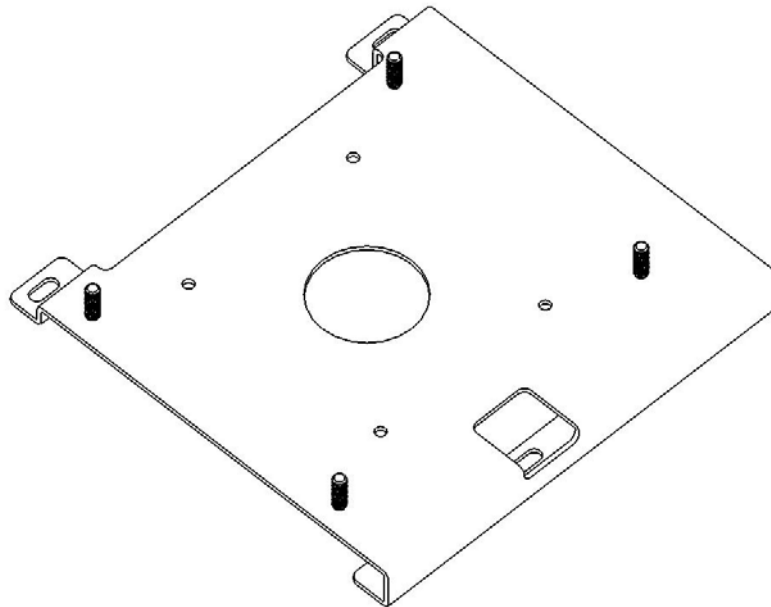

INSTALLATION INSTRUCTIONS

1. Turn projector upside down on a flat surface.
2. Place the SLB-062 bracket onto the bottom of the projector lining up the three slotted holes in the bracket with the three threaded inserts in the bottom of the projector.
3. Using the three M4 mounting screws and washers, start the longer 16mm screw in the inset hole and the 10mm long screws into the other two mounting holes by hand and secure all three fasteners at this time. **CAUTION: When attaching the mount be careful not to over tighten mounting screws.**
4. See RPA and/or Smart-Lift™ Instructions.