



INSTALLATION INSTRUCTIONS SLB-130 HANGER BRACKET


for Lumens LE130, LX130, LX130M, LX131, Kodak KP1300X,

Prior to assembly, unpack carton and verify contents.

For security installation, use security hardware package inside the ALL-POINTS™ Security Kit. Follow the instructions below for attaching the bracket to the projector using either standard hardware or security hardware.

If you are missing any of the following components, please contact Customer Service at 1-800-582-6480

- | | | | |
|-----|--------------------|-----|----------------------------|
| (1) | SLB-130 Bracket | (2) | M4 - 20mm Flat Head Screws |
| (5) | 10 - 24 Thumb Nuts | (2) | ½" Nylon Spacers |
| (1) | M2.5 Allen Wrench | | |

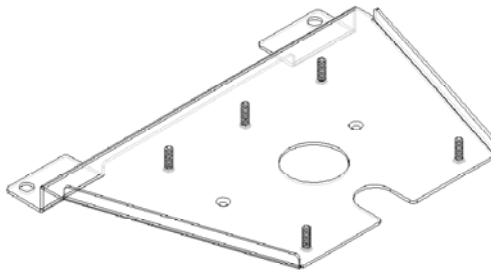

Installation Instructions

1. Turn projector upside down.
2. Remove the two front adjustable feet and set them off to one side for a moment.
3. Place the two ½" Nylon spacers supplied so they are centered on the two treaded inserts in the bottom of the projector just to each side of the filter cover.
4. Place the SLB-130 bracket so the two larger mounting holes in the bracket are lined up with the two adjustable feet treaded inserts in the bottom front of the projector housing, the remaining two holes in the bracket should now be lined up with the two threaded inserts with the ½" spacers between the projector and the bracket.
5. using the two M4 -20mm mounting screws and the supplied Allen wrench secure them to the projector, now using the two adjustable feet that were supplied with the projector, re-install them in to the front two holes and snug them down with your hand. **CAUTION: When attaching the mount be careful not to overtighten screws.**
6. See RPA and/or Smart-Lift™ Instructions.