



INSTALLATION INSTRUCTIONS SLB-138 HANGER BRACKET


for Viewsonic PJ256D,

Prior to assembly, unpack carton and verify contents.

For security installation, use security hardware package inside the ALL-POINTS™ Security Kit. Follow the instructions below for attaching the bracket to the projector using either standard hardware or security hardware.

If you are missing any of the following components, please contact Customer Service at 1-800-582-6480

- | | | | |
|-----|--------------------|-----|-------------------------|
| (1) | Interface Bracket | (2) | #10 Flatwashers |
| (3) | 10 - 24 Thumb Nuts | (2) | 10 - 24 Nylock Nuts |
| (1) | U-Form Bail | (4) | 1" Felt Pads Square |
| (2) | Security Plates | (1) | All Points Security Kit |

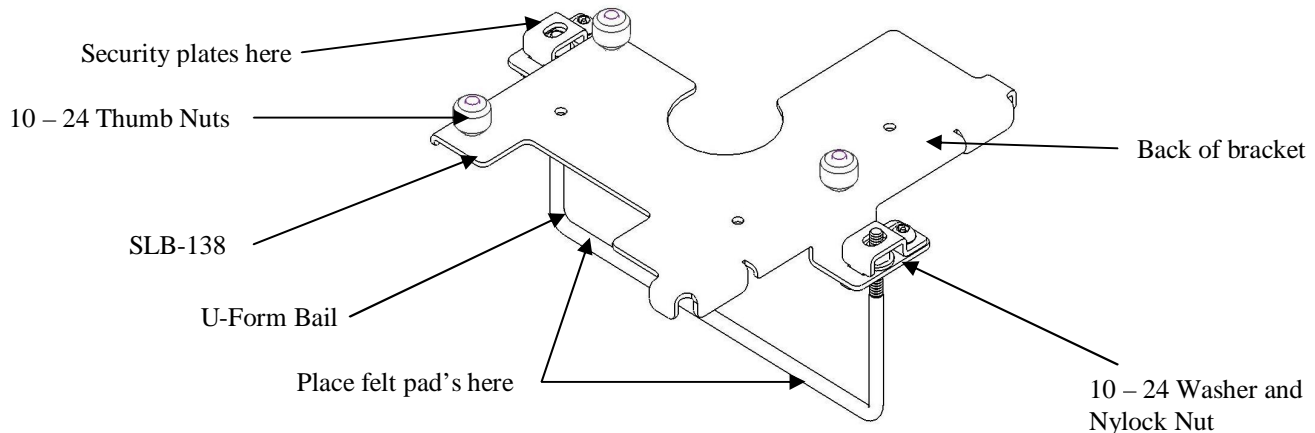

INSTALLATION INSTRUCTIONS

1. Turn projector upside down on a flat surface.
2. Place a felt pad around the bail on each end to protect the paint on the projector.
3. Place the bail around the top surface of the projector so the threads are pointed toward the bottom of the projector and the threads are in the front and back of the projector.
4. Place the interface bracket onto the bottom of the projector so the tabs are on the back and the sides of the rear rubber feet on the projector and the threaded bail threads line-up and go through the holes in the interface bracket.
5. Using the two #10 washers and nylock nuts secure the two the bail and bracket together.
CAUTION: When attaching the mount be careful not to over tighten nylock nuts, secure until bail just touches the projector. The unit will need room to expand a little when it gets warm.
6. Add Security Plates over 10 - 24 nylock nuts and secure with screws as desired after installed to RPA.
7. See RPA and/or Smart-Lift™ Instructions.

8802-000211 RevA
03/14/07