

INSTALLATION INSTRUCTIONS



SSB-058, SSM-058, SLB-058 and SLM-058 Interface Brackets

SSB-058, SSM-058, SLB-058 and SLM-058 Interface Brackets are designed for use with Chief® Series Projector Mounts. See the specific installation instructions provided with the mount for additional installation information. Unpack carton and verify kit contents. If any listed parts are missing, immediately contact a Chief Customer Service representative.



WARNING: IMPROPER INSTALLATION CAN LEAD TO EQUIPMENT FALLING CAUSING SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT substitute hardware. Use only hardware supplied by manufacturer!

- | | |
|--|---|
| (1) Interface Bracket | (2) Spacer, Nylon, 1/2" x .194 x 3/8" |
| (4) 10-24 Thumb Nuts ** | (1) Screw, Phillips Flat head, M4x 12mm |
| (1) All-Points Security Kit | (1) Screw, Phillips Flat head, M4x 16mm |
| (1) Washer, Flat, M4 | (1) Screw, Phillips Pan head, M4x 16mm |
| (1) Spacer, Nylon, 1/2" x .275 x 3/16" | |

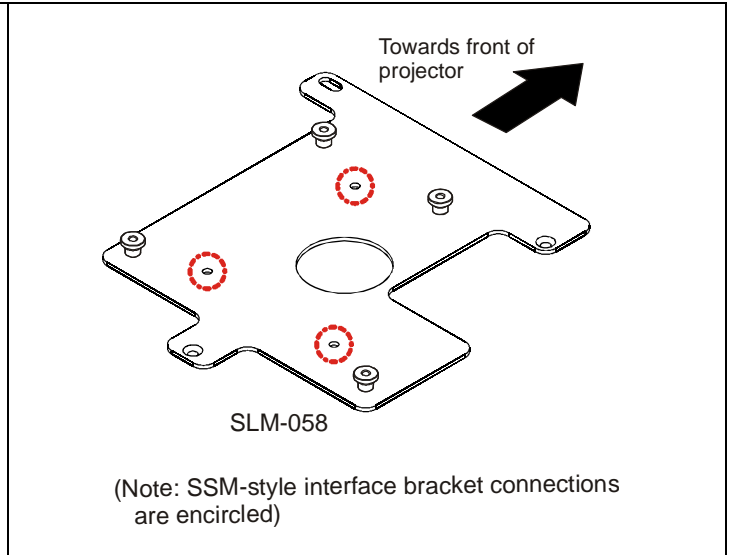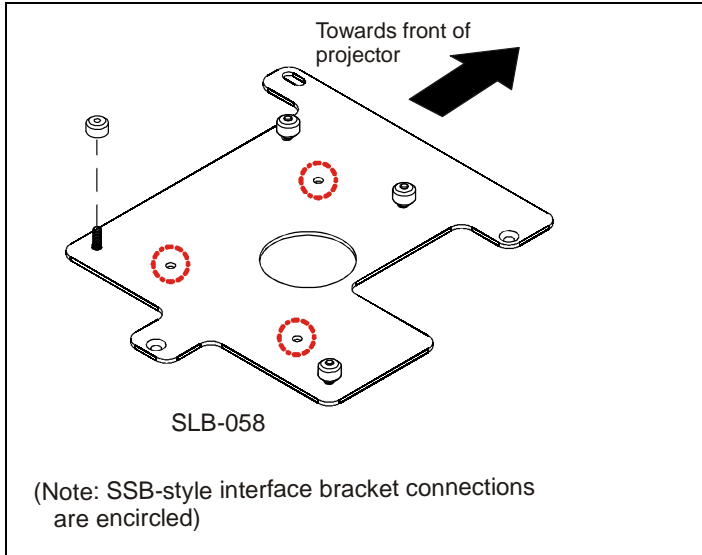

**Only used when installing SLB/SSB interface brackets.

NOTE: Specific to SSB-style and SSM-style interface bracket installation, all appropriate screws come pre-installed as reflected in the encircled locations above. DO NOT attempt to substitute and USE ONLY this pre-installed hardware for SSB-style and SSM-style interface bracket installation.

Installation Instructions



WARNING: OVER TIGHTENING OF SCREWS CAN DAMAGE PARTS AND CAN LEAD TO SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT over tighten screws when installing interface brackets.

NOTE: Step 1 is only required when installing an SLB/SSB interface bracket. If an SLM/SSM bracket is being installed, proceed to step 2.

1. Screw thumb screws onto the 10-24 x 5/8" Phillips pan head screws. DO NOT fully tighten thumb screws at this time.
2. Turn projector upside down on a flat surface.
3. Place the nylon spacers over the threaded inserts in the bottom of the projector (i.e., position them so the short one is on the raised surface and the other two are on the lower surface to keep the bracket level).
4. Place the interface bracket onto the nylon spacers on the bottom of the projector and align the mounting holes in the bracket with the nylon spacers.
5. Using the three M4 screws and one M4 washer, place the washer around the pan head screw and start the two flat head screws into the two counter sink holes in the threaded inserts. Tighten all three fasteners at this time, securing the bracket to the projector.

NOTE: Security screws can be substituted when mounting interface bracket to projector by using the parts and installation instructions in the All-Points Security Kit.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.



Milestone AV Technologies, and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.