

INSTALLATION INSTRUCTIONS

SSB-188, SSM-188, SLB-188 and SLM-188 Interface Brackets


SSB-188, SSM-188, SLB-188 and SLM-188 Interface Brackets are designed for use with Chief® Series Projector Mounts. See the specific installation instructions provided with the mount for additional installation information.

Unpack carton and verify kit contents. If any listed parts are missing, immediately contact a Chief Customer Service representative.



WARNING: IMPROPER INSTALLATION CAN LEAD TO EQUIPMENT FALLING CAUSING SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT substitute hardware. Use only hardware supplied by manufacturer!

- | | |
|-----------------------------|--|
| (1) Interface Bracket | (1) Spacer, Nylon, 1/2" x .260 x 3/16" |
| (4) 10-24 Thumb Nuts ** | (1) Screw, Flat head, M3 x 10mm |
| (1) All-Points Security Kit | (2) Screw, Pan head, M3 x 10mm |
| | (2) Washer, Flat, M3 |

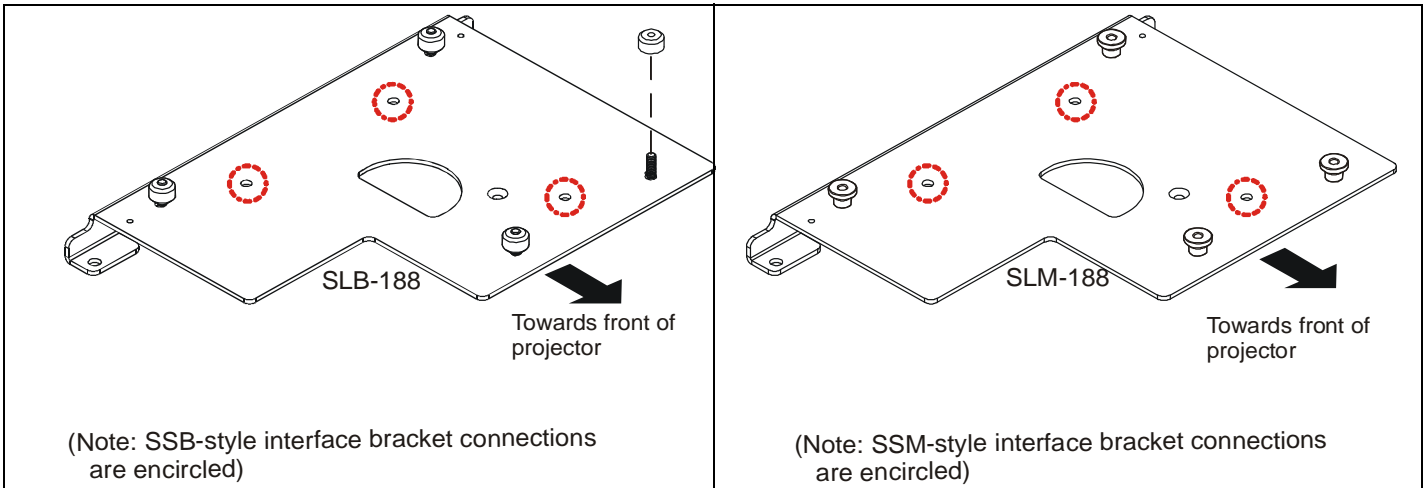

**Only used when installing SLB/SSB interface brackets.

NOTE: Specific to SSB-style and SSM-style interface bracket installation, all appropriate screws come pre-installed as reflected in the encircled locations above. DO NOT attempt to substitute and USE ONLY this pre-installed hardware for SSB-style and SSM-style interface bracket installation.

Installation Instructions



WARNING: OVER TIGHTENING OF SCREWS CAN DAMAGE PARTS AND CAN LEAD TO SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT over tighten screws when installing interface brackets.

NOTE: Step 1 is only required when installing an SLB/SSB interface bracket. If an SLM/SSM bracket is being installed, proceed to step 2.

1. Screw thumb screws onto 10-24 x 5/8" Phillips pan head screws. DO NOT fully tighten thumb screws at this time.
2. Turn projector upside down on a flat surface.
3. Unscrew and remove the two rear adjustable feet.
4. Place the 3/16" nylon spacer over the front threaded insert in the bottom of the projector.
5. Place the interface bracket onto the projector and align the front hole in the bracket with the nylon spacer and the rear holes in the bracket with the rear threaded inserts in the back of the projector.
6. Using the M3 x 10mm flat head mounting screws, position screws into the front hole and place the M3 x 10mm pan screws with M3 washers in the rear mounting holes. Tighten all fasteners at this time, securing the bracket to the projector.

NOTE: Security screws can be substituted when mounting interface bracket to projector by using the parts and installation instructions in the All-Points Security Kit.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.



Milestone AV Technologies, and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.