

INSTALLATION INSTRUCTIONS

SSB-735, SSM-735, SLB-735 and SLM-735 Interface Brackets



SSB-735, SSM-735, SLB-735 and SLM-735 Interface Brackets are designed for use with Chief® Series Projector Mounts. See the specific installation instructions provided with the mount for additional installation information.

Unpack carton and verify kit contents. If any listed parts are missing, immediately contact a Chief Customer Service representative.



WARNING: IMPROPER INSTALLATION CAN LEAD TO EQUIPMENT FALLING CAUSING SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT substitute hardware. Use only hardware supplied by manufacturer!

- | | |
|---------------------------------------|---|
| (1) Interface Bracket | (1) Screw, Flat Head Machine, M4 x 20mm |
| (4) 10-24 Thumb Nuts ** | (3) Screw, Pan Head Machine, M4 x 16mm |
| (1) All-Points Security Kit | (3) Washer, Flat, M4 |
| (3) Spacer, Nylon, 1/2" x .219 x 1/4" | (1) Spacer, Nylon, 1/2" x .194 x 1/2" |

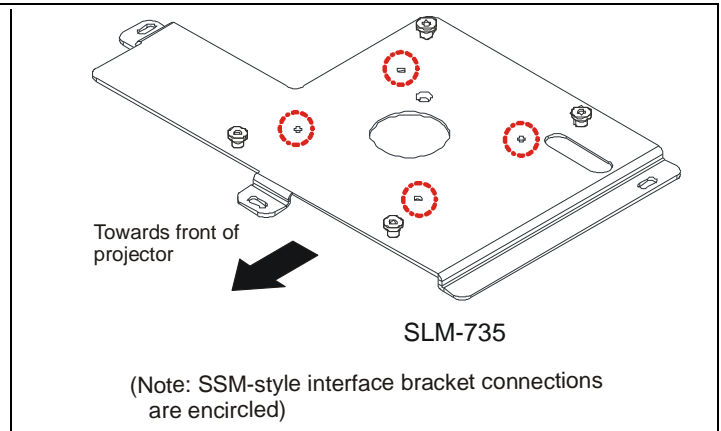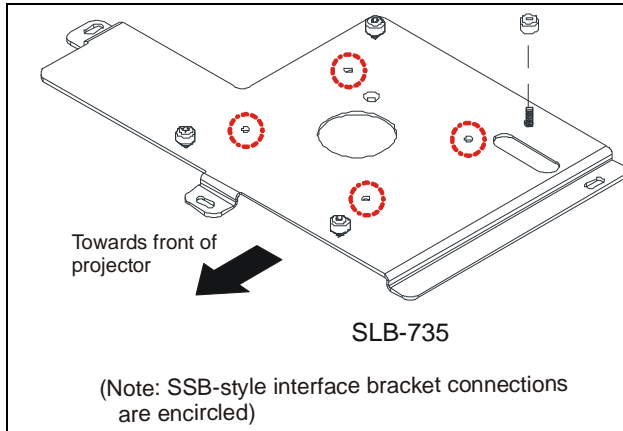

**Only used when installing SLB/SSB interface brackets.

NOTE: Specific to SSB-style and SSM-style interface bracket installation, all appropriate screws come pre-installed as reflected in the encircled locations above. DO NOT attempt to substitute and USE ONLY this pre-installed hardware for SSB-style and SSM-style interface bracket installation.

Installation Instructions



WARNING: OVER TIGHTENING OF SCREWS CAN DAMAGE PARTS AND CAN LEAD TO SERIOUS PERSONAL INJURY AND DAMAGE TO EQUIPMENT! DO NOT over tighten screws when installing interface brackets.

NOTE: Step 1 is only required when installing an SLB/SSB interface bracket. If an SLM/SSM bracket is being installed, proceed to step 2.

1. Screw thumb screws onto 10-24 x 5/8" Phillips pan head screws. DO NOT fully tighten thumb screws at this time.
2. Turn projector upside down on a flat surface.
3. Place a 1/2" nylon spacer over the center-threaded hole in the bottom of the projector so it aligns with the hole in the bracket that uses the flat head screw.
4. Place a 1/4" nylon spacer over the front, side and over the back threaded hole in the bottom of the projector.
5. Place the interface bracket onto the bottom of the projector and align the mounting holes in the bracket with the nylon spacers on the bottom of the projector.
6. Using the M4 x 20mm flat head screw, place screw into the center-mounting hole and leave loose at this point.
7. Using the remaining M4 x 16mm mounting screws and washers, place screws with washers into the mounting holes. Tighten all fasteners at this time to secure interface bracket to projector.

NOTE: Security screws can be substituted when mounting interface bracket to projector by using the parts and installation instructions in the All-Points Security Kit.

Chief® is a registered trademark of Milestone AV Technologies. All rights reserved.



Milestone AV Technologies, and its affiliated corporations and subsidiaries (collectively, "Milestone"), intend to make this manual accurate and complete. However, Milestone makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Milestone makes no representation of warranty, expressed or implied, regarding the information contained herein. Milestone assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.