



NON-INVERTED PROJECTOR BRACKET UPC-13

Unpack carton and check contents:

- (1) RPA-000
- (1) Hanging Bracket
- (1) Cradle Bracket
- (6) 10-24 Thumb Nuts
- (4) 10-24 Nylock Nuts
- (4) #10 Flatwashers
- (4) Rubber Bumpers

Installation Instructions:

1. Install bracket cradle by carefully sliding it from the rear of the projector and along its' edges forward until vertical legs move past control panel at side and stop it just before it reaches the forward feet of projector. Note! Cut out of cradle has matching clearance around operator control panel on top of projector. It should be exposed for use in an inverted installation.


2. Install four (4) rubber bumpers into four inner, .28 diameter holes of hanging bracket.

3. Raise two adjustable feet by pushing foot release in, this will allow placing of hanging bracket on cradle studs.

4. Align four (4) outer, .25 diameter holes of hanging bracket with four (4) 10-24 by .5 inch long studs in the cradle. Install four (4) 10-24 nylock nuts with washers onto studs and tighten moderately. Rubber bumpers push against the projector holding bracket in place. Drop feet back down onto tabs.

5. Review RPA instructions for final mounting. Note! The operator touch control panel of projector would face down when installed in UPC-13.

The UPC-13 will fit the 3M-8625.

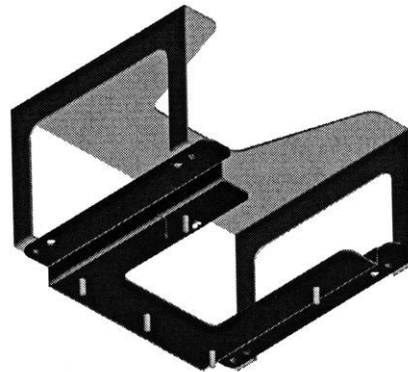

CAUTION: IMPROPER INSTALLATION MAY RESULT IN SERIOUS PERSONAL INJURY!

The overhead support **must** be capable of supporting **five times** the weight of the mount **and** equipment combined. If it cannot support this weight, the ceiling **must** be reinforced.

