

INSTALLATION INSTRUCTIONS

ELEHIT-SM Static Wall Mount

Prior to assembly, unpack carton completely and verify contents. If you are missing any of the following components, please contact Technical Support at 1-800-776-5768.



Figure 1

- | | |
|------------------------------|---------------------------------------|
| (1) Plasma Static Wall Mount | (2) 10-24 x .5 FH Undercut Screw |
| (2) Latching Flag | (2) 10-24 Nylock Nut |
| (6) Mounting Buttons-Silver | (2) Washer, Nylon |
| | (6) M6 x 25mm Phillip Head Cap Screws |

CAUTION! PLASMA DISPLAYS ARE EXTREMELY FRAGILE.

1. Secure latching flags to the inside mounting hole of the mount using two 10-24 x .5 FH undercut screws, two Nylon washers, and two 10-24 Nylock nuts (see Figure 2). Tighten until friction will hold the flags in place.
2. Attach mounting buttons to plasma using six M6 x 25 cap screws (see Figure 3 and Figure 4).

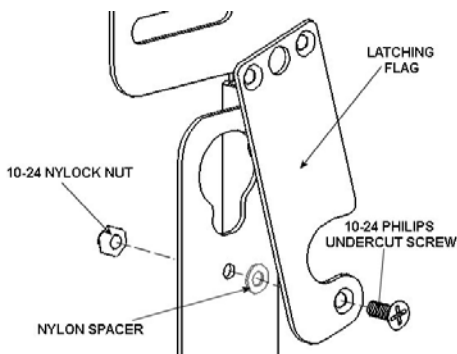


Figure 2

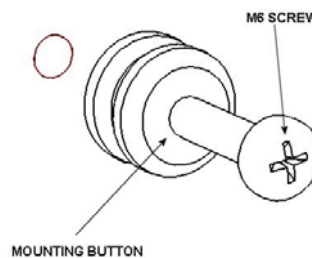


Figure 3

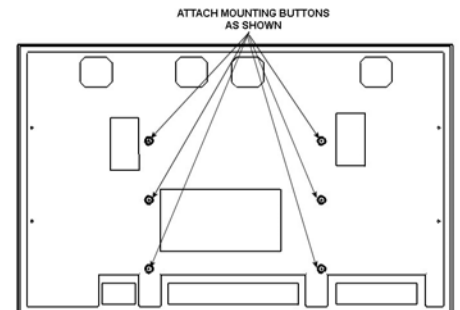


Figure 4

WARNING!

ALL COMPONENTS MUST BE SECURELY FASTENED TO A STRUCTURAL MEMBER CAPABLE OF SUPPORTING 4 TIMES THE COMBINED WEIGHT OF ALL COMPONENTS PLUS THE EQUIPMENT BEING MOUNTED. IF IT CANNOT SUPPORT THIS WEIGHT, THE STRUCTURE MUST BE REINFORCED.

THE MAXIMUM WEIGHT TO BE INSTALLED ON THE MOUNT IS 150 POUNDS (68.04 KG).

3. Securely anchor the static mount to wall using wall studs or supporting framework (see WARNING).
4. Make sure both latches are lowered to the side before attempting to place the plasma on the mount.
5. With the aid of another person, lift the display up to the mount, align the mounting buttons on the plasma with the teardrop slots in the mount, and set the display into place (see Figure 4).

CAUTION! IF THE LATCHES WILL NOT TRAVEL TO THE FULL UPRIGHT POSITION, REMOVE AND RESEAT THE DISPLAY.

6. While supporting the display, raise both latches to secure the display.