

INSTALLATION INSTRUCTIONS

ELESAM42-SM Static Wall Mount

Prior to assembly, unpack carton completely and verify contents. If you are missing any of the following components, please contact Technical Support at 1-800-776-5768.

- (1) BRACKET, PLASMA MOUNTING, STATIC
- (6) SCREWS, M8 X 35MM BUTTON HEAD CAP
- (6) MOUNTING BUTTONS, NYLON STEPPED, PAN STYLE
- (1) ALLEN KEY, 5MM
- (2) LATCHING FLAG
- (2) 10-24 X .5 FH UNDERCUT SCREW
- (2) NYLON WASHER
- (2) 10-24 NYLOCK NUT

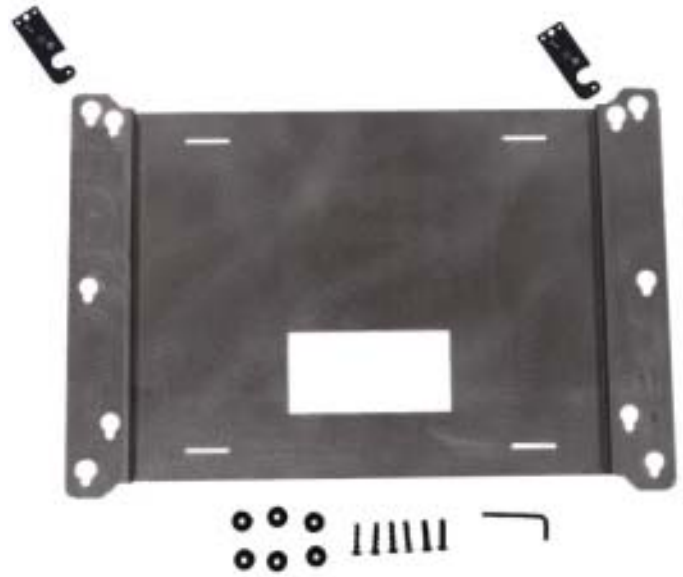


Figure 1

CAUTION: PLASMA DISPLAYS ARE EXTREMELY FRAGILE!

READ INSTALLATION INSTRUCTIONS COMPLETELY BEFORE PROCEEDING

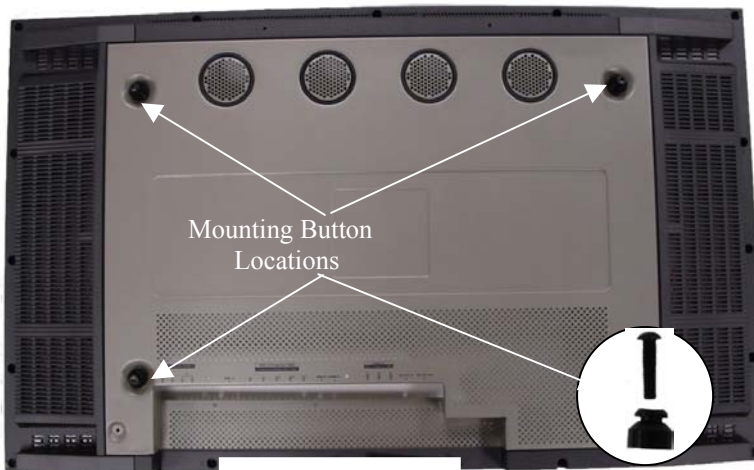


Figure 2



Figure 3

1. Attach four mounting buttons to plasma using four M8 x 35mm button head cap screws provided (see Figure 2).
2. Secure two latching flags to Plasma Static Mount using one 10-24 x .5 FH Undercut Screw, one Nylon Washer, and one 10-24 Nylock Nut for each flag (See Figure 3).

3. Securely anchor the plasma static mount to the wall using wall studs or supporting framework (See Figure 4).
4. Make sure the flags are lowered before attempting to place the plasma on the mount.
5. With the aid of another person, lift the plasma display up to the mount, align the mounting buttons on the plasma with the teardrop slots in the mount, and set the plasma into place.
6. Position (raise) the flags to secure the plasma.

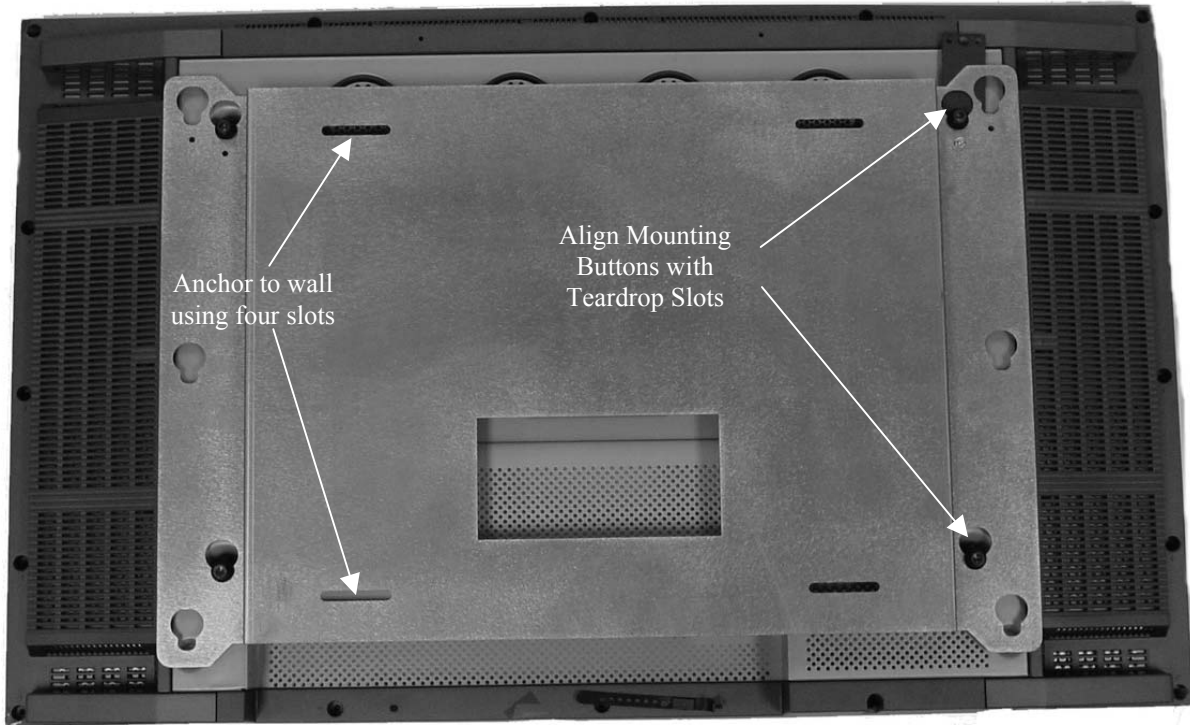


Figure 4