
INSTALLATION INSTRUCTIONS

ELESAM50-PRO Mounting Bracket

Prior to assembly, unpack carton completely and verify contents. If you are missing any of the following components, please contact Technical Support at 1-800-776-5768.

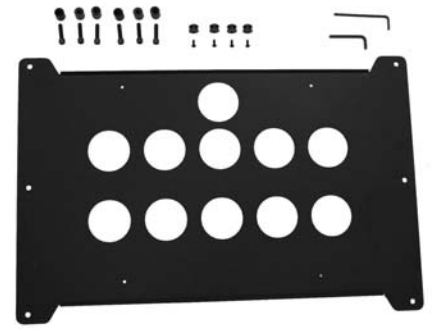


Figure 1

- | | |
|--------------------------------------|---------------------------------------|
| (1) PLASMA STATIC MOUNT LEFT BRACKET | (4) MOUNTING BUTTON |
| (6) SCREW M8 X 40MM BUTTON HEAD CAP | (4) SCREW, 10-24 X ½" BUTTON HEAD CAP |
| (6) SPACER, 1" NYLON | (1) ALLEN KEY, 1/8" |
| (1) ALLEN KEY, M5 | |

CAUTION: PLASMA DISPLAYS ARE EXTREMELY FRAGILE!

**READ INSTALLATION INSTRUCTIONS COMPLETELY
BEFORE PROCEEDING**



Figure 2

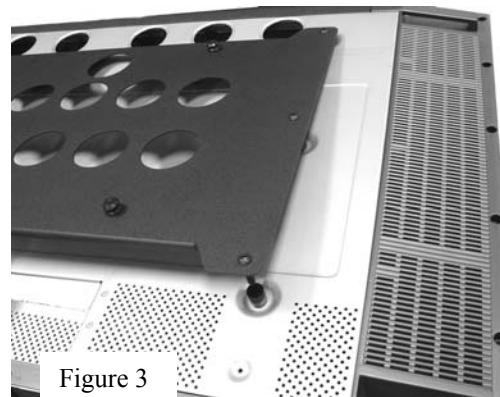


Figure 3

1. Using four 10-24 X ½" button head cap screws, secure mounting buttons to bracket (four places). See Figure 2. Allen key provided.
2. Place Nylon spacers on mounting holes, align hole pattern on brackets with pattern on back of Plasma Display, and secure using six M8 X 40mm button head cap screws (see Figure 3). Be careful not to over tighten screws.
3. Confirm that the mount latching flags are lowered. With the aid of another person, lift plasma display up to the mount. Align bracket mounting buttons with teardrop slots in the mount and set plasma into place.
4. Raise latching flags on the mount to secure plasma display, making sure latches are completely engaged.