

INSTALLATION INSTRUCTIONS

ELESAM-SM Static Wall Mount

Prior to assembly, unpack carton completely and verify contents. If you are missing any of the following components, please contact Technical Support at 1-800-776-5768.

- (1) PLASMA STATIC WALL MOUNT
- (4) MOUNTING BUTTONS-NYLON
- (4) M8-1.25 X 35MM BHCS
- (1) M5 ALLEN KEY
- (2) LATCH, SAFETY
- (2) 10-24 X .5 FH UNDERCUT SCREW
- (2) WASHER, NYLON
- (2) 10-24 Nylock Nut

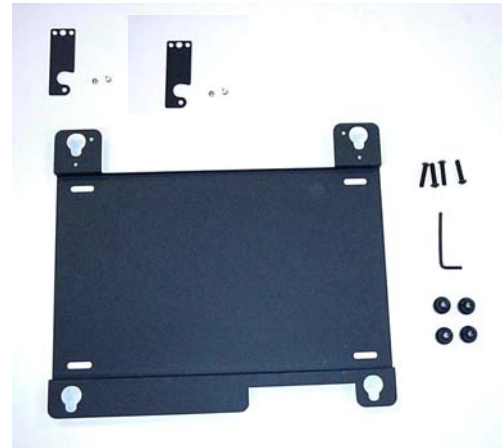


Figure 1

CAUTION: PLASMA DISPLAYS ARE EXTREMELY FRAGILE!

READ INSTALLATION INSTRUCTIONS COMPLETELY BEFORE PROCEEDING

1. Using a 10-24 flat head cap screw inserted from chamfered hole side of latching flag, install flag using nylock nut (see figure 2) tighten nut until the flag will hold itself in place using friction.
2. Place nylon mounting buttons on mounting holes and attach using the M8-1.25 x 35 mm BHCS (see figure 2).

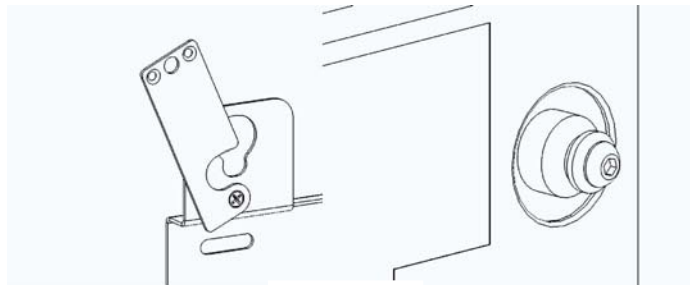


Figure 2

3. Mount plasma static mount onto wall utilizing wall studs or supporting framework. The mount, when anchored in place, must be capable of supporting 4 times the weight of the plasma and mount.
4. With the aid of another person, lift plasma display up to the Chief mount, aligning mounting buttons with the teardrop slots and setting into place
5. Raise safety latch to secure plasma in place.