

# INSTALLATION INSTRUCTIONS

## ELESAN32-SM Static Wall Mount

Prior to assembly, unpack carton completely and verify contents. If you are missing any of the following components, please contact Technical Support at 1-800-776-5768.

- (1) PLASMA STATIC WALL MOUNT
- (6) MOUNTING BUTTONS-BLACK NYLON
- (6) M5 X 35MM PHILLIPS HEAD CAP SCREWS
- (2) LATCH, SAFETY
- (2) 10-24 X .5 FH UNDERCUT SCREW
- (2) WASHER, NYLON
- (2) 10-24 Nylock Nut

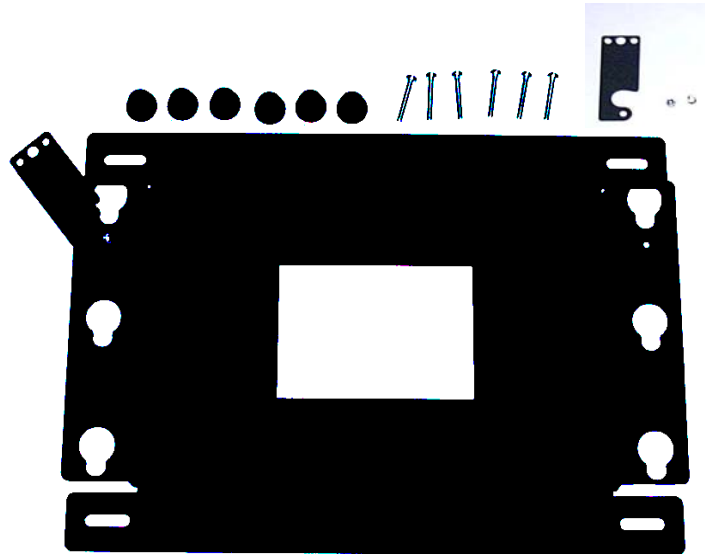


Figure 1

**CAUTION: PLASMA DISPLAYS ARE EXTREMELY FRAGILE!**

### ***READ INSTALLATION INSTRUCTIONS COMPLETELY BEFORE PROCEEDING***

1. Using a 10-24 flat head cap screw inserted from chamfered hole side of each latching flag, install flags using Nylock nut. Tighten nut until the flag will hold itself in place using friction.
2. Attach mounting buttons to plasma using six M5 x 35 Philips head cap screws provided (see Figure 2 & Figure 3).

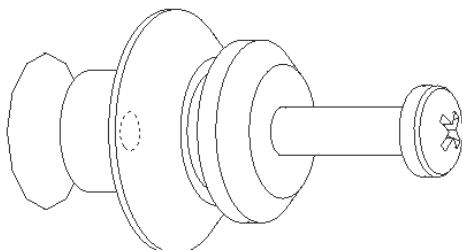


Figure 2


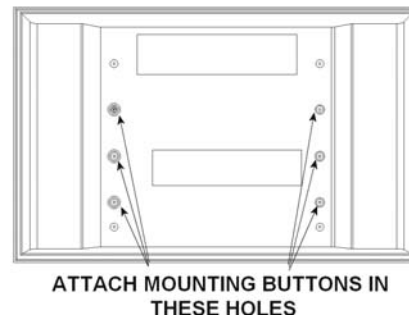


Figure 3

# WARNNG!

**ALL COMPONENTS MUST BE SECURELY FASTENED TO A STRUCTURAL MEMBER CAPABLE OF SUPPORTING 4 TIMES THE COMBINED WEIGHT OF ALL COMPONENTS PLUS THE EQUIPMENT BEING MOUNTED. IF IT CANNOT SUPPORT THIS WEIGHT, THE STRUCTURE MUST BE REINFORCED. THE MAXIMUM WEIGHT TO BE INSTALLED ON THE MOUNT IS 150 POUNDS (68.04 KG).**

2. Securely anchor plasma static mount to the wall using wall studs or supporting framework (see WARNING).
3. Make sure the flags are lowered to the side before attempting to place the plasma on the mount.
4. With the aid of another person, lift the plasma display up to the mount, align the mounting buttons on the plasma with the teardrop slots in the mount, and set the plasma into place (see Figure 4).
5. Position (raise) the flags to secure the plasma (see Figure 4).

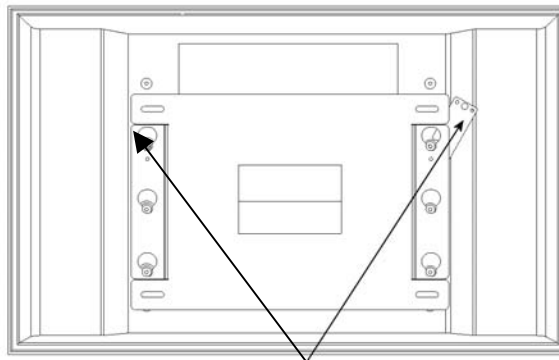

Raise Flags to Secure Display

Figure 4