

# INSTALLATION INSTRUCTIONS

## ELESONY-SM Static Wall Mount

Prior to assembly, unpack carton completely and verify contents. If you are missing any of the following components, please contact Technical Support at 1-800-776-5768.

- (1) PLASMA STATIC WALL MOUNT
- (2) SCREW, 10-24 X .5 FH UNDERCUT
- (2) LATCH, SAFETY
- (2) NUT, NYLOCK, 10-24
- (2) NYLON WASHER

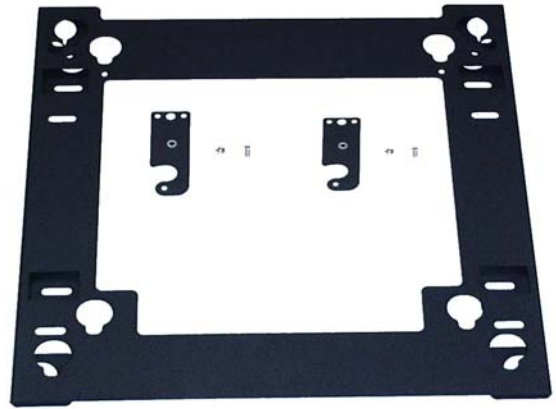


Figure 1

**CAUTION: PLASMA DISPLAYS ARE EXTREMELY FRAGILE!**

**READ INSTALLATION INSTRUCTIONS COMPLETELY BEFORE PROCEEDING**

**BEFORE PROCEEDING:** Unpack the carton, verify contents shown in Figure 1 and read installation instructions completely. If you are missing any of the listed components, please contact Customer Service at 1-800/582-6480.

## **CAUTION!** PLASMA DISPLAYS ARE EXTREMELY FRAGILE.

THIS MOUNT IS DESIGNED SO ONE MOUNT WILL WORK FOR THE SONY PFM32, SONY PFM42, AND SONY PFM50 PLASMA DISPLAYS. THERE ARE 3 MOUNTING PATTERNS ON THE MOUNT CORRESPONDING TO THE MOUNTING BUTTON PATTERN ON THE BACK OF THE RESPECTIVE PLASMA. ONE SIDE OF THE MOUNT HAS A PATTERN FOR THE 32 AND A PATTERN FOR THE 42-INCH PLASMA WHILE THE OTHER SIDE OF THE MOUNT HAS A MOUNTING PATTERN FOR THE 50-INCH PLASMA. THE LATCHING FLAG MUST BE ATTACHED TO THE MOUNT IN THE PROPER LOCATION FOR YOUR INDIVIDUAL PLASMA.

1. Attach latching flags to mount, using the proper position on the mount (see Figure 2, Figure 3, Figure 4, & Figure 5), with the latching flag on the inside of the mount. Tighten Nylock nut until friction is sufficient to hold the latch in place.

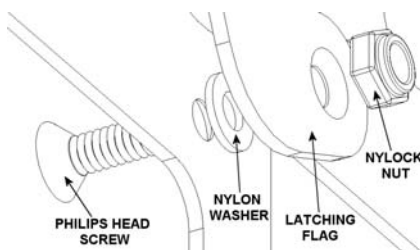


Figure 2

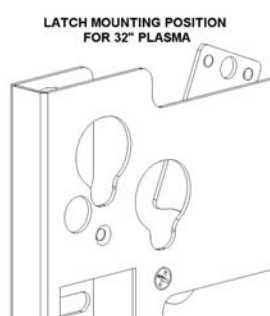


Figure 3

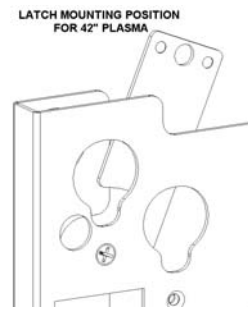


Figure 4

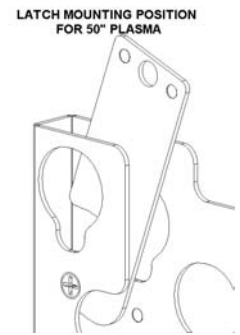


Figure 5

# INSTALLATION INSTRUCTIONS

## WARNING!

**ALL COMPONENTS MUST BE SECURELY FASTENED TO A STRUCTURAL MEMBER CAPABLE OF SUPPORTING 4 TIMES THE COMBINED WEIGHT OF ALL COMPONENTS PLUS THE EQUIPMENT BEING MOUNTED. IF IT CANNOT SUPPORT THIS WEIGHT, THE STRUCTURE MUST BE REINFORCED. THE MAXIMUM WEIGHT TO BE INSTALLED ON THE MOUNT IS 150 POUNDS (68.04 KG).**

2. Mount plasma static mount onto wall using wall studs or supporting framework with the proper face of the mount away from the wall for your respective plasma (see WARNING, Figure 6, & Figure 7).

ATTACH MOUNT TO WALL IN THIS MANNER  
FOR THE 32 AND 42 INCH PLASMAS

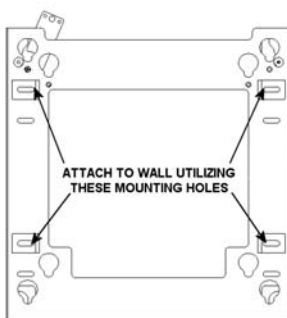


Figure 6

ATTACH MOUNT TO WALL IN THIS MANNER  
FOR THE 50" PLASMA

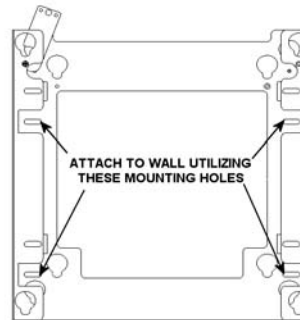


Figure 7

3. Turn latching flags to the side prior to setting plasma in place.
4. With the aid of another person, lift plasma display up to the mount, aligning mounting buttons with the teardrop slots dependent upon the model plasma (see Figure 8 & Figure 9).

USE INSIDE SLOTS FOR 32" PLASMA  
USE OUTSIDE SLOTS FOR 42" PLASMA

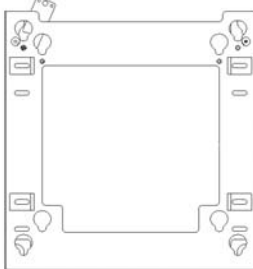


Figure 8

RAISE LATCH TO SECURE PLASMA

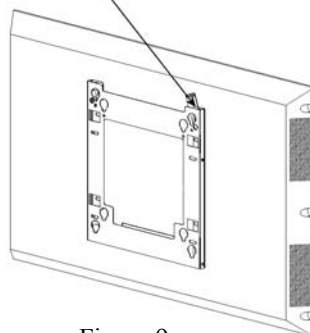


Figure 9

5. Raise safety latch to secure plasma in place (see Figure 10).

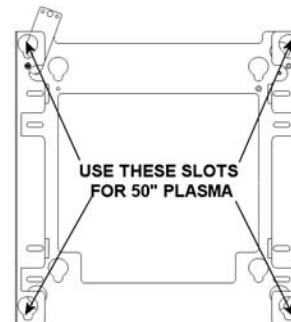


Figure 10