



INSTALLATION INSTRUCTIONS

PSM-2042

PLASMA DISPLAY STATIC MOUNT

Prior to assembly, unpack carton completely and verify contents.

If you are missing any of the following components, please contact Customer Service at 1-800-582-6480

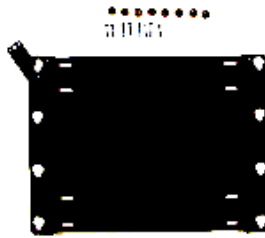


Figure 1

- | | |
|---|---|
| (1) Plasma Static Mount | (8) Mounting Buttons-Yellow |
| (1) Latching Flags (Attached to Mount) | (1) 10-24 x .5 FH Undercut Screws (Attached to Mount) |
| (1) Nylon Washers .500" OD x .312" ID x .0312"
(Attached to Mount) | (1) 10-24 Nylock Nuts (Attached to Mount) |
| (4) Rubber Bumpers (Attached to Mount) | (8) M4 x 25mm Phillips Head Cap Screws |

BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

CAUTION! PLASMA DISPLAYS ARE EXTREMELY FRAGILE.

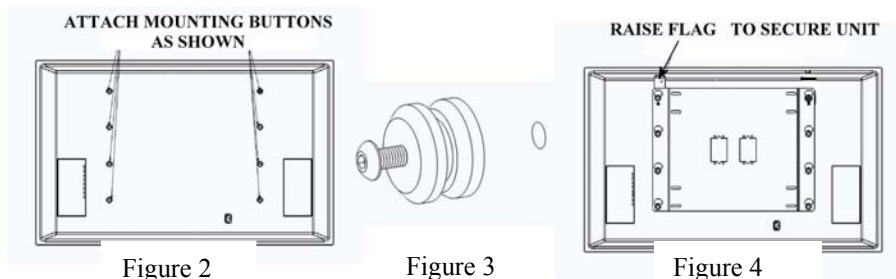


Figure 2

Figure 3

Figure 4

1. Attach mounting buttons to plasma using one Phillips head cap screw per mounting button (see Figure 2 & Figure 3).

WARNING! Your mounting structure must be capable of supporting 4 times the combined weight of the plasma and the mount.

2. Securely anchor the plasma static mount to the wall using wall studs or supporting framework.
3. Make sure the latching flags are lowered to the side before attempting to place the plasma on the mount.
4. With the aid of another person, lift the plasma display up to the mount. Align the mounting buttons on the plasma with the teardrop slots in the mount and set the plasma into place (see Figure 4).
5. Raise the latching flags to secure the plasma.