



INSTALLATION INSTRUCTIONS SLB-007 HANGER BRACKET


for PROXIMA DS2, DX2,

Prior to assembly, unpack carton and verify contents.

For security installation, use security hardware package inside the ALL-POINTS™ Security Kit. Follow the instructions below for attaching the bracket to the projector using either standard hardware or security hardware.

If you are missing any of the following components, please contact Customer Service at 1-800-582-6480

- | | | | |
|-----|---------------------------------|-----|-----------------|
| (1) | SLB-007 Bracket | (1) | M4 -20mm Screws |
| (5) | 10 - 24 Thumb Nuts | (3) | M3 -16mm Screws |
| (4) | ½" x .190" x 3/8" Nylon Spacers | (1) | M4 Flatwasher |
| (3) | M3 Flatwasher | | |

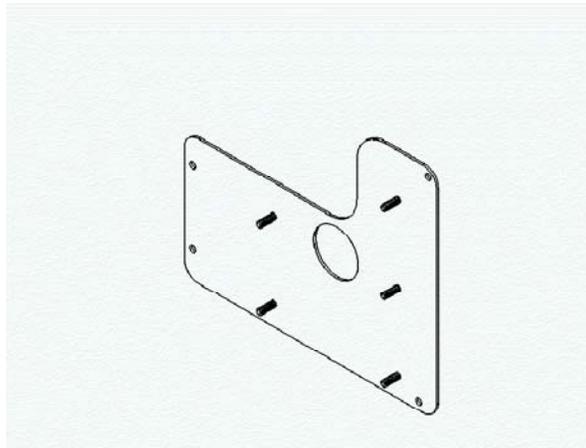

INSTALLATION INSTRUCTIONS

1. Turn projector upside down.
2. Remove the rear black hard plastic foot from the projector using a small flat screw driver and pry it up from the projector housing. This foot is held on by two-face tape.
3. Remove the screw under the black plastic foot.
4. Remove the rear adjustable foot from the projector.
5. Remove the two small screws in the front of the bottom of the projector housing.
6. Place the four 3/8" nylon spacers over the four threaded inserts in the bottom of the projector, over each screw hole you just removed the screws from.
7. Place the SLB-007 bracket onto the four ½" nylon spacers on the bottom of the projector lining up the four mounting holes in the bracket with the four nylon spacers.
8. Using the M4 x 20mm screw and flatwasher, place this into the hole were the rear adjustable foot was in. Using the remaining three M3 x 16mm screws place these three screws and flatwashers into the remaining three holes and tighten all fasteners at this time, securing the bracket to the projector. **CAUTION: When attaching the mount be careful not to overtighten screws.**
9. See RPA and/or Smart-Lift™ Instructions.