



## INSTALLATION INSTRUCTIONS

### SLB-3010 HANGER BRACKET


for JVC DLA-DS1U, DLA-G3010ZGA,

Prior to assembly, unpack carton and verify contents.

For security installation, use security hardware package inside the ALL-POINTS™ Security Kit. Follow the instructions below for attaching the bracket to the projector using either standard hardware or security hardware.

If you are missing any of the following components, please contact Customer Service at 1-800-582-6480

- |     |                    |     |                             |
|-----|--------------------|-----|-----------------------------|
| (1) | SLB-3010 Bracket   | (1) | M6 -12mm Screws             |
| (6) | 10 - 24 Thumb Nuts | (2) | M6 -25mm Screw              |
| (3) | M6 Flat Washers    | (2) | ½" X .316 X ½" Nylon Spacer |

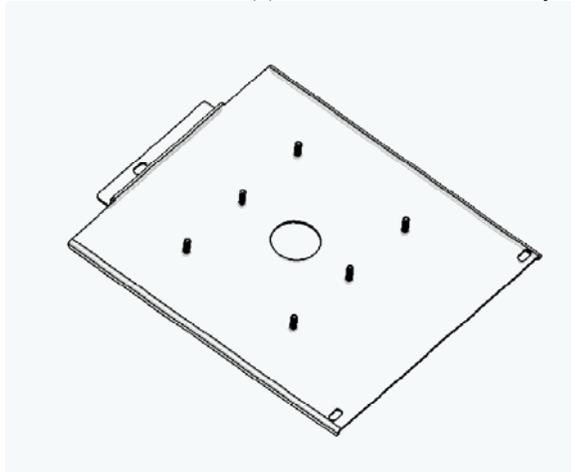

### INSTALLATION INSTRUCTIONS

1. Turn projector upside down.
2. Remove the rear adjustable foot; you may need to remove the rubber bumper from the foot to gain access to the head of the hex bolt. (This threaded foot has three sets of threads with a space between each set so you may need to lift the foot to start the next set of threads; this foot is approximately 3 inches long).
3. Remove the rubber bumper from the opposite sides rear leg, to gain access to the treaded insert hidden below the bump on this leg.
4. Place the ½" nylon spacers over the threaded inserts in the bottom of the projector that the rear adjustable foot was removed from to make this the same height as the opposite rear foot.
5. Place the SLB-3010 bracket onto the bottom of the projector lining up the three mounting holes in the bracket with the one ½" nylon spacer and the remaining two treaded inserts in the projector.
6. Using the three M6 screws flat head screws start them into the three threaded inserts and tighten all fasteners at this time, securing the bracket to the projector. **CAUTION: When attaching the mount be careful not to overtighten screws.**
7. See RPA and/or Smart-Lift™ Instructions.