

# INSTALLATION INSTRUCTIONS

## ELEPHIL42-PRO(L) Mounting Bracket

Prior to assembly, unpack carton completely and verify contents. If you are missing any of the following components, please contact Technical Support at 1-800-776-5768.

- (1) PLASMA STATIC BRACKET
- (4) MOUNTING BUTTON
- (4) M5 X 12mm BHCS
- (4) 10-24 BHCS
- (1) 3mm Allen Key
- (1) 1/8" Allen Key

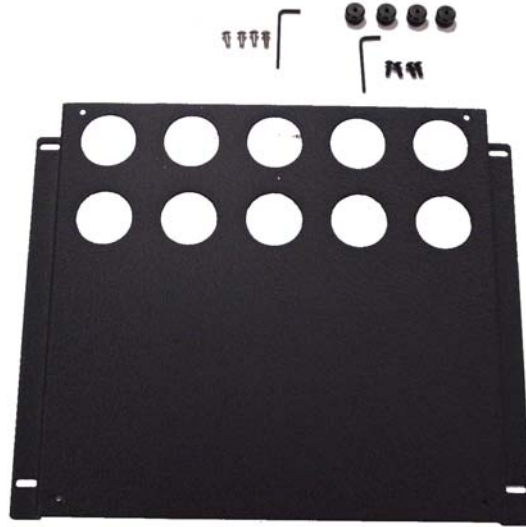


Figure 1

**CAUTION: PLASMA DISPLAYS ARE EXTREMELY FRAGILE!**

### BEFORE PROCEEDING, READ INSTALLATION INSTRUCTIONS COMPLETELY

1. Attach mounting buttons to bracket utilizing a 10-24 button head cap screw inserted from back side of bracket (See Figures 2 & 3).
2. Place plasma bracket on plasma, with the bent flanges of the bracket in the slots on the plasma, and attach utilizing the M5 button head cap screws, ensuring not to over-tighten (See Figure 4).
3. With the aid of another person, lift Plasma Display up to the Chief Mount, aligning buttons of mounting brackets with slots in the Chief Mount.
4. Lower safety catch on the Chief Mount to secure Plasma Display, making sure catch is completely engaged.

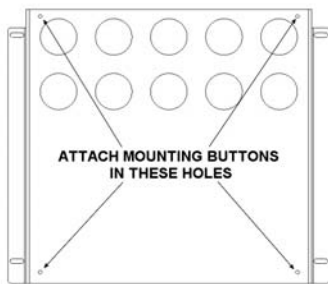


Figure 2

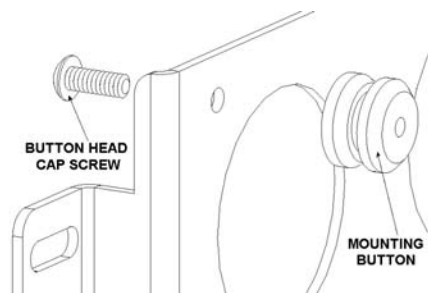


Figure 3

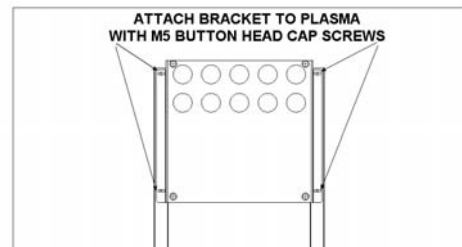


Figure 4