

INSTALLATION INSTRUCTIONS

ELEZEN50-SM Static Wall Mount

Prior to assembly, unpack carton completely and verify contents. If you are missing any of the following components, please contact Technical Support at 1-800-776-5768.

- (1) PLASMA STATIC WALL MOUNT
- (6) MOUNTING BUTTONS-Green
- (6) SCREWS, M5 x 25mm Button Head Cap
- (2) FLAGS, Latching
- (2) WASHERS, Nylon .500" OD x .312" ID x .0312"
- (2) SCREWS, 10-24 x .5 FH Undercut
- (2) NUTS, Nylock 10-24
- (1) KEY, Allen, 3mm



Figure 1

CAUTION: PLASMA DISPLAYS ARE EXTREMELY FRAGILE!

READ INSTALLATION INSTRUCTIONS COMPLETELY BEFORE PROCEEDING

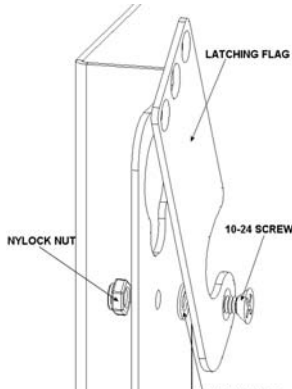


Figure 2

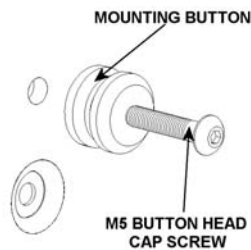


Figure 3

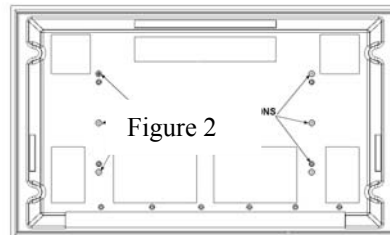


Figure 4

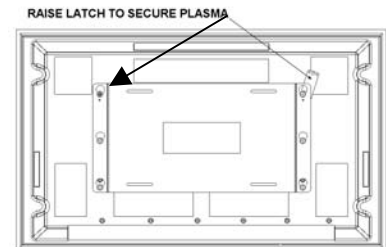


Figure 5

1. Attach latching flags to mount utilizing the two 10-24 Phillips head screw, nylon washers, and the nylock nuts (See Figure 2). Tighten until friction will hold the flag in place.
2. Attach mounting buttons to plasma using four M5 x 25 cap screws provided (See Figures 3 & 4).
3. Mount plasma static mount onto wall utilizing wall studs or supporting framework. The mount, when anchored in place, must be capable of supporting 4 times the weight of the plasma and mount.

CAUTION!

PLASMA DISPLAYS ARE HEAVY AND EXTREMELY FRAGILE.

4. With the aid of another person, lift plasma display up to the Chief mount, aligning mounting buttons with the teardrop slots and setting into place (See Figure 4).
5. Raise safety latches to secure plasma (See Figure 5).