
INSTALLATION INSTRUCTIONS

PLASMA DISPLAY STATIC MOUNT

PSM-2091^{UL}



Figure 1

- | | |
|---|--------------------------------|
| (1) Plasma Static Mount | (1) 10-24 x .5 FH Socket Screw |
| (1) Latching Flag | (1) 10-24 Nylock Nut |
| (1) Nylon Washer .50 OD x .313 ID x .03 | |

BEFORE PROCEEDING: Unpack the carton, verify contents shown in Figure 1 and read installation instructions completely. If you are missing any of the listed components, please contact Customer Service at 1-800/582-6480.

CAUTION! PLASMA DISPLAYS ARE EXTREMELY FRAGILE.

WARNING!

ALL COMPONENTS MUST BE SECURELY FASTENED TO A STRUCTURAL MEMBER CAPABLE OF SUPPORTING 4 TIMES THE COMBINED WEIGHT OF ALL COMPONENTS PLUS THE EQUIPMENT BEING MOUNTED. IF IT CANNOT SUPPORT THIS WEIGHT, THE STRUCTURE MUST BE REINFORCED. THE MAXIMUM WEIGHT TO BE INSTALLED ON THE MOUNT IS 150 POUNDS (68.04 KG).

1. Mount plasma static mount onto wall utilizing wall studs or supporting framework (see WARNING).
2. Using a 10-24 x .5 FH undercut screw, Nylon washer between safety latch and mount, and 10-24 Nylock nut, install the safety latch loose enough to move but tight enough to remain in place when raised.
3. Turn latching flag to the side prior to placing plasma in place.



CHIEF MANUFACTURING INC.
1-800-582-6480 952-894-6280 FAX 952-894-6918
12800 HIGHWAY 13 SOUTH, SUITE 500
SAVAGE, MINNESOTA 55378 USA

2003 Chief Manufacturing
www.chiefmfg.com
01/03

4. With the aid of another person, lift plasma display up to the Chief mount, aligning mounting buttons with the teardrop slots and setting into place (see Figure 2).
5. Raise safety latch to secure plasma in place.

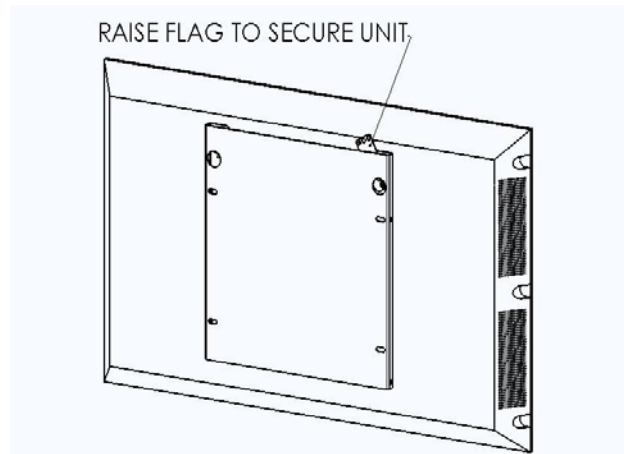


Figure 2