
INSTALLATION INSTRUCTIONS

PLASMA DISPLAY STATIC MOUNT PSM-2096, PSM-2097 AND PSM-2391

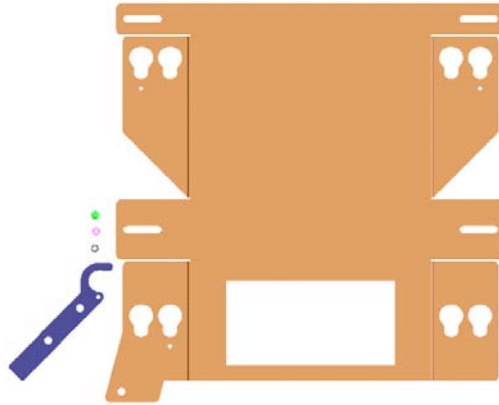


Figure 1

- | | |
|---|----------------------|
| (1) Plasma Static Mount | (1) Nylon Washer |
| (1) Latching Flag | (1) 10-24 Nylock Nut |
| (1) 10-24 x .5 Flat Head Undercut Screw | |

BEFORE PROCEEDING: Unpack the carton, verify contents shown in Figure 1 and read installation instructions completely. If you are missing any of the listed components, please contact Customer Service at 1-800/582-6480.

CAUTION! Plasma Displays are Extremely Fragile.

1. Attach latching flag to mount using the 10-24 undercut screw, Nylon washer, and Nylock nut (see Figure 2). Tighten until friction will hold the flag in place.

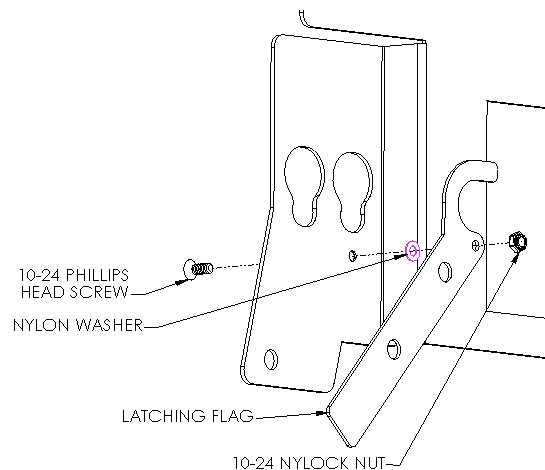


Figure 2



CHIEF MANUFACTURING INC.
1-800-582-6480 952-894-6280 FAX 952-894-6918
8401 EAGLE CREEK PKWY, STE 700
SAVAGE, MINNESOTA 55378 USA

8805-000028 Rev01
2003 Chief
Manufacturing
www.chiefmfg.com
08/04

INSTALLATION INSTRUCTIONS

WARNING

ALL COMPONENTS MUST BE SECURELY FASTENED TO A STRUCTURAL MEMBER CAPABLE OF SUPPORTING 4 TIMES THE COMBINED WEIGHT OF ALL COMPONENTS PLUS THE EQUIPMENT BEING MOUNTED. IF IT CANNOT SUPPORT THIS WEIGHT, THE STRUCTURE MUST BE REINFORCED. THE MAXIMUM WEIGHT TO BE INSTALLED ON THE MOUNT IS 175 POUNDS (79.38 KG).

2. Securely anchor the plasma static mount to wall studs or supporting framework (see WARNING).
3. Make sure the flag is lowered before attempting to place the plasma on the mount.
4. With the aid of another person, lift the plasma display up to the mount, align the mounting buttons on the plasma with the teardrop slots in the mount, and set the plasma into place (see Figure 3).
5. Position (raise) the flag to secure the plasma. For added security, attach pad-lock through corresponding holes of bracket and latch.

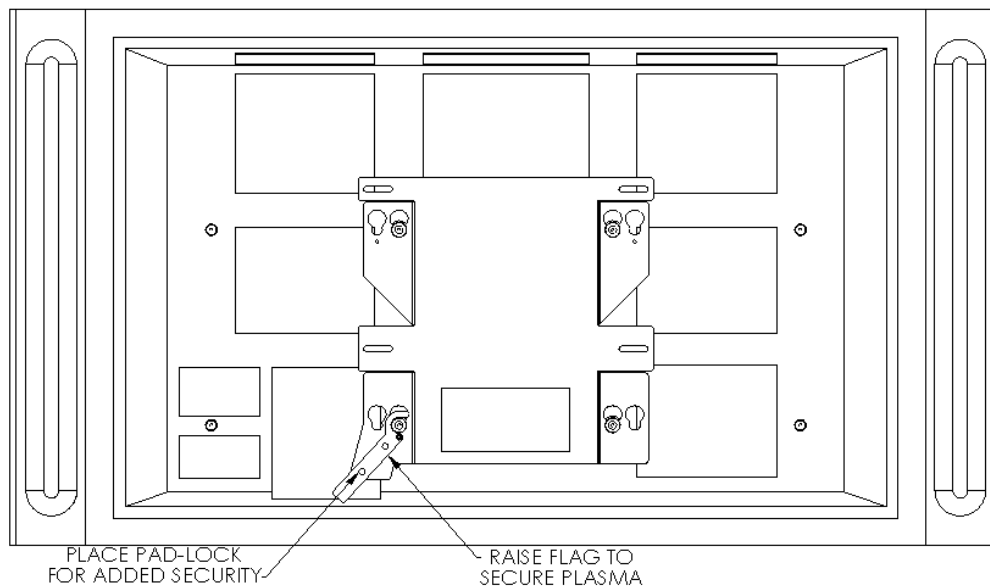


Figure 3



CHIEF MANUFACTURING INC.
1-800-582-6480 952-894-6280 FAX 952-894-6918
12800 HIGHWAY 13 SOUTH, SUITE 500
SAVAGE, MINNESOTA 55378 USA

8805-000028
2003 Chief Manufacturing
www.chiefmfg.com
01/04